

الترجمة الفنية: راجع الرسومات الأصلية والصفحات المرجعية لمعرفة الأبعاد.


صفحة المصدر 1

دليل تجميع MPS-S


- اختر ملف التعريف الصحيح وفقا لسمك البلاط.
- 2 قم بتطبيق المفصل ووضع مثبتات الملفات وفقا لذلك.
- 3 اضغط على الملف حتى يتم تثبيته على المفصل.
- ضع وصلة على الأماكن التي سيتم وضع السيراميك فيها.
- 5 ضع السيراميك وقم بمحاذاة الشكل الجانبي.
- 6 قطع بروفيلات 45 درجة للزوايا الخارجية.
- قم بمحاذاة الملامح في الزوايا الخارجية واضغط عليها في المفصل.
- 8 ضع السيراميك وقم بمحاذاة الشكل الجانبي.
- 9 قطع بروفيلات بزوايا 45 درجة للزوايا الداخلية.
- 10 قم بمحاذاة الملامح في الزوايا الداخلية واضغط عليها في المفصل.
- 11 ضع السيراميك وقم بمحاذاة الشكل الجانبي.

صفحة 1/1


الرسومات الأصلية والصفحات المرجعية

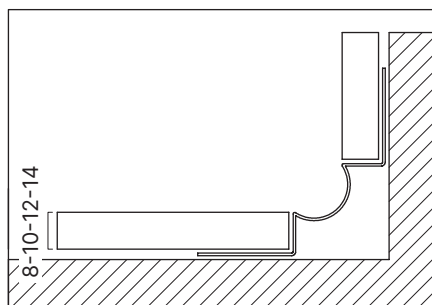


- 1** Pick the correct profile according to the tile thickness.

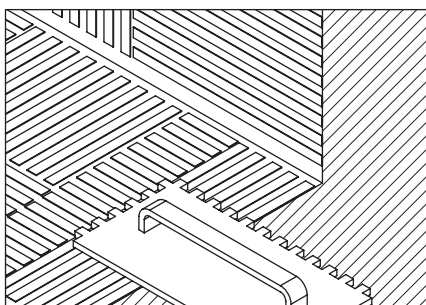


- 2** Apply joint and place the profiles anchor accordingly.

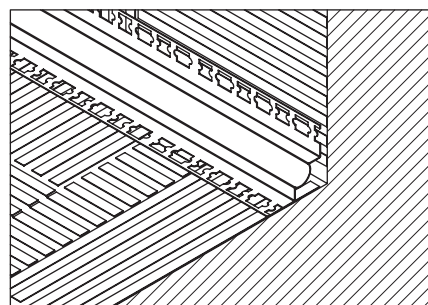


- 3** Press the profile until it is fixed to the joint.

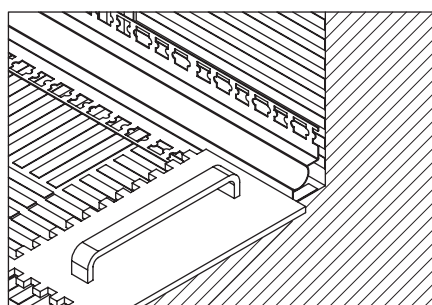


- 4** Apply joint to the places where the ceramics will be placed.

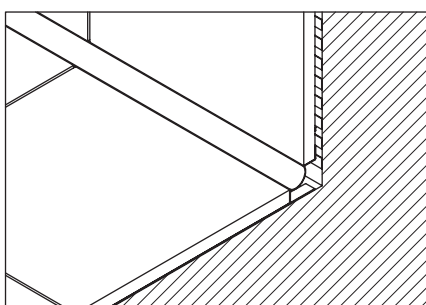


- 5** Place and align the ceramics to the profile.

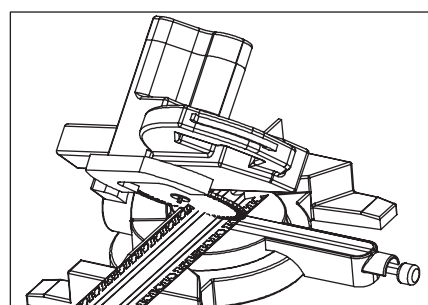


- 6** Cut profiles 45 degrees for external corners.

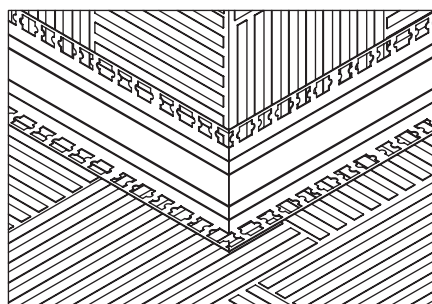


- 7** Align the profiles at the external corners and press them into the joint.

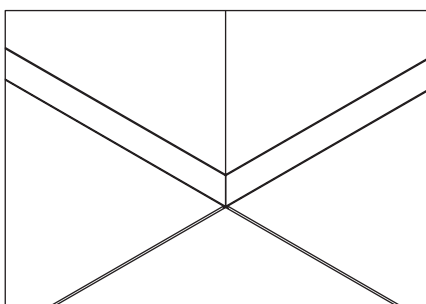


- 8** Place and align the ceramics to the profile.

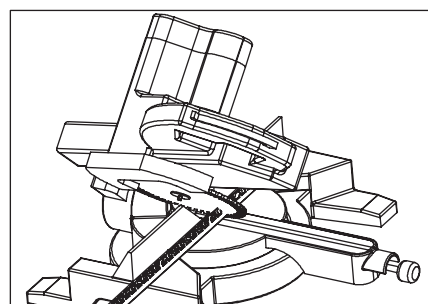

- 9** Cut profiles 45 degrees for internal corners.

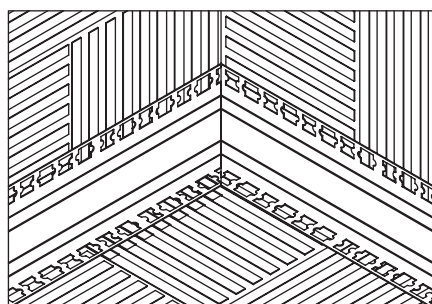

- 10** Align the profiles at the internal corners and press them into the joint.

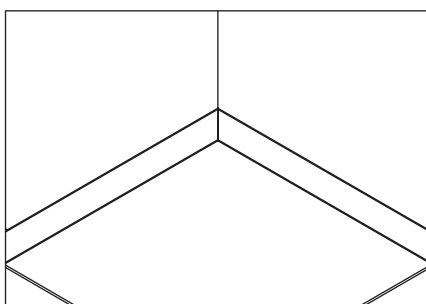

- 11** Place and align the ceramics to the profile.