

الترجمة الفنية: راجع الرسومات الأصلية والصفحات المرجعية لمعرفة الأبعاد.


صفحة المصدر 1

دليل تجميع MPS-TB


- اختر التشكيل الجانبي الصحيح وفقا لسمك الأرضية.
- 2 قم بتطبيق المفصل ووضع مثبتات الملفات وفقا لذلك.
- 3 اضغط على الملف حتى يتم تثبيته على المفصل.
- 4- قم بوضع الوصلة على الأماكن التي سيتم وضع الأرضيات فيها.
- 5 ضع الأرضية وقم بمحاذاة ملف التعريف.
- 6 قطع بروفيلات 45 درجة للزوايا الخارجية.
- قم بمحاذاة الملامح في الزوايا الخارجية واضغط عليها في المفصل.
- 8 ضع الأرضية وقم بمحاذاة ملف التعريف.
- 9 قطع بروفيلات بزوايا 45 درجة للزوايا الداخلية.
- 10 قم بمحاذاة الملامح في الزوايا الداخلية واضغط عليها في المفصل.
- 11 ضع الأرضية وقم بمحاذاة ملف التعريف.

صفحة 1/1


الرسومات الأصلية والصفحات المرجعية

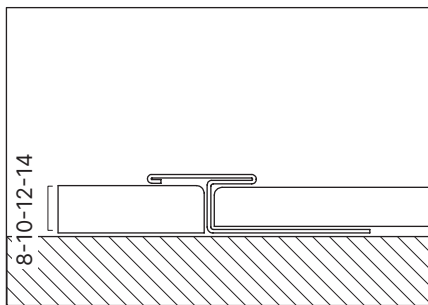


1 Pick the correct profile according to the flooring thickness.

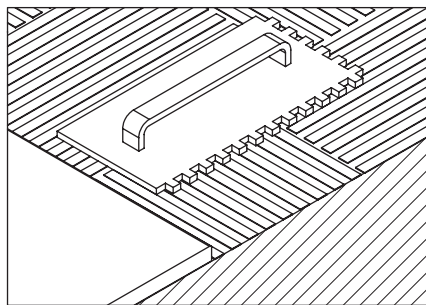


2 Apply joint and place the profiles anchor accordingly.

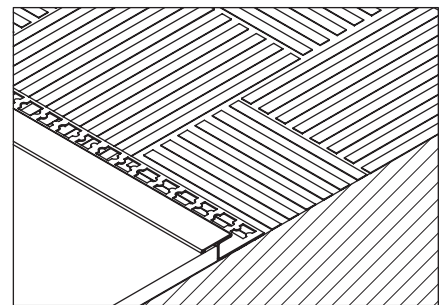


3 Press the profile until it is fixed to the joint.

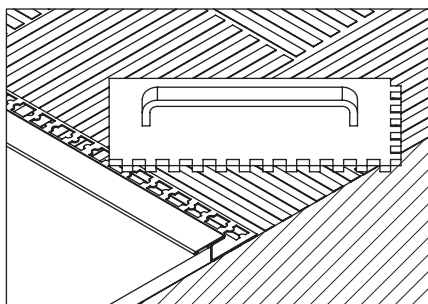


4 Apply joint to the places where the flooring will be placed.

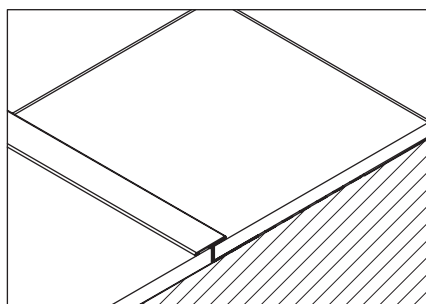


5 Place and align the flooring to the profile.

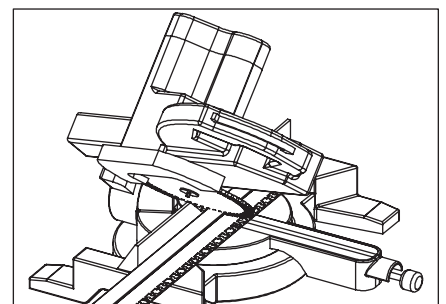


6 Cut profiles 45 degrees for external corners.

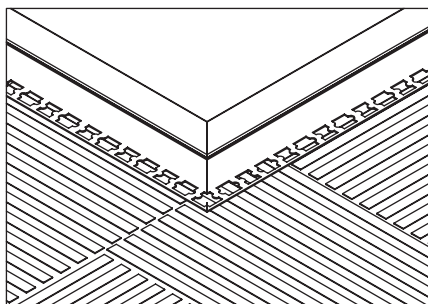


7 Align the profiles at the external corners and press them into the joint.

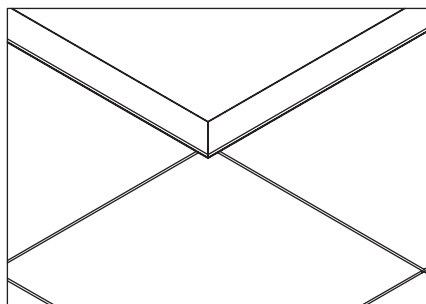


8 Place and align the flooring to the profile.

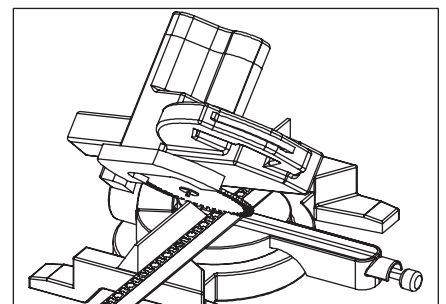

9 Cut profiles 45 degrees for internal corners.

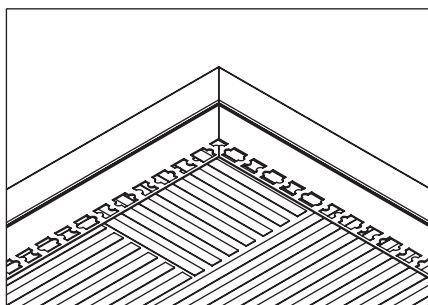

10 Align the profiles at the internal corners and press them into the joint.

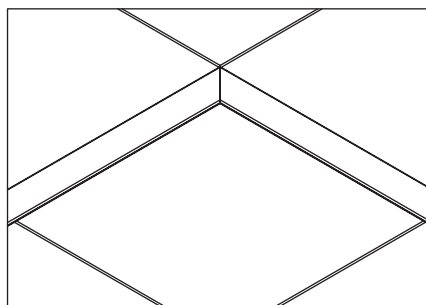

11 Place and align the flooring to the profile.