

الترجمة الفنية: راجع الرسومات الأصلية والصفحات المرجعية لمعرفة الأبعاد.

صفحة المصدر 1

دليل تجميع Revio

التطبيق مع لاصق

1 ضع السيليكون أو المفصل على الملف الشخصي.

2 ثبت الملف الشخصي على الأرض واضغط عليه.

3 ضع السجادة في الملف الشخصي.

التطبيق مع المسمار

11 قم بتثبيت الملف الشخصي بالمسامير.

2 ضع السجادة في الملف الشخصي.

Köşe Birleşimleri

1 قطع الملامح بزواوية 45 درجة للزوايا الداخلية.

2 قم بمحاذاة الملامح في الزوايا الداخلية ووضعها في المفصل.

3 ضع السجادة في الملف الشخصي.


4 قطع بروفيلات 45 درجة للزوايا الخارجية.

5 قم بمحاذاة الملامح في الزوايا الخارجية ووضعها في المفصل.


6 ضع السجادة في الملف الشخصي.

الرسومات الأصلية والصفحات المرجعية


Application with Adhesive

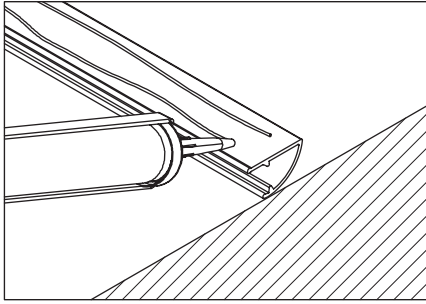

1 Apply silicone or joint to the profile.

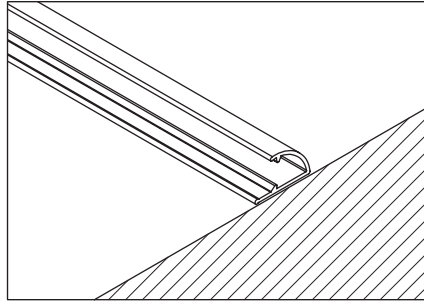


2 Fix the profile to the floor and press it.

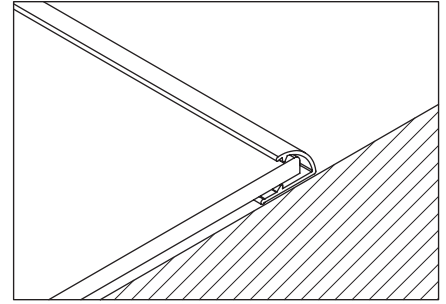


3 Place the carpet to the profile.

Application with Screw

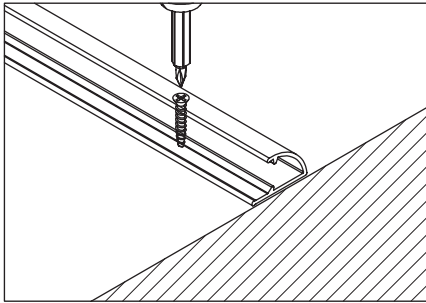


1 Fix the profile with screws.

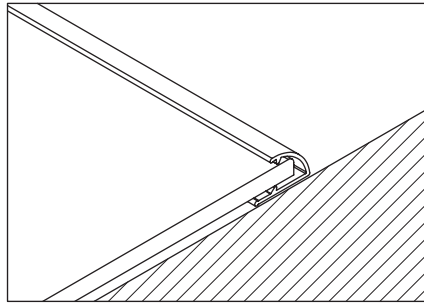


2 Place the carpet to the profile.


Köşe Birleşimleri

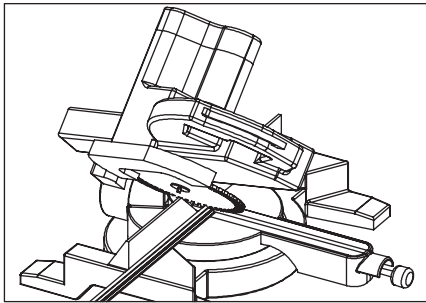


1 Cut profiles 45 degrees for internal corners.

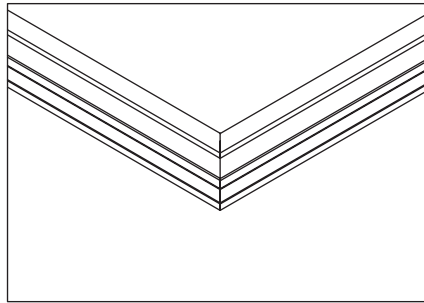


2 Align the profiles at the internal corners and place them into the joint.

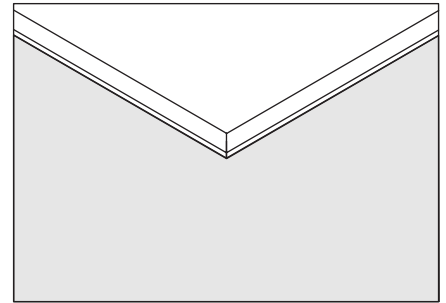


3 Place the carpet to the profile.

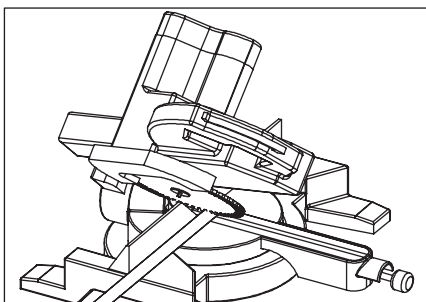

4 Cut profiles 45 degrees for external corners.

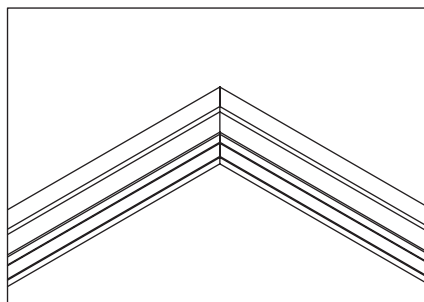

5 Align the profiles at the external corners and place them into the joint.

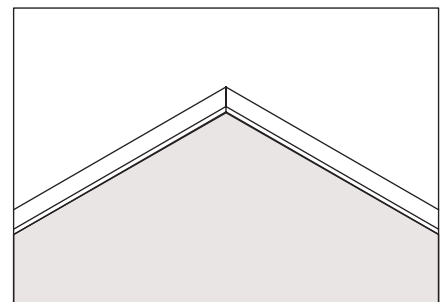

6 Place the carpet to the profile.