

الترجمة الفنية: راجع الرسومات الأصلية والصفحات المرجعية لمعرفة الأبعاد.


صفحة المصدر 1

دليل تجميع Round-Fix

- 1 اختر الشكل الصحيح وفقا لسمك البلاط.
- 2 قم بتطبيق المفصل ووضع مثبتات الملفات وفقا لذلك.
- 3 اضغط على الملف حتى يتم تثبيته على المفصل.
- 4- قم بوضع الوصلة على الأماكن التي سيتم وضع السيراميك فيها.
- 5 ضع البلاط على الملف الجانبي، مع التأكد من أن حوافه تتناسب مع الملف الشخصي وتكون مستوية.
- 6 قطع مقطعين بزاوية 45 درجة لمفاصل الزوايا.
- 7 قم بمحاذاة الملامح في الزوايا الداخلية واضغط عليها في المفصل. 10
- 8 ضع البلاط على الملف الجانبي، مع التأكد من أن حوافه تناسب الشكل الجانبي ومتساوية.

صفحة 1/1


الرسومات الأصلية والصفحات المرجعية

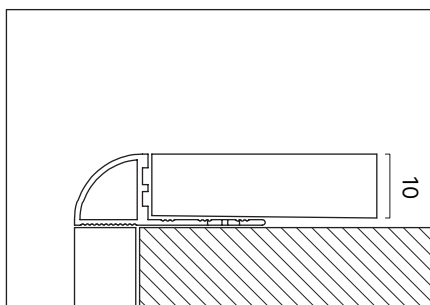


1 Pick the correct profile according to the tile thickness.




2 Apply joint and place the profiles anchor accordingly.

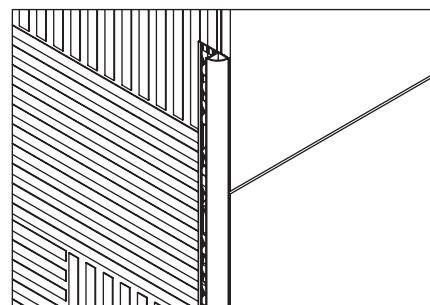


3 Press the profile until it is fixed to the joint.

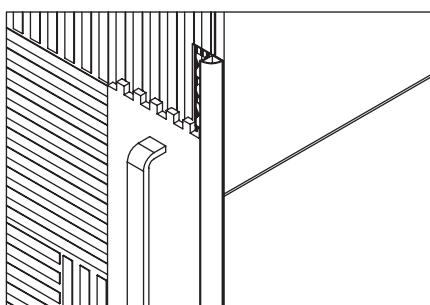


4 Apply joint to the places where the ceramics will be placed.

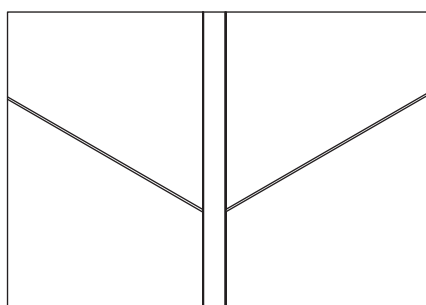


5 Place the tiles on the profile, making sure that their edges fit the profile and are flush.

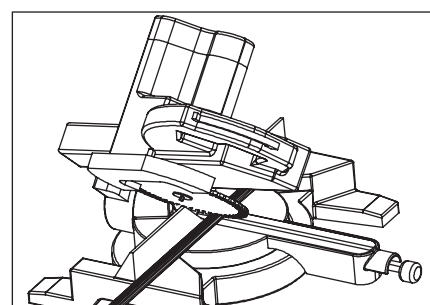

6 Cut two profiles at 45 degrees for corner joints.

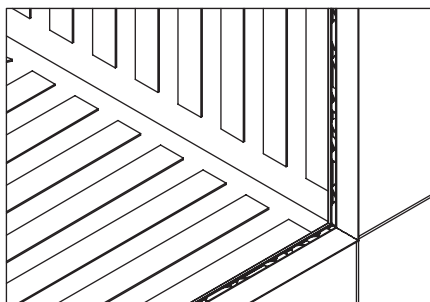

7 Align the profiles at the internal corners and press them into the joint.

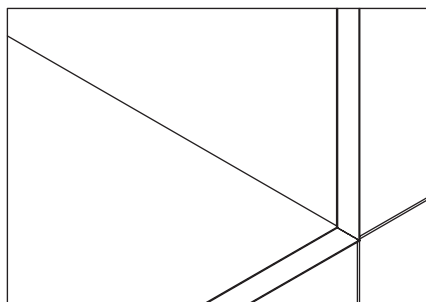

8 Place the tiles on the profile, making sure that their edges fit the profile and are flush.