

الترجمة الفنية: راجع الرسومات الأصلية والصفحات المرجعية لمعرفة الأبعاد.


صفحة المصدر 1

دليل تجميع Visio


- 1 اختر الشكل الصحيح وفقا لسمك الأرضية.
- 2 قم بتطبيق المفصل ووضع مثبتات الملفات وفقا لذلك.
- 3 اضغط على الملف حتى يتم تثبيته على المفصل.
- 4 ضع السجادة في الملف الشخصي.
- 5 قطع بروفيلات 45 درجة للزوايا الخارجية.
- 6 قم بمحاذاة الملامح في الزوايا الخارجية ووضعها في المفصل.
- 7 ضع السجادة في الملف الشخصي.
- 8 قطع بروفيلات بزوايا 45 درجة للزوايا الداخلية.
- 9 قم بمحاذاة الملامح في الزوايا الداخلية ووضعها في المفصل.
- 10 ضع السجادة في الملف الشخصي. 6 8

صفحة 1/1


الرسومات الأصلية والصفحات المرجعية

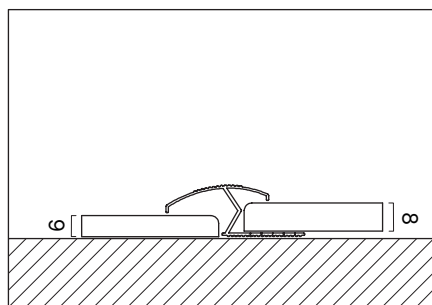


1 Pick the correct profile according to the flooring thickness.

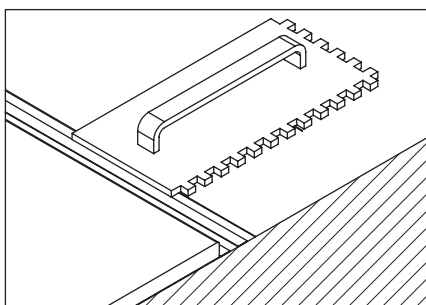


2 Apply joint and place the profiles anchor accordingly.

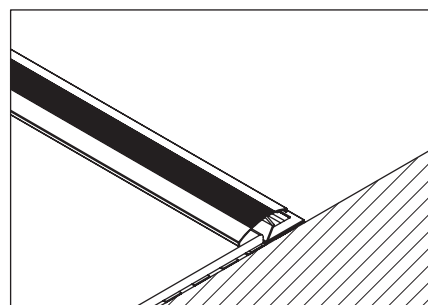


3 Press the profile until it is fixed to the joint.

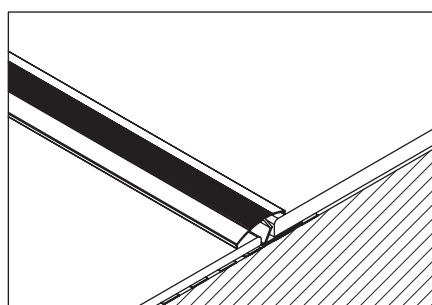


4 Place the carpet to the profile.

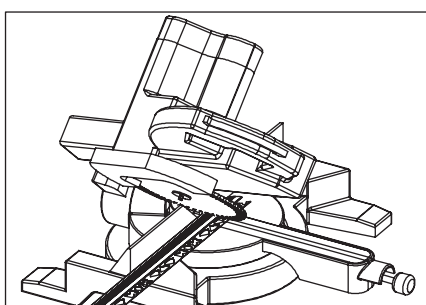


5 Cut profiles 45 degrees for external corners.

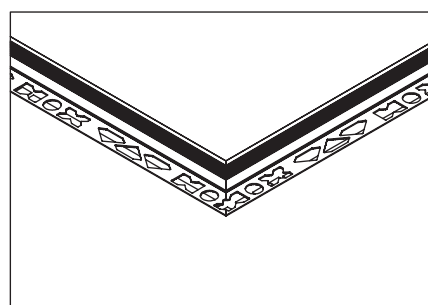


6 Align the profiles at the external corners and place them into the joint.

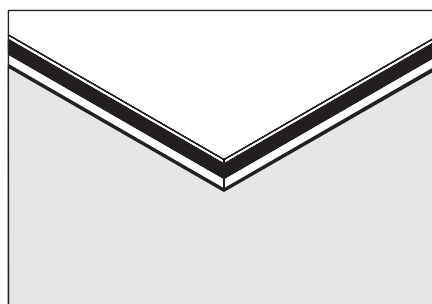


7 Place the carpet to the profile.

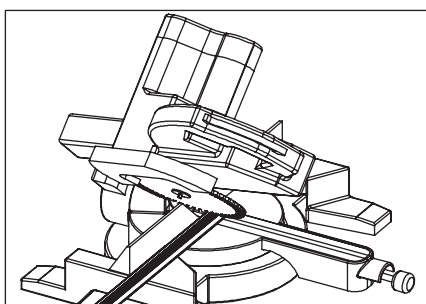

8 Cut profiles 45 degrees for internal corners.

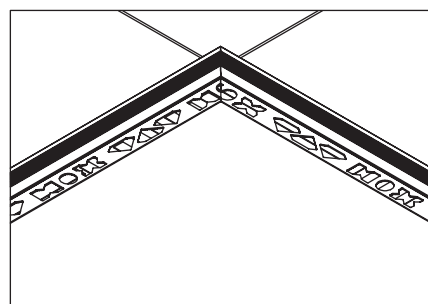

9 Align the profiles at the internal corners and place them into the joint.

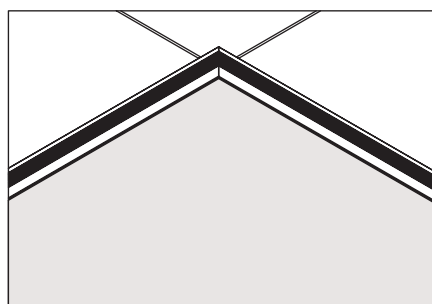

10 Place the carpet to the profile.