

الترجمة الفنية: راجع الرسومات الأصلية والصفحات المرجعية لمعرفة الأبعاد.

صفحة المصدر 1

دليل التجميع المرغوب من MOX

- 1 يمكن إجراء التثبيت باستخدام مسامير أو غراء السيليكون.
يجب تحديد التطبيق الصحيح بعناية وفقا لمادة الجدار.
- 2 ضع المسامير الصحيحة وفقا لمادة الجدار في الفتحات المحفورة.
- 3 قم بتثبيت أجزاء التثبيت الجداري في الأماكن التي يتم حفرها على مسافة 50 سم.
- 4 أدخل شرائط LED في الفتحات الموجودة في الجزء العلوي والسفلي من الملف الشخصي.
- 5 قم بتوصيل شرائط LED ومزود الطاقة ومزود الطاقة بالتيار الكهربائي.
يمكن حمل الكابلات داخل الملفات الشخصية للاتصالات متعددة المحركات.
استشر كهربائيين محليين للحصول على نتائج دقيقة.
- 6 اضغط على الناشر على اللوحة الخلفية حتى يستقر في مكانه.
- 7 ضع مادة لاصقة على الزوايا الداخلية لتثبيتها في مكانها.
- 8 ضع مادة لاصقة على الزوايا الخارجية لتثبيتها في مكانها.
- 9 ضع مادة لاصقة على الأجزاء النهائية لتثبيتها في مكانها.

الصفحة 1/2

صفحة المصدر 2

قطع وتمديد شريط LED

للتشغيل الصحيح للموقع المشار إليه في

شريط LED، مقطوع فقط من الرسم التخطيطي الإلكتروني.

لتجنب قطع الاتصال ب في الموقع المشار إليه

بين شريط LED، لحام د فقط في رسم العينة.

مخطط الأسلاك لشريط LED

وحدة تحكم موكس آر جي بي

RG خافت واي فاي


غيغابايت مير

مزود طاقة / تحويل


مير

صفحة 2/2


الرسومات الأصلية والصفحات المرجعية

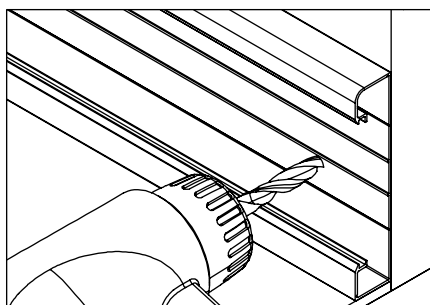


- 1** Installation can be done with screws or silicone glue. The correct application must be carefully identified according to the wall material.

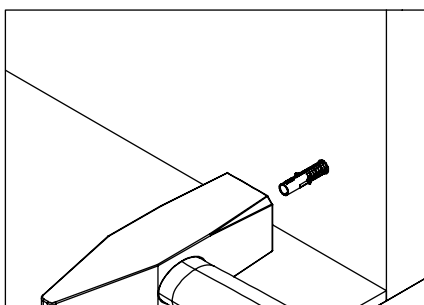


- 2** Place the correct dowels according to the wall material into the drilled holes.

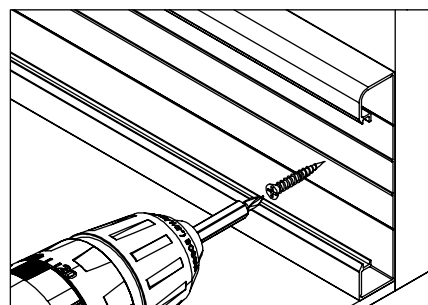


- 3** Screw the wall fixation parts to the places that are drilled at 50cm intervals.

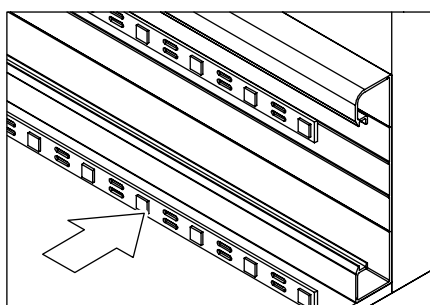


- 4** Insert the LED strips into the slots at the top and bottom of the profile.

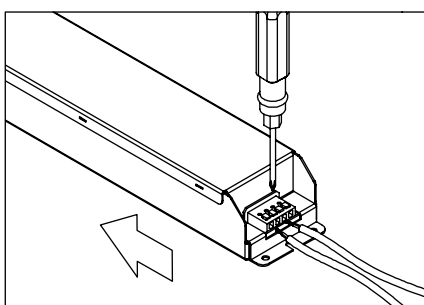


- 5** Connect the LED strips and the driver and the driver to the mains. Cables can be carried within the profiles for multi-drive connections. Consult local electricians to obtain accurate results.

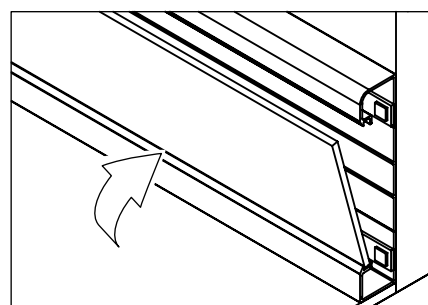


- 6** Press the diffuser against the back plate until it clicks into place.

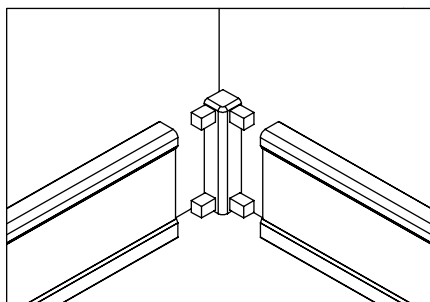

- 7** Apply adhesive to the internal corners to secure them in position.

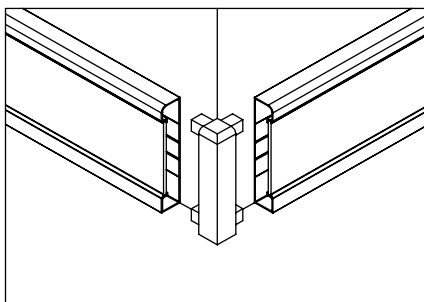


- 8** Apply adhesive to the external corners to secure them in position.

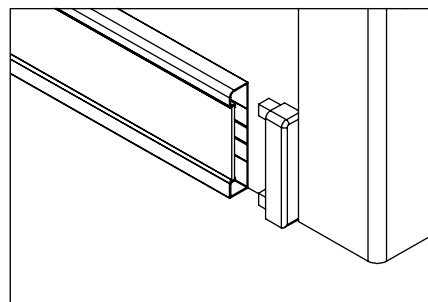

- 9** Apply adhesive to the ending parts to secure them in position.

LED STRIP CUTTING & EXTENDING

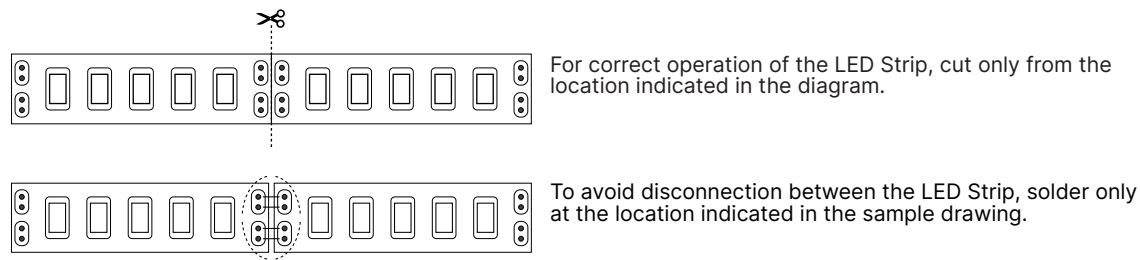

LED STRIP WIRING DIAGRAM

