

MOX Systems - texniki sənədlər

assembly-manual-mps-e-en.pdf

Texniki tərcümə: ölçülər üçün orijinal çertyojlara və istinad səhifələrinə müraciət edin.


Mənbə səhifəsi 1

Mps-E YÜKLƏMƏ TƏLİMATI


- 1 Döşəmə qalınlığına görə düzgün profili seçin.
 - 2 Birgə tətbiq edin və profillərin ankerini müvafiq olaraq yerləşdirin.
 - 3 Profili birləşməyə bərkidilənə qədər basın.
 - 4 Döşəmənin qoyulacağı yerlərə birləşmə tətbiq edin.
 - 5 Döşəməni profilə qoyun və düzəldin.
 - 6 Xarici küncələr üçün profilləri 45 dərəcə kəsin.
- Profilləri xarici küncələrdə düzəldin və birləşməyə basdırın.
- 8 Döşəməni profilə qoyun və düzəldin.
 - 9 Daxili küncələr üçün profilləri 45 dərəcə kəsin.
 - 10 Profilləri daxili küncələrdə hizalayın və birləşməyə sıxın.
 - 11 Döşəməni profilə qoyun və düzəldin.

Səhifə 1/1


Orijinal rəsmlər və istinad səhifələri

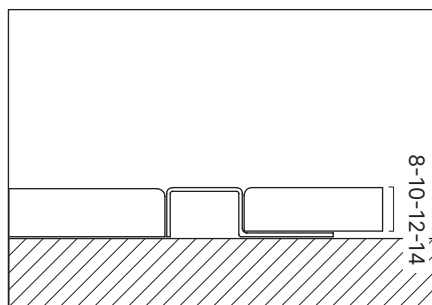


- 1 Pick the correct profile according to the flooring thickness.

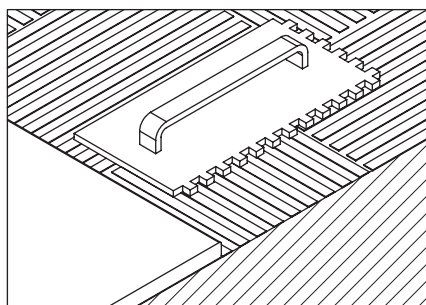


- 2 Apply joint and place the profiles anchor accordingly.

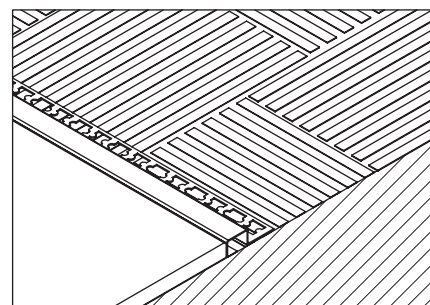


- 3 Press the profile until it is fixed to the joint.

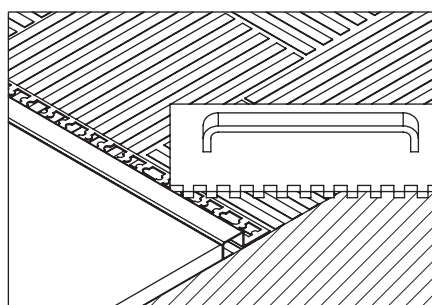


- 4 Apply joint to the places where the flooring will be placed.

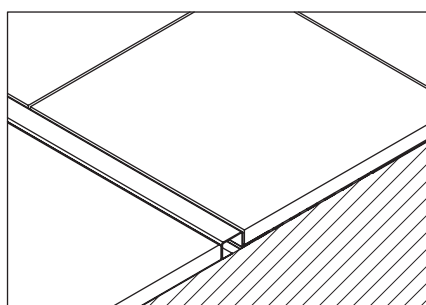


- 5 Place and align the flooring to the profile.

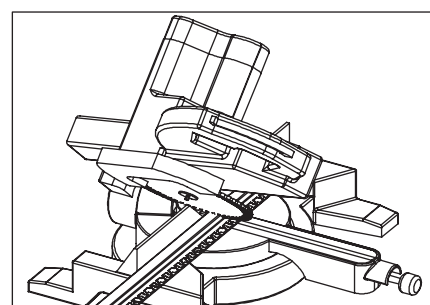


- 6 Cut profiles 45 degrees for external corners.

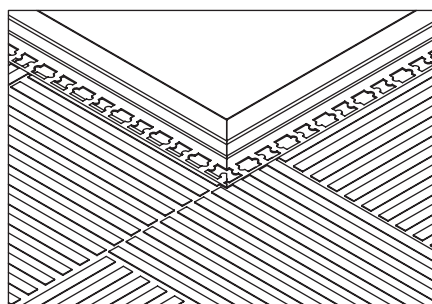


- 7 Align the profiles at the external corners and press them into the joint.

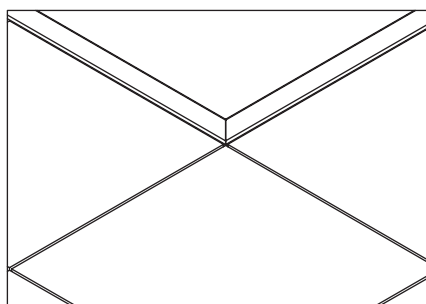


- 8 Place and align the flooring to the profile.

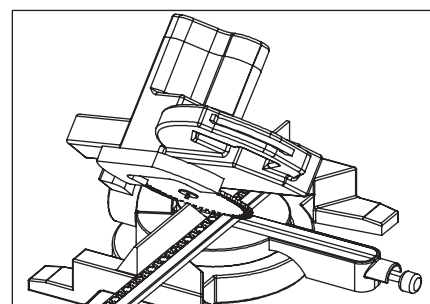

- 9 Cut profiles 45 degrees for internal corners.

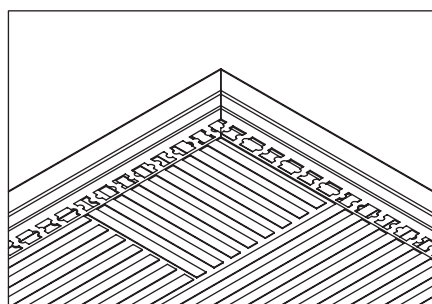

- 10 Align the profiles at the internal corners and press them into the joint.

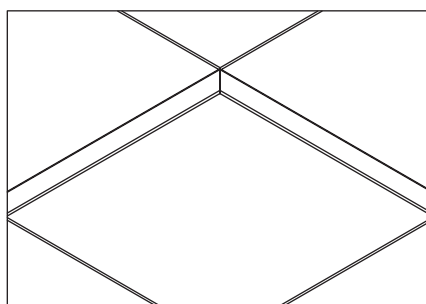

- 11 Place and align the flooring to the profile.