

MOX Systems - texniki sənədlər

assembly-manual-mps-s-en.pdf

Texniki tərcümə: ölçülər üçün orijinal çertyojlara və istinad səhifələrinə müraciət edin.

Mənbə səhifəsi 1

Mps-S YÜKLƏMƏ TƏLİMATI

Kafel qalınlığına görə düzgün profili seçin.

2 Birgə tətbiq edin və profillərin ankerini müvafiq olaraq yerləşdirin.

3 Profili birləşməyə bərkidilənə qədər basın.

Keramikanın yerləşdiriləcəyi yerlərə birləşmə tətbiq edin.

5 Keramikanı profilə yerləşdirin və hizalayın.

6 Xarici küncələr üçün profilləri 45 dərəcə kəsin.

Profilləri xarici küncələrdə düzəldin və birləşməyə basdırın.

8 Keramikanı profilə yerləşdirin və düzəldin.


9 Daxili küncələr üçün profilləri 45 dərəcə kəsin.

10 Profilləri daxili küncələrdə hizalayın və birləşməyə sıxın.


11 Keramikanı profilə yerləşdirin və düzəldin.

Səhifə 1/1


Orijinal rəsmlər və istinad səhifələri

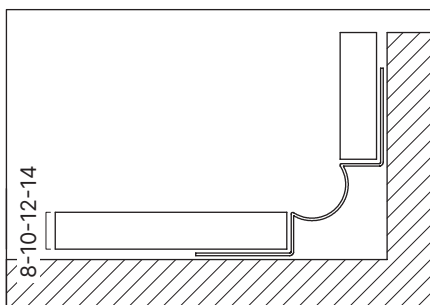


- 1 Pick the correct profile according to the tile thickness.

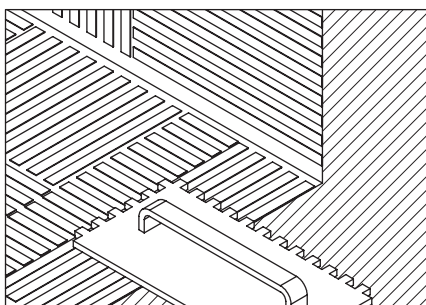


- 2 Apply joint and place the profiles anchor accordingly.

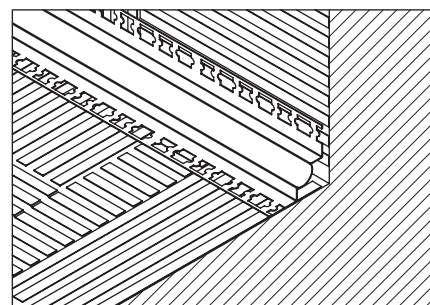


- 3 Press the profile until it is fixed to the joint.

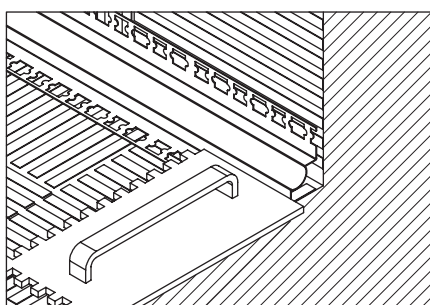


- 4 Apply joint to the places where the ceramics will be placed.

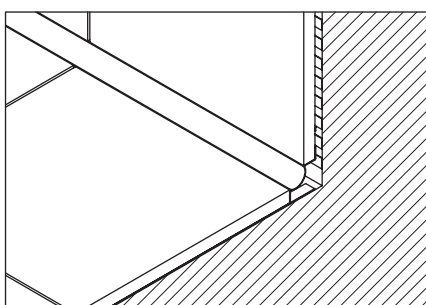


- 5 Place and align the ceramics to the profile.

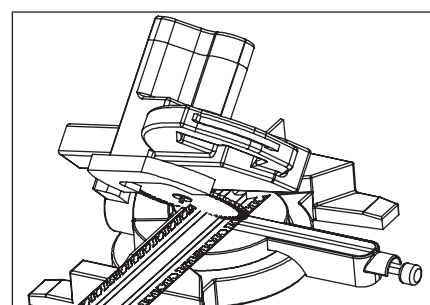


- 6 Cut profiles 45 degrees for external corners.

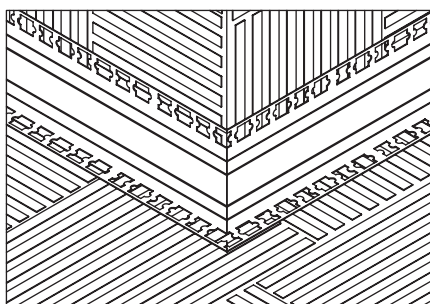


- 7 Align the profiles at the external corners and press them into the joint.

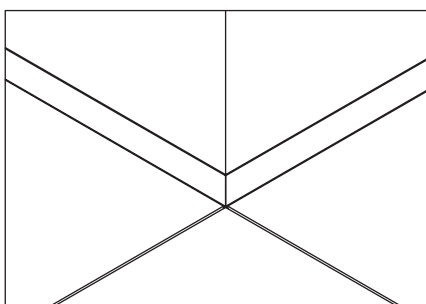


- 8 Place and align the ceramics to the profile.

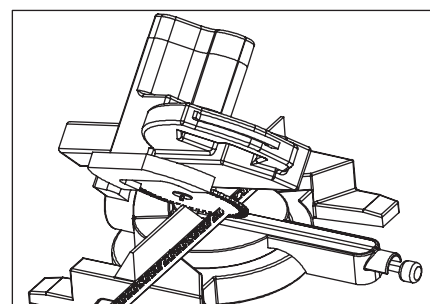

- 9 Cut profiles 45 degrees for internal corners.

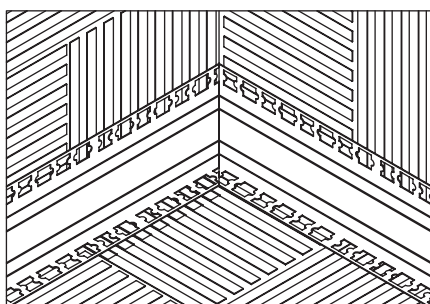

- 10 Align the profiles at the internal corners and press them into the joint.

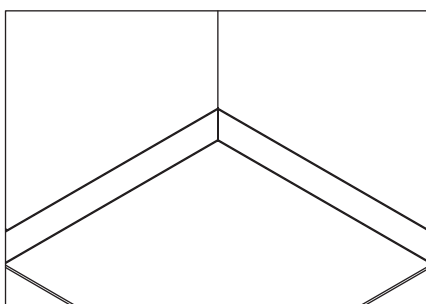

- 11 Place and align the ceramics to the profile.