

MOX Systems - texniki sənədlər

assembly-manual-mps-tb-en.pdf

Texniki tərcümə: ölçülər üçün orijinal çertyojlara və istinad səhifələrinə müraciət edin.

Mənbə səhifəsi 1

Mps-Tb YÜKLƏMƏ TƏLİMATI

Döşəmə qalınlığına görə düzgün profil seçin.

2 Birgə tətbiq edin və profillərin ankerini müvafiq olaraq yerləşdirin.

3 Profili birləşməyə bərkidilənə qədər basın.

4 Döşəmənin qoyulacağı yerlərə birləşmə tətbiq edin.

5 Döşəməni profilə qoyun və düzəldin.

6 Xarici küncələr üçün profilləri 45 dərəcə kəsin.

Profilləri xarici küncələrdə düzəldin və birləşməyə basdırın.

8 Döşəməni profilə qoyun və düzəldin.


9 Daxili küncələr üçün profilləri 45 dərəcə kəsin.

10 Profilləri daxili küncələrdə hizalayın və birləşməyə sıxın.


11 Döşəməni profilə qoyun və düzəldin.

Səhifə 1/1


Orijinal rəsmlər və istinad səhifələri

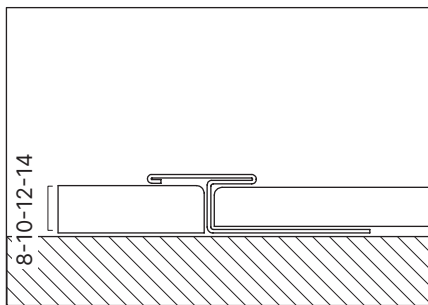


1 Pick the correct profile according to the flooring thickness.

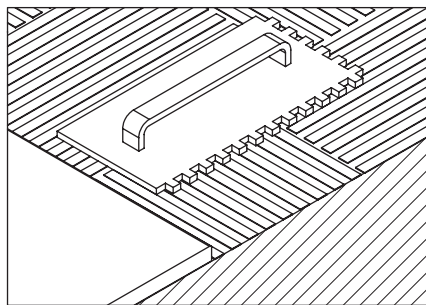


2 Apply joint and place the profiles anchor accordingly.

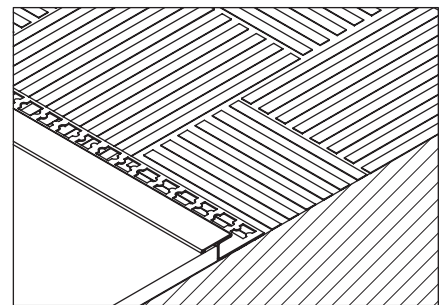


3 Press the profile until it is fixed to the joint.

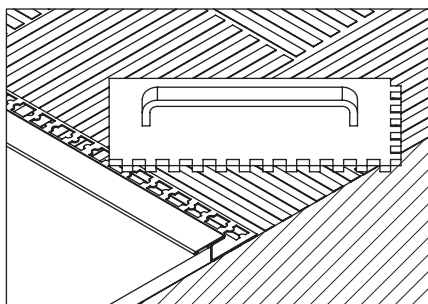


4 Apply joint to the places where the flooring will be placed.

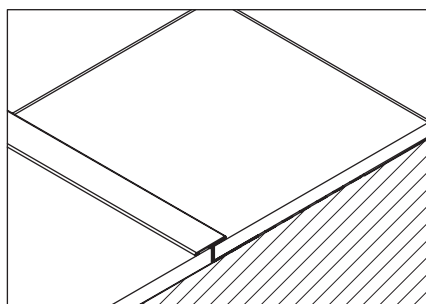


5 Place and align the flooring to the profile.

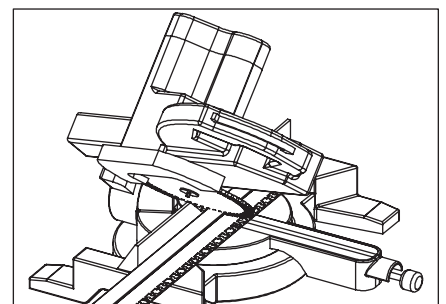


6 Cut profiles 45 degrees for external corners.

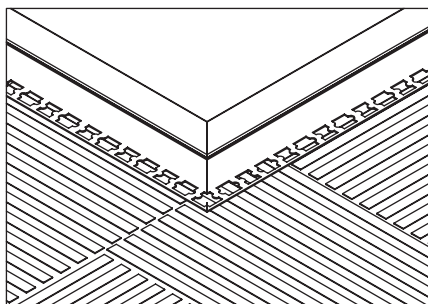


7 Align the profiles at the external corners and press them into the joint.

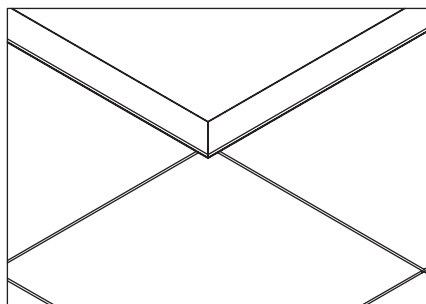


8 Place and align the flooring to the profile.

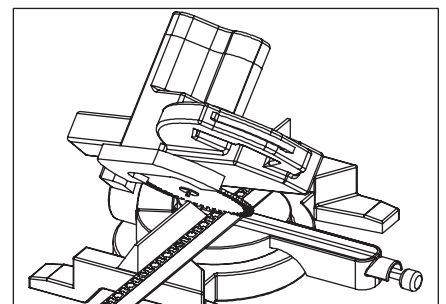

9 Cut profiles 45 degrees for internal corners.

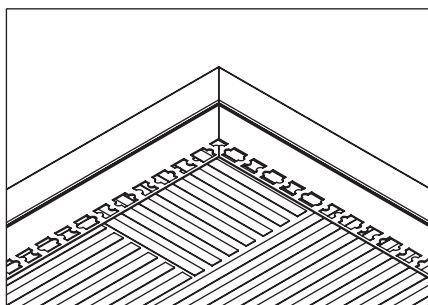

10 Align the profiles at the internal corners and press them into the joint.

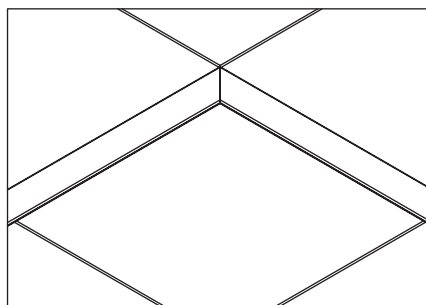

11 Place and align the flooring to the profile.