

MOX Systems - texniki sənədlər

assembly-manual-revio-en.pdf

Texniki tərcümə: ölçülər üçün orijinal çertyojlara və istinad səhifələrinə müraciət edin.

Mənbə səhifəsi 1

Revio YAPMA TƏLİMƏTİ

Yapışqan ilə tətbiq

- 1 Profilə silikon və ya birləşmə tətbiq edin.
- 2 Profili döşəməyə bərkidin və üzərinə basın.
- 3 Xalçanı profilə yerləşdirin.

Vida ilə tətbiq


- 11 Profili vintlər ilə düzəldin.
- 2 Xalçanı profilə qoyun.

Köşe Birleşimleri


- 1 Daxili küncələr üçün profilləri 45 dərəcə kəsin.
- 2 Profilləri daxili küncələrdə düzəldin və birləşməyə yerləşdirin.
- 3 Xalçanı profilə yerləşdirin.
- 4 Xarici küncələr üçün profilləri 45 dərəcə kəsin.
- 5 Profilləri xarici küncələrdə düzəldin və birləşməyə yerləşdirin.
- 6 Xalçanı profilə qoyun.

Orijinal rəsmlər və istinad səhifələri


Application with Adhesive

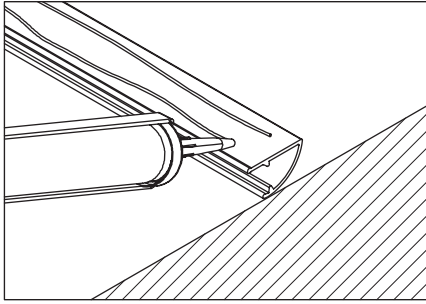

1 Apply silicone or joint to the profile.

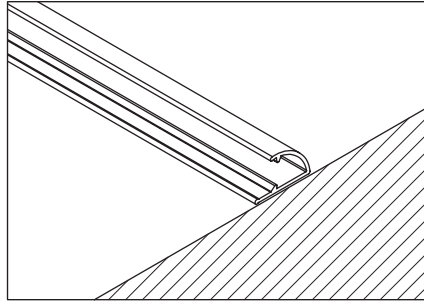


2 Fix the profile to the floor and press it.

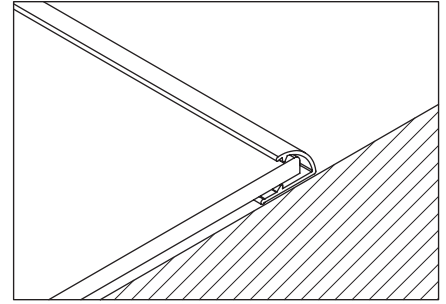


3 Place the carpet to the profile.

Application with Screw

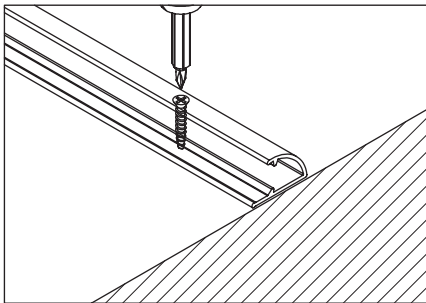


1 Fix the profile with screws.

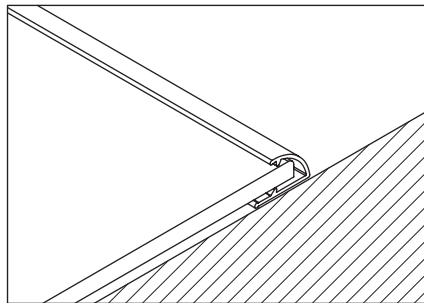


2 Place the carpet to the profile.


Köşe Birleşimleri

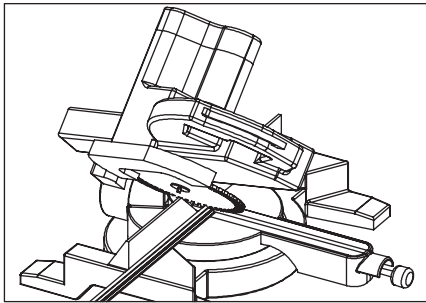


1 Cut profiles 45 degrees for internal corners.

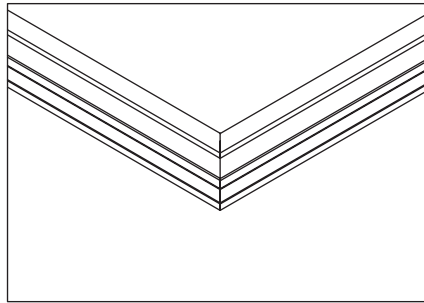


2 Align the profiles at the internal corners and place them into the joint.

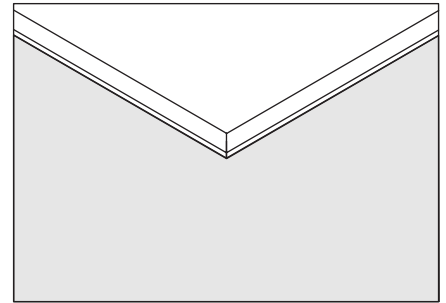


3 Place the carpet to the profile.

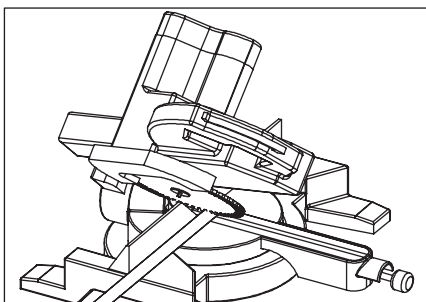

4 Cut profiles 45 degrees for external corners.

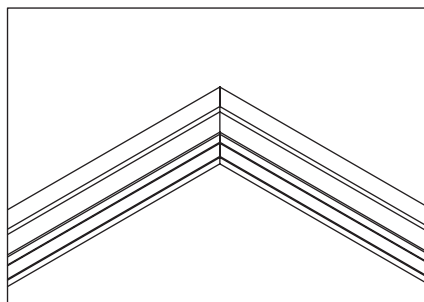

5 Align the profiles at the external corners and place them into the joint.

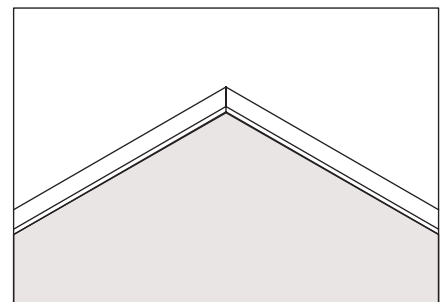

6 Place the carpet to the profile.