

MOX Systems - texniki sənədlər

assembly-manual-visio-en.pdf

Texniki tərcümə: ölçülər üçün orijinal çertyojlara və istinad səhifələrinə müraciət edin.


Mənbə səhifəsi 1

Visio YAPMA TƏLİMƏTİ


- 1 Döşəmə qalınlığına görə düzgün profili seçin.
- 2 Birgə tətbiq edin və profillərin ankerini müvafiq olaraq yerləşdirin.
- 3 Profili birləşməyə bərkidilənə qədər basın.
- 4 Xalçanı profilə yerləşdirin.
- 5 Xarici küncələr üçün profilləri 45 dərəcə kəsin.
- 6 Profilləri xarici küncələrdə düzəldin və birləşməyə yerləşdirin.
- 7 Xalçanı profilə qoyun.
- 8 Daxili küncələr üçün profilləri 45 dərəcə kəsin.
- 9 Profilləri daxili küncələrdə düzəldin və birləşməyə yerləşdirin.
- 10 Xalçanı profilə yerləşdirin. 6 8

Səhifə 1/1


Orijinal rəsmlər və istinad səhifələri

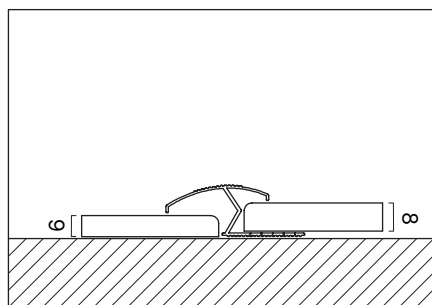


1 Pick the correct profile according to the flooring thickness.

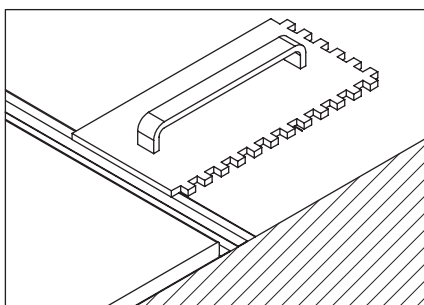


2 Apply joint and place the profiles anchor accordingly.

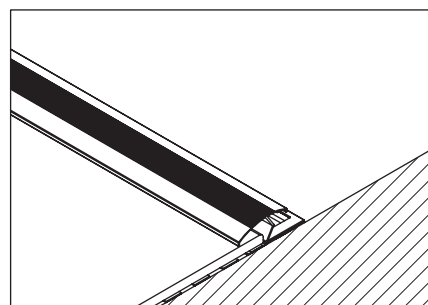


3 Press the profile until it is fixed to the joint.

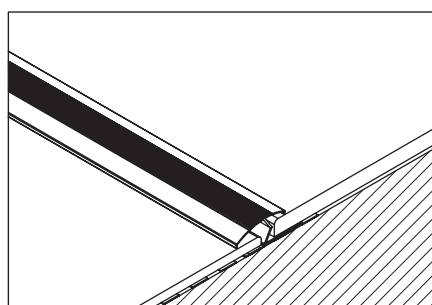


4 Place the carpet to the profile.

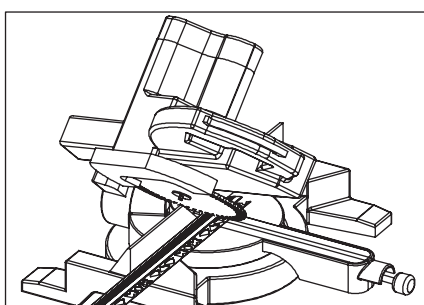


5 Cut profiles 45 degrees for external corners.

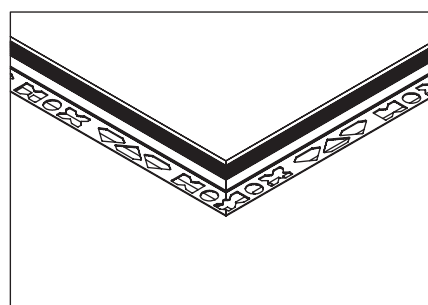


6 Align the profiles at the external corners and place them into the joint.

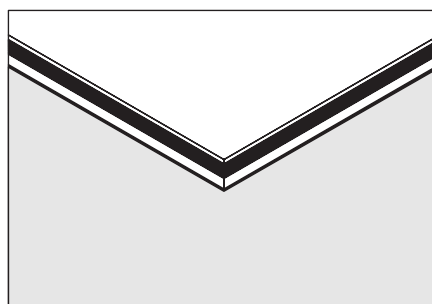


7 Place the carpet to the profile.

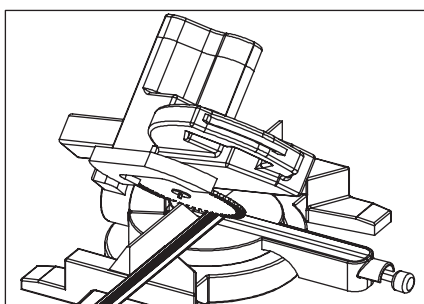

8 Cut profiles 45 degrees for internal corners.

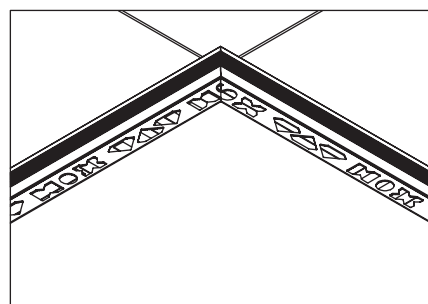

9 Align the profiles at the internal corners and place them into the joint.

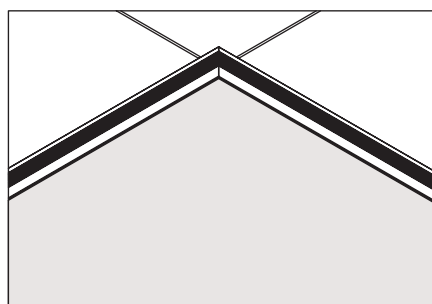

10 Place the carpet to the profile.