

MOX Systems - тэхнічная дакументацыя

assembly-manual-revio-en.pdf

Тэхнічны пераклад: памеры глядзіце на арыгінальных чарцяжах і даведачных старонках.

Зыходная старонка 1

КІРАЎНІЦТВА ПА ЗБОРКІ Revio

Аплікацыя з дапамогай клею

- 1 Вырабіце на профіль сілікон або стык.
- 2 Зафіксуйце профіль на падлозе і прыцісніце яго.
- 3 Размесціце ковроды на профілі.

Прыкладанне з вінтом


- 11 Замацуеце профіль шрубамі.
- 2 Размесціце ковроды на профілі.

Köşe Birleşimleri


- 1 Для ўнутраных кутаў адрэжце профілі пад вуглом 45 градусаў.
- 2 Выраўняйце профілі па ўнутраных кутах і змесціце іх у стык.
- 3 Размесціце ковроды на профілі.
- 4 Зрэжце профілі пад 45 градусаў для вонкавых кутаў.
- 5 Выраўняйце профілі па знешніх кутах і змесціце іх у стык.
- 6 Размесціце ковроды на профілі.

Арыгінальныя малюнкi і даведачныя старонкі


Application with Adhesive

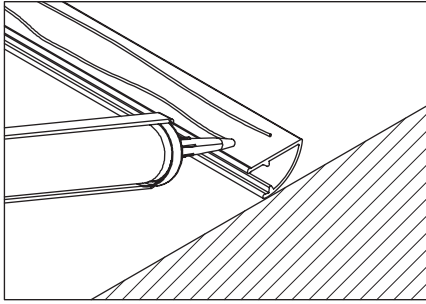

1 Apply silicone or joint to the profile.

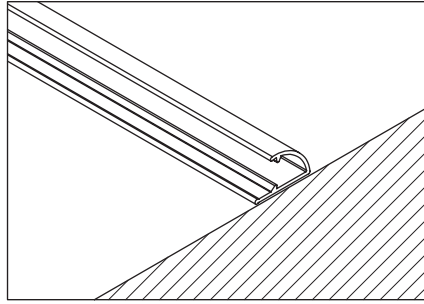


2 Fix the profile to the floor and press it.

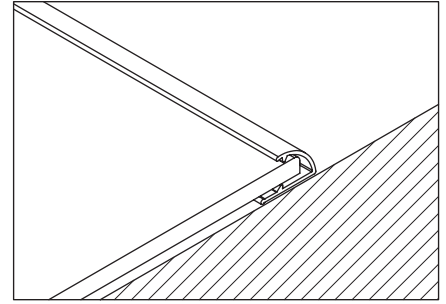


3 Place the carpet to the profile.

Application with Screw

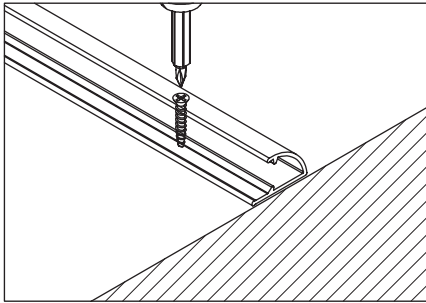


1 Fix the profile with screws.

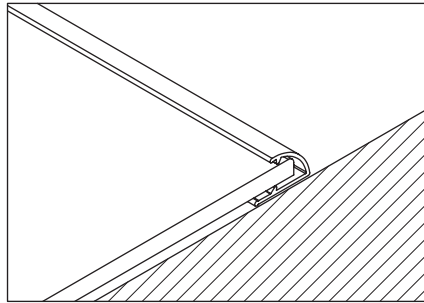


2 Place the carpet to the profile.


Köşe Birleşimleri

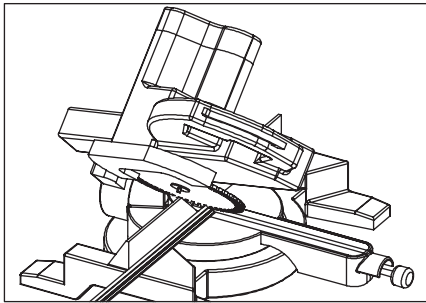


1 Cut profiles 45 degrees for internal corners.

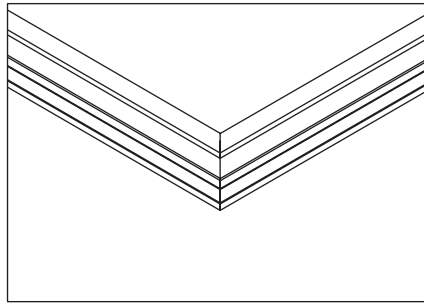


2 Align the profiles at the internal corners and place them into the joint.

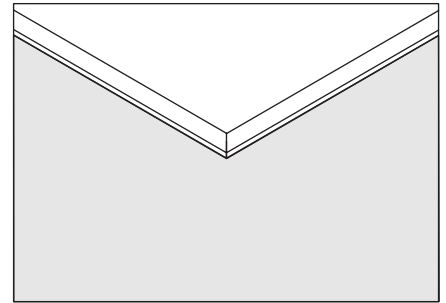


3 Place the carpet to the profile.

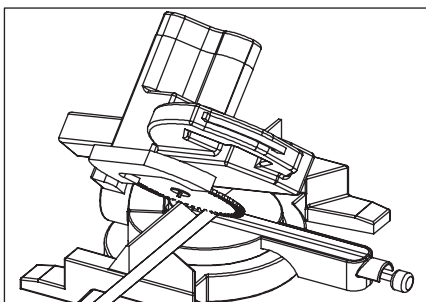

4 Cut profiles 45 degrees for external corners.

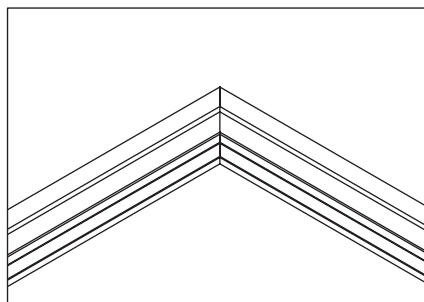

5 Align the profiles at the external corners and place them into the joint.

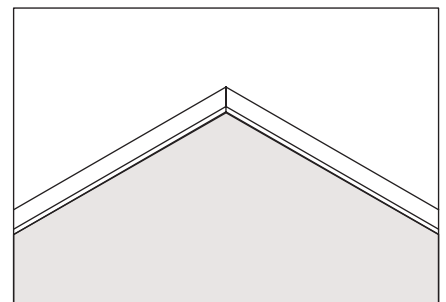

6 Place the carpet to the profile.