

MOX Systems - тэхнічная дакументацыя

assembly-manual-square-fix-en.pdf

Тэхнічны пераклад: памеры глядзіце на арыгінальных чарцяжах і даведачных старонках.


Зыходная старонка 1

КІРАЎНІЦТВА ПА ЗБОРКЕ Square-Fix


- 1 Падбярыце правільны профіль у залежнасці ад таўшчыні пліткі.
- 2 Выканайце стык і адпаведна размесціце анкеры профіляў.
- 3 Прыцісніце профіль, пакуль ён не зафіксуецца ў стыку.
- 4 Прамажце швом месцы, дзе будзе класціся кераміка.
- 5 Пакладзеце пліткі на профіль, пераканаўшыся, што іх краю падыходзяць да профілю і знаходзяцца на адным узроўні.
- 6 Разрэжце два профілю пад 45 градусаў для кутніх злучэнняў.
- 7 Выраўняйце профілі па кутах і ўцісніце іх у стык. 10
- 8 Размесціце плітку на профілі, пераканаўшыся, што яе краю падыходзяць да профілю і знаходзяцца на адным узроўні.

Старонка 1/1


Арыгінальныя малюнкi і даведачныя старонкі

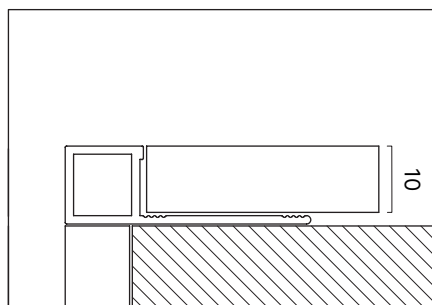


1 Pick the correct profile according to the tile thickness.

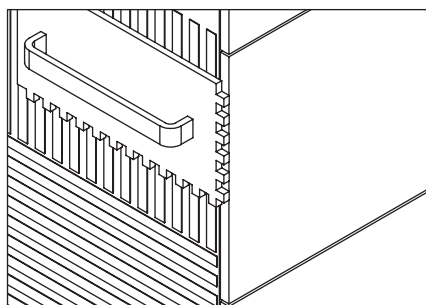


2 Apply joint and place the profiles anchor accordingly.

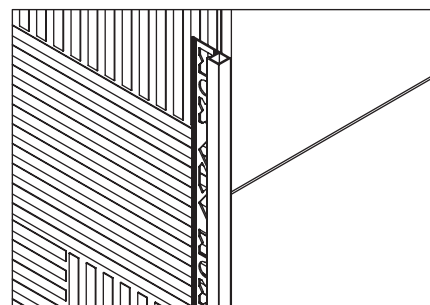


3 Press the profile until it is fixed to the joint.

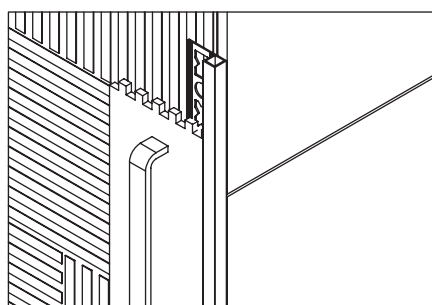


4 Apply joint to the places where the ceramics will be placed.

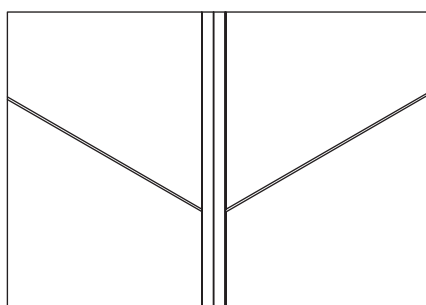


5 Place the tiles on the profile, making sure that their edges fit the profile and are flush.

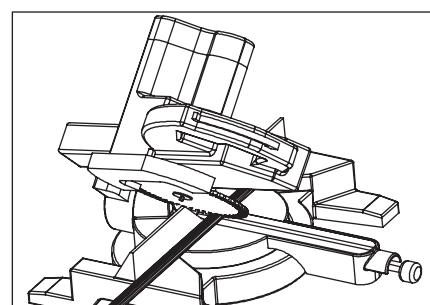

6 Cut two profiles at 45 degrees for corner joints.

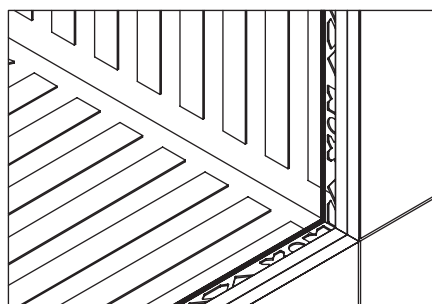

7 Align the profiles at the corners and press them into the joint.

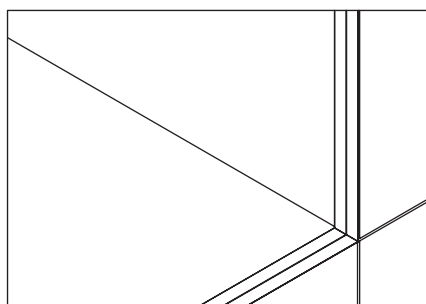

8 Place the tiles on the profile, making sure that their edges fit the profile and are flush.