

MOX Systems - тэхнічная дакументацыя

assembly-manual-visio-en.pdf

Тэхнічны пераклад: памеры глядзіце на арыгінальных чарцяжах і даведачных старонках.

Зыходная старонка 1

КІРАЎНІЦТВА ПА ЗБОРКІ Visio

1 Падбярыце правільны профіль у залежнасці ад таўшчыні падлогавага пакрыцця.

2 Выканайце стык і адпаведна размесціце анкеры профіляў.

3 Прыцісніце профіль, пакуль ён не зафіксуецца ў стыку.

4 Размесціце ковролин на профілі.

5 Зрэжце профілі на 45 градусаў для вонкавых кутаў.

6 Выраўняйце профілі па знешніх кутах і змесціце іх у стык.

7 Прыкладзеце дыван да профілю.


8 Адрэжце профілі пад углом 45 градусаў для ўнутраных кутаў.

9 Выраўняйце профілі па ўнутраных кутах і змесціце іх у стык.


10 Размесціце ковролин на профілі. 6 8

Старонка 1/1


Арыгінальныя малюнкi і даведачныя старонкі

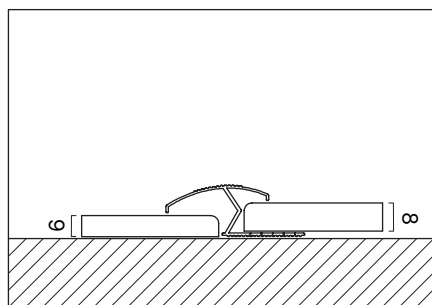


1 Pick the correct profile according to the flooring thickness.

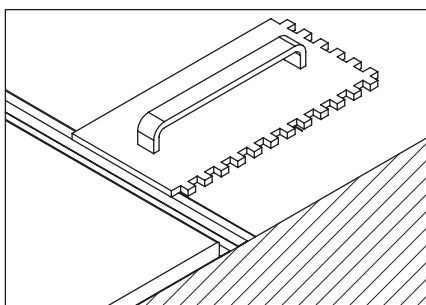


2 Apply joint and place the profiles anchor accordingly.

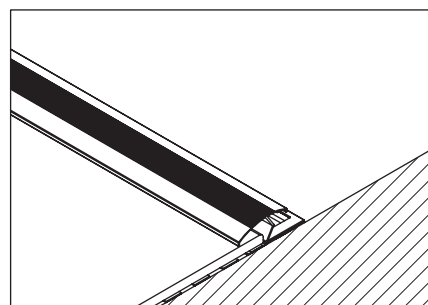


3 Press the profile until it is fixed to the joint.

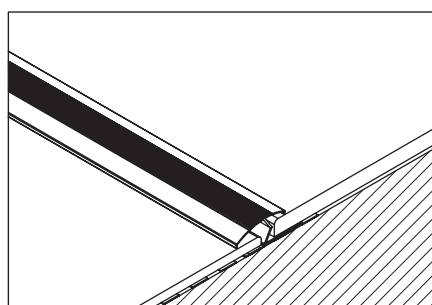


4 Place the carpet to the profile.

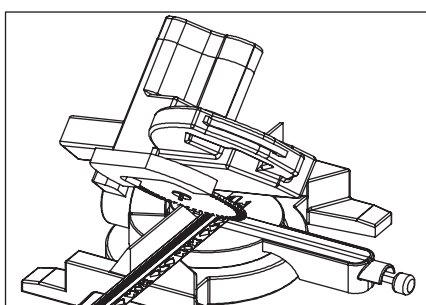


5 Cut profiles 45 degrees for external corners.

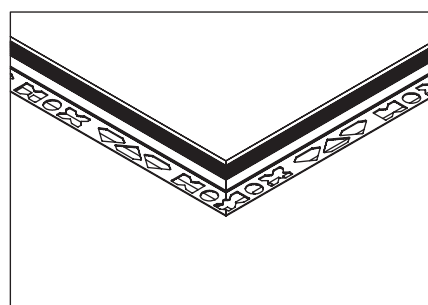


6 Align the profiles at the external corners and place them into the joint.

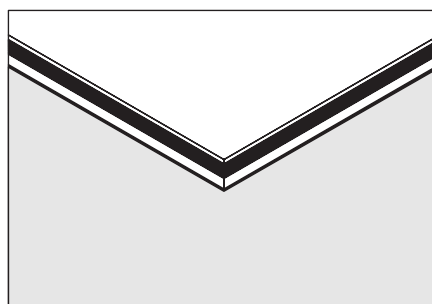


7 Place the carpet to the profile.

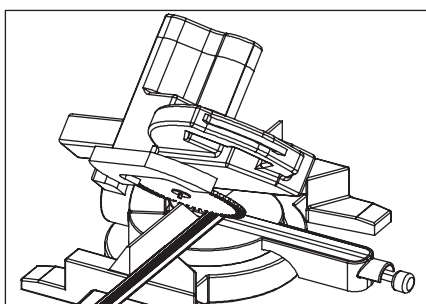

8 Cut profiles 45 degrees for internal corners.

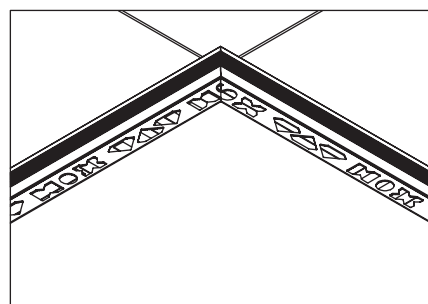

9 Align the profiles at the internal corners and place them into the joint.

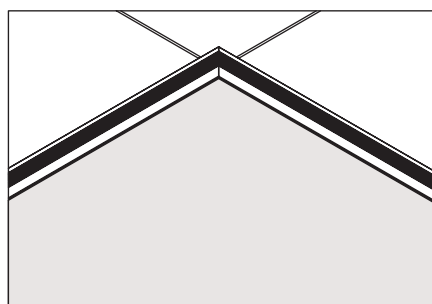

10 Place the carpet to the profile.