

MOX Systems - техническа документация

assembly-manual-mps-n-en.pdf

Технически превод: вижте оригиналните чертежи и справочните страници за размерите.

Изходна страница 1

Mps-N РЪКОВОДСТВО ЗА СГЛОБЯВАНЕ

Изберете правилния профил според дебелината на настилка.

2 Нанесете фуги и съответно поставете анкерите на профилите.

3 Натиснете профила, докато се фиксира към фугата.

4 Нанесете фуга върху местата, където ще бъде поставена настилка.

5 Поставете и подравнете настилка спрямо профила.

6 Изрежете профили 45 градуса за външни ъгли.

Подравнете профилите във външните ъгли и ги притиснете във фугата.

8 Поставете и подравнете настилка спрямо профила.


9 Изрежете профили 45 градуса за вътрешни ъгли.

10 Подравнете профилите във вътрешните ъгли и ги натиснете във фугата.


11 Поставете и подравнете настилка спрямо профила.

Страница 1/1


Оригинални чертежи и справочни страници

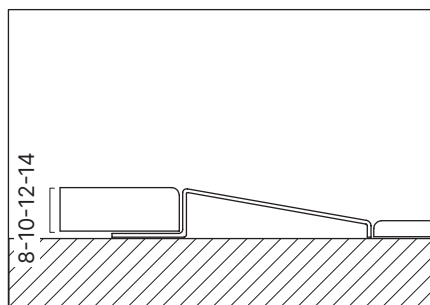


1 Pick the correct profile according to the flooring thickness.

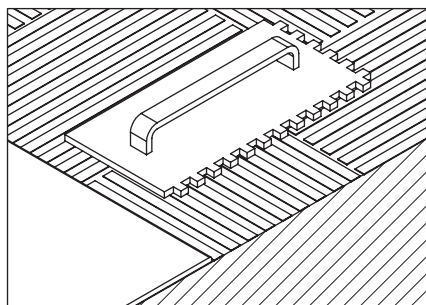


2 Apply joint and place the profiles anchor accordingly.

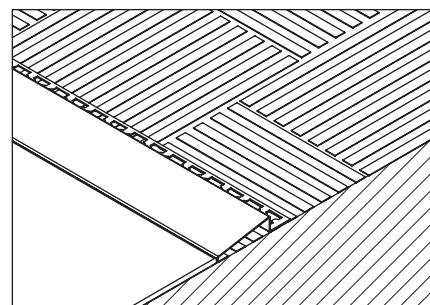


3 Press the profile until it is fixed to the joint.

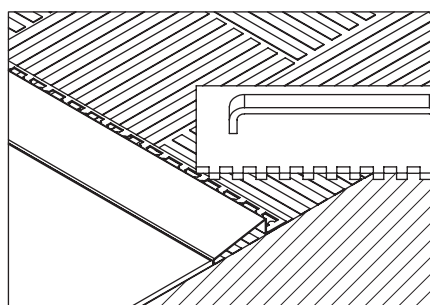


4 Apply joint to the places where the flooring will be placed.

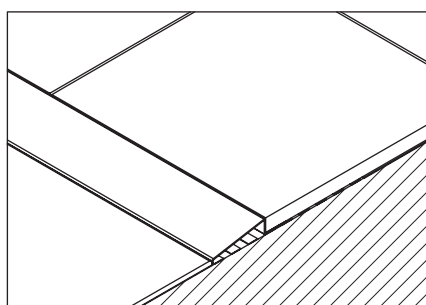


5 Place and align the flooring to the profile.

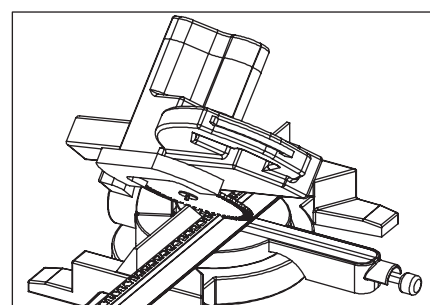


6 Cut profiles 45 degrees for external corners.

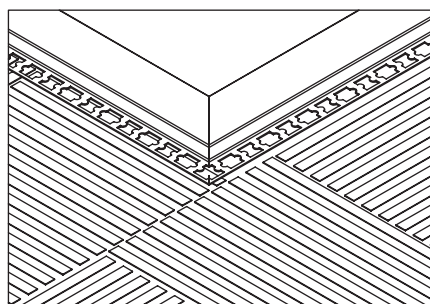


7 Align the profiles at the external corners and press them into the joint.

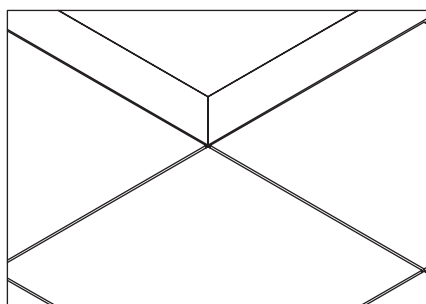


8 Place and align the flooring to the profile.

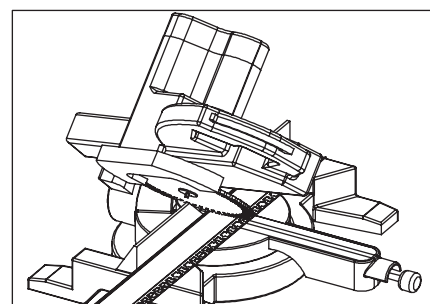

9 Cut profiles 45 degrees for internal corners.

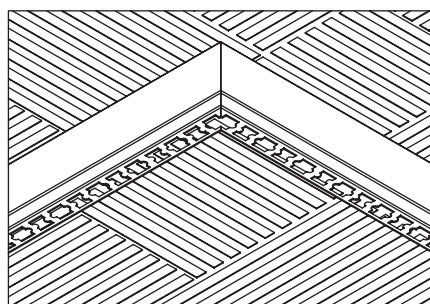

10 Align the profiles at the internal corners and press them into the joint.

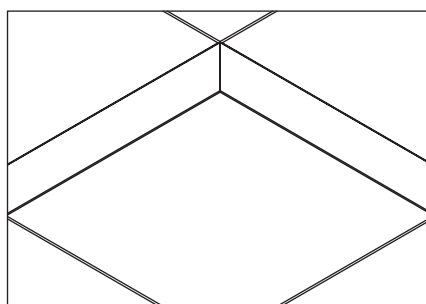

11 Place and align the flooring to the profile.