

MOX Systems - техническа документация

assembly-manual-mps-yd-en.pdf

Технически превод: вижте оригиналните чертежи и справочните страници за размерите.

Изходна страница 1

Mps-Yd РЪКОВОДСТВО ЗА СГЛОБЯВАНЕ

Изберете правилния профил според дебелината на настилка.

2 Нанесете фуги и съответно поставете анкерите на профилите.

3 Натиснете профила, докато се фиксира към фугата.

4 Нанесете фуга върху местата, където ще бъде поставена настилка.

5 Поставете и подравнете настилка спрямо профила.


6 Изрежете профили на 45 градуса за ъгли.

7 Подравнете профилите в ъглите и ги натиснете във фугата. 41-21-01-8


8 Поставете и подравнете настилка спрямо профила.

Страница 1/1


Оригинални чертежи и справочни страници

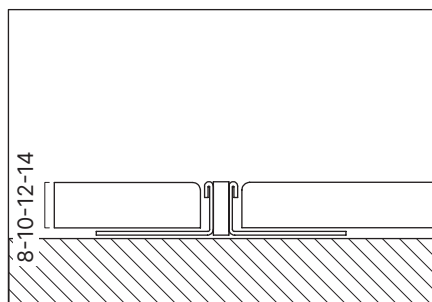


- 1 Pick the correct profile according to the flooring thickness.

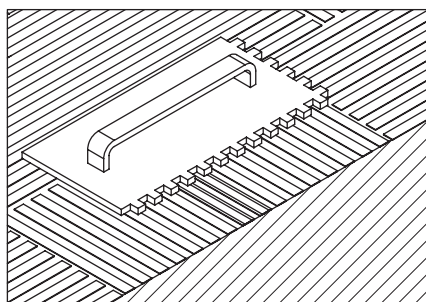


- 2 Apply joint and place the profiles anchor accordingly.

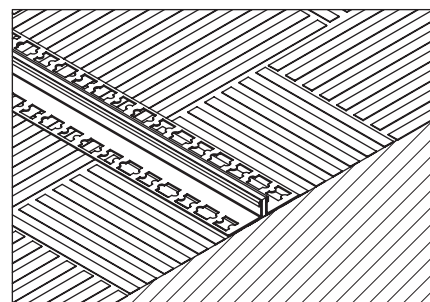


- 3 Press the profile until it is fixed to the joint.

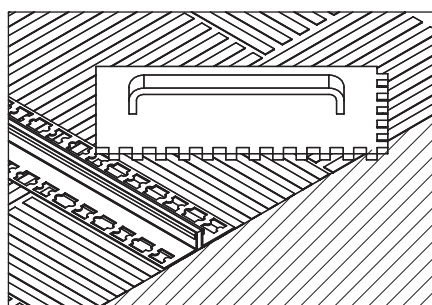


- 4 Apply joint to the places where the flooring will be placed.

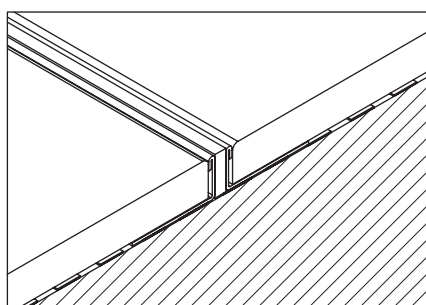


- 5 Place and align the flooring to the profile.

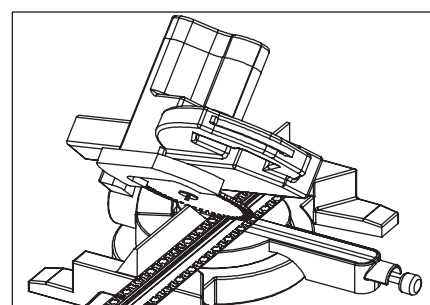

- 6 Cut profiles 45 degrees for corners.

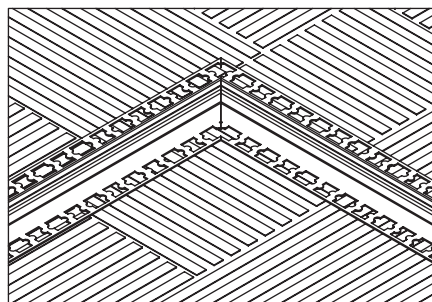

- 7 Align the profiles at the corners and press them into the joint.

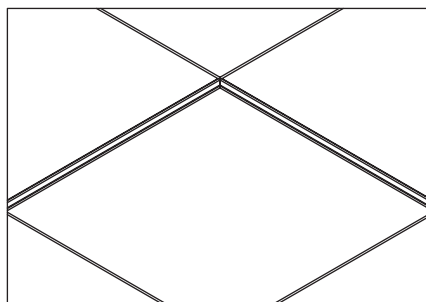

- 8 Place and align the flooring to the profile.