

MOX Systems - техническа документация

assembly-manual-revio-en.pdf

Технически превод: вижте оригиналните чертежи и справочните страници за размерите.

Исходна страница 1

Revio РЪКОВОДСТВО ЗА СГЛОБЯВАНЕ

Нанасяне с лепило

- 1 Нанесете силикон или фуга върху профила.
- 2 Фиксирайте профила към пода и го натиснете.
- 3 Поставете килима върху профила.

Приложение с винт


- 11 Фиксирайте профила с винтове.
- 2 Поставете килима върху профила.

Köşe Birleşimleri


- 1 Изрежете профили под 45 градуса за вътрешни ъгли.
- 2 Подравнете профилите във вътрешните ъгли и ги поставете във фугата.
- 3 Поставете килима върху профила.
- 4 Нарязани профили 45 градуса за външни ъгли.
- 5 Подравнете профилите във външните ъгли и ги поставете във фугата.
- 6 Поставете килима върху профила.

Оригинални чертежи и справочни страници


Application with Adhesive

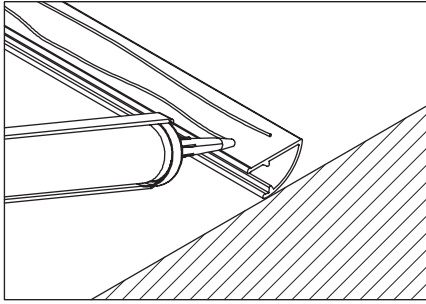

1 Apply silicone or joint to the profile.

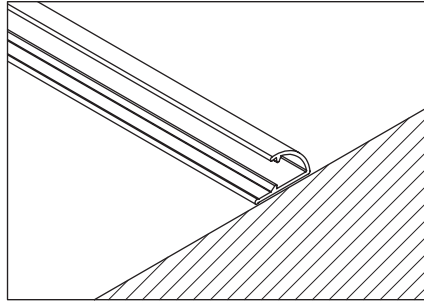


2 Fix the profile to the floor and press it.

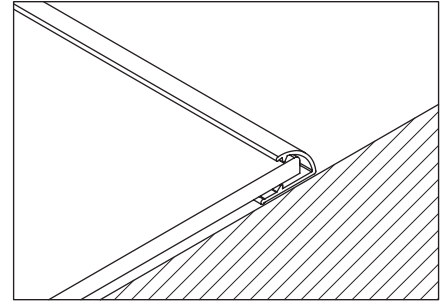


3 Place the carpet to the profile.

Application with Screw

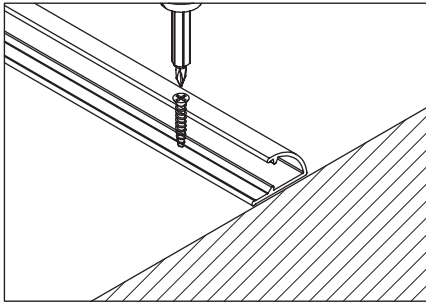


1 Fix the profile with screws.

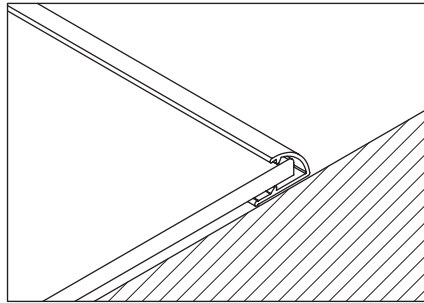


2 Place the carpet to the profile.


Köşe Birleşimleri

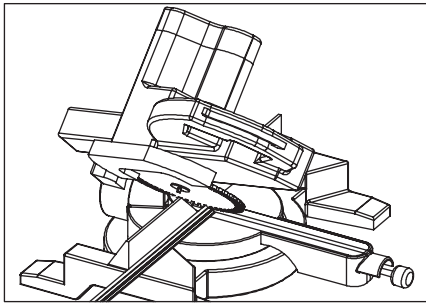


1 Cut profiles 45 degrees for internal corners.

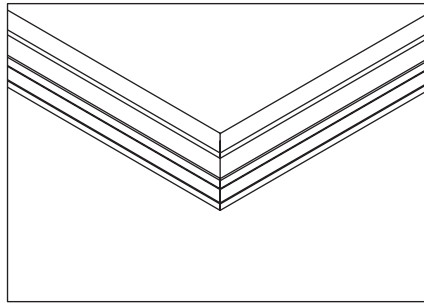


2 Align the profiles at the internal corners and place them into the joint.

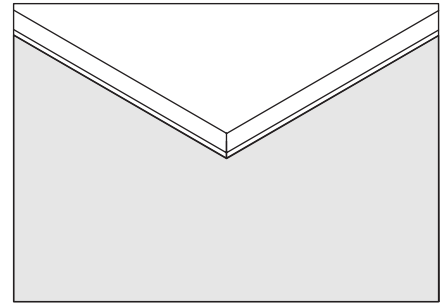


3 Place the carpet to the profile.

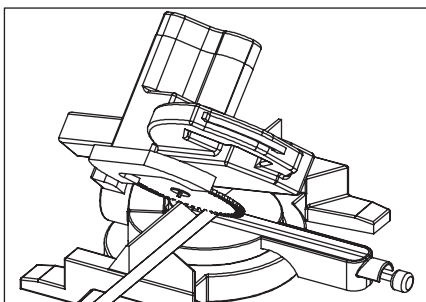

4 Cut profiles 45 degrees for external corners.

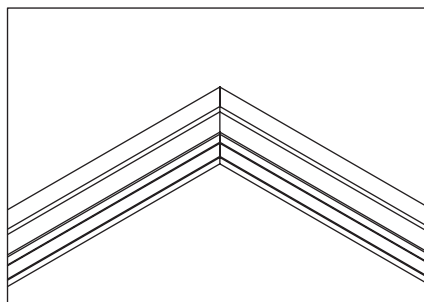

5 Align the profiles at the external corners and place them into the joint.

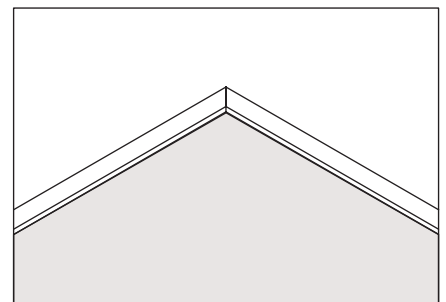

6 Place the carpet to the profile.