

# MOX Systems - техническа документация

assembly-manual-square-fix-en.pdf

Технически превод: вижте оригиналните чертежи и справочните страници за размерите.


## Изходна страница 1

РЪКОВОДСТВО ЗА Сглобяване на Square-Fix


- 1 Изберете правилния профил според дебелината на плочката.
- 2 Нанесете фуги и съответно поставете анкерите на профилите.
- 3 Натиснете профила, докато се фиксира към фугата.
- 4 Нанесете фуга на местата, където ще бъде поставена керамиката.
- 5 Поставете плочките върху профила, като се уверите, че ръбовете им пасват на профила и са изравнени.
- 6 Изрежете два профила на 45 градуса за ъглови фуги.
- 7 Подравнете профилите в ъглите и ги натиснете във фугата. 10
- 8 Поставете плочките върху профила, като се уверите, че ръбовете им пасват на профила и са изравнени.

Страница 1/1


## Оригинални чертежи и справочни страници

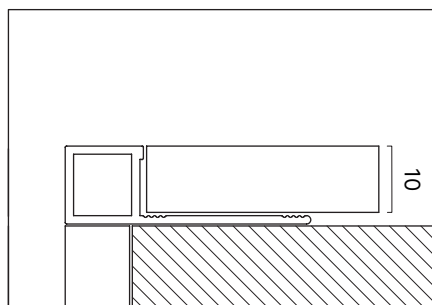


**1** Pick the correct profile according to the tile thickness.

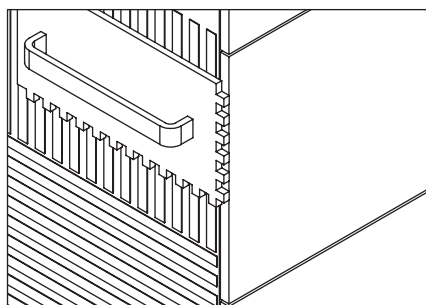


**2** Apply joint and place the profiles anchor accordingly.

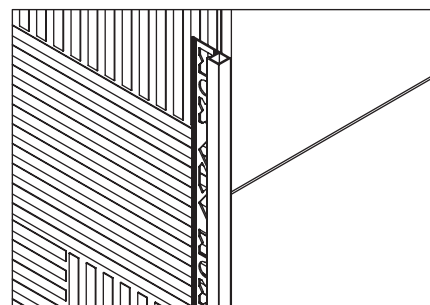


**3** Press the profile until it is fixed to the joint.

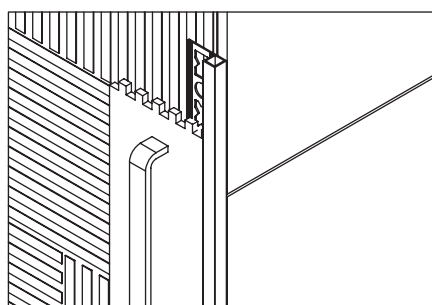


**4** Apply joint to the places where the ceramics will be placed.

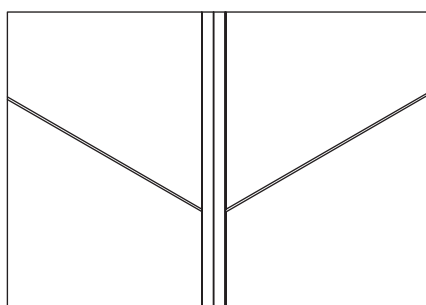


**5** Place the tiles on the profile, making sure that their edges fit the profile and are flush.

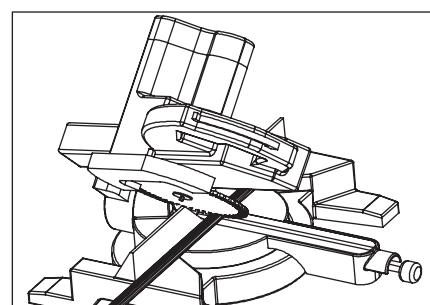

**6** Cut two profiles at 45 degrees for corner joints.

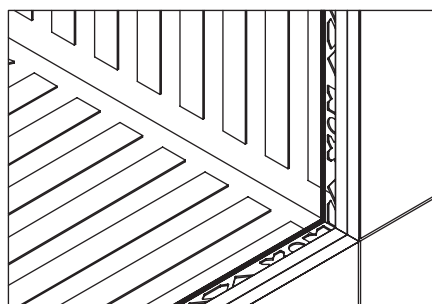

**7** Align the profiles at the corners and press them into the joint.

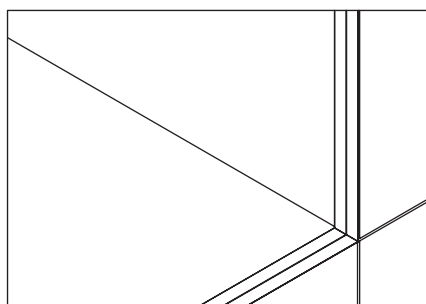

**8** Place the tiles on the profile, making sure that their edges fit the profile and are flush.