

MOX Systems - техническа документация

assembly-manual-velo-en.pdf

Технически превод: вижте оригиналните чертежи и справочните страници за размерите.


Изходна страница 1

Velo РЪКОВОДСТВО ЗА СГЛОБЯВАНЕ


- 1 Притиснете силикона по начин на две линии към задната страна на профила.
- 2 Залепете профила, който сте притиснали силикона към стената и натиснете.
- 3 Залепете профила, който сте залепили към стената на интервали от 50 см.
- 4 Премахнете внимателно лентите от профила на следващия ден.
- 5 Уверете се, че профилът е здраво залепен към стената.
- 6 Изрежете профили 45 градуса за външни ъгли.
- 7 Залепете профилите, които сте изрязали на 45 градуса към стената, така че да са затворени един към друг.
- 8 Уверете се, че профилите, които са изрязани на 45 градуса, са фиксирани един към друг напълно във външните ъгли.
- 9 Изрежете профили 45 градуса за вътрешни ъгли.
- 10 Залепете профилите, които сте изрязали на 45 градуса към стената, така че да са затворени един към друг.
- 11 Уверете се, че профилите, които са изрязани на 45 градуса, са фиксирани един към друг напълно във вътрешните ъгли.

Страница 1/1


Оригинални чертежи и справочни страници

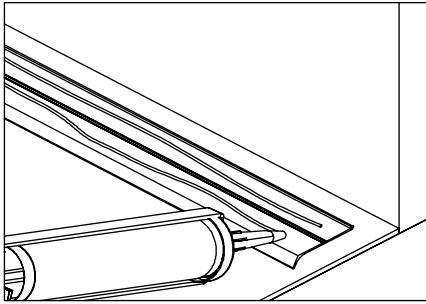


1 Squeeze the silicon in the manner of two lines to the back side of the profile.

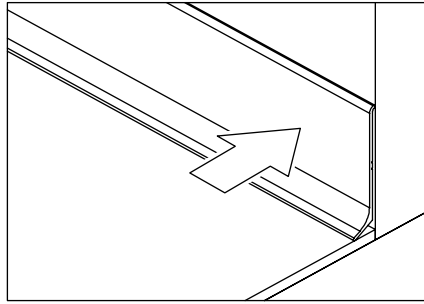


2 Paste the profile that you squeezed the silicon to the wall and press.

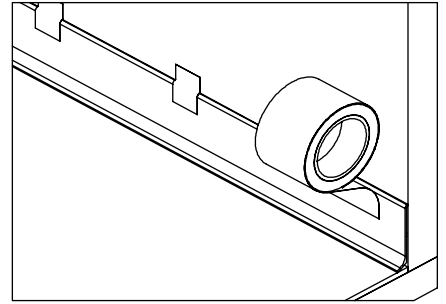


3 Tape the profile that you pasted to the wall at 50cm intervals.

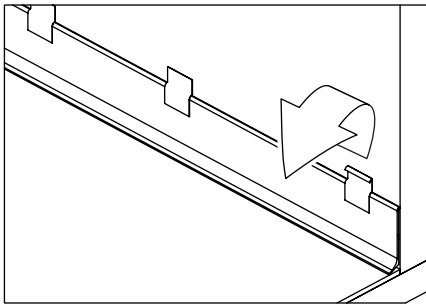


4 Remove the bands that on the profile heedfully the day after.

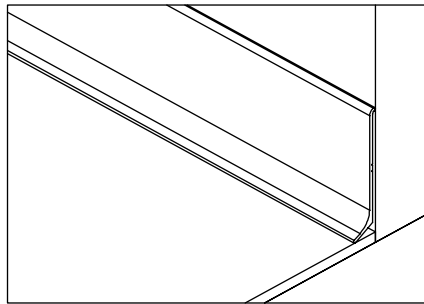


5 Make sure that the profile is stuck to the wall firmly.

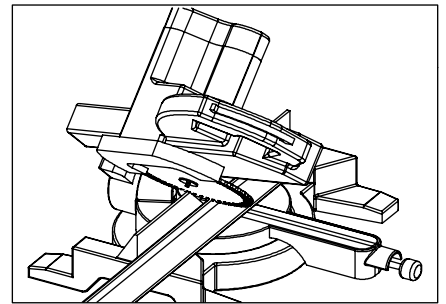


6 Cut profiles 45 degrees for external corners.

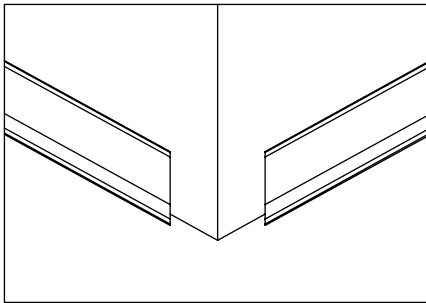


7 Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

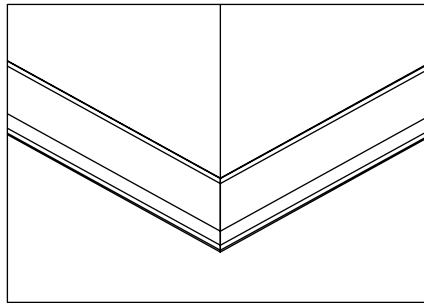


8 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the external corners.

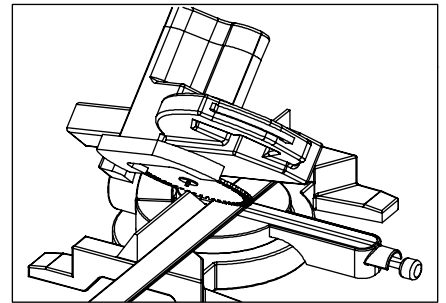

9 Cut profiles 45 degrees for internal corners.

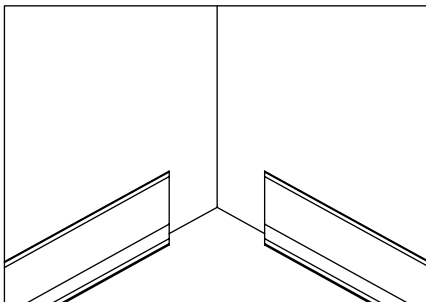

10 Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

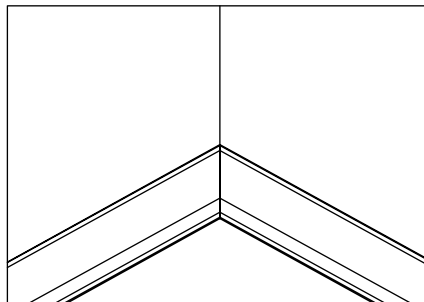

11 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the internal corners.