

MOX Systems - техническа документация

assembly-manual-visio-en.pdf

Технически превод: вижте оригиналните чертежи и справочните страници за размерите.


Изходна страница 1

Visio РЪКОВОДСТВО ЗА СГЛОБЯВАНЕ


- 1 Изберете правилния профил според дебелината на настилка.
- 2 Нанесете фуги и съответно поставете анкерите на профилите.
- 3 Натиснете профила, докато се фиксира към фугата.
- 4 Поставете килима върху профила.
- 5 Нарязани профили 45 градуса за външни ъгли.
- 6 Подравнете профилите във външните ъгли и ги поставете във фугата.
- 7 Поставете килима върху профила.
- 8 Нарязани профили 45 градуса за вътрешни ъгли.
- 9 Подравнете профилите във вътрешните ъгли и ги поставете във фугата.
- 10 Поставете килима върху профила. 6 8

Страница 1/1


Оригинални чертежи и справочни страници

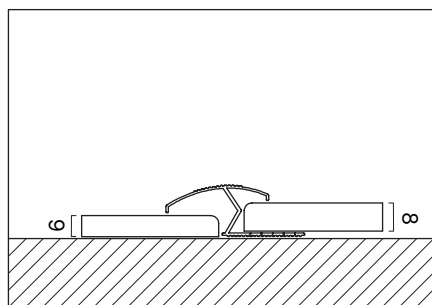


1 Pick the correct profile according to the flooring thickness.

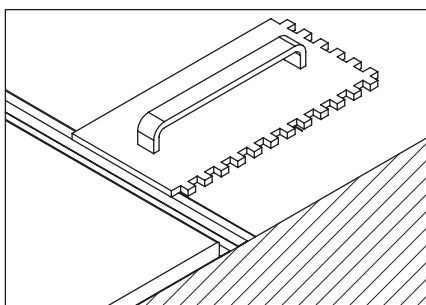


2 Apply joint and place the profiles anchor accordingly.

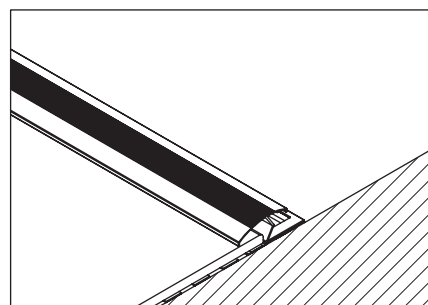


3 Press the profile until it is fixed to the joint.

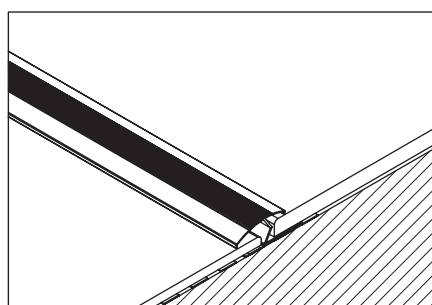


4 Place the carpet to the profile.

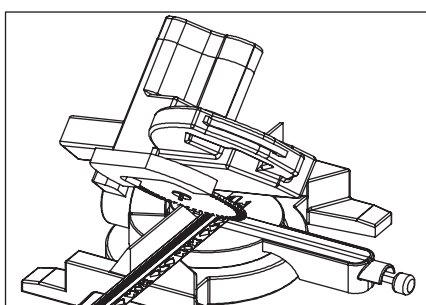


5 Cut profiles 45 degrees for external corners.

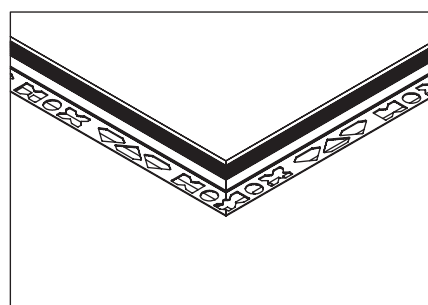


6 Align the profiles at the external corners and place them into the joint.

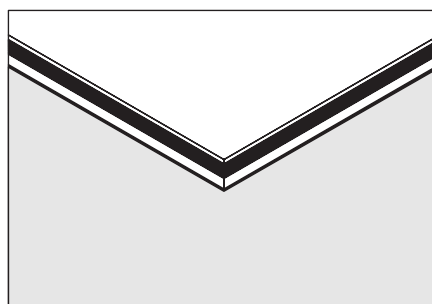


7 Place the carpet to the profile.

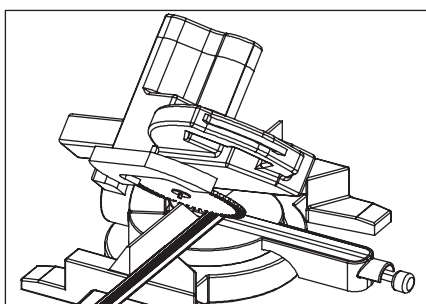

8 Cut profiles 45 degrees for internal corners.

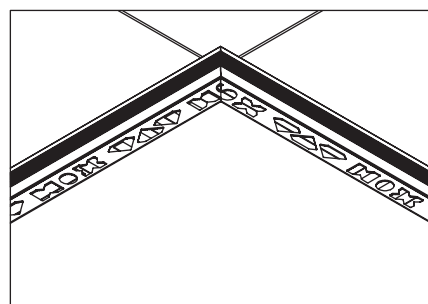

9 Align the profiles at the internal corners and place them into the joint.

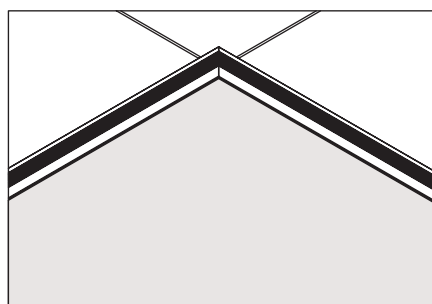

10 Place the carpet to the profile.