

MOX Systems - tehnička dokumentacija

assembly-manual-crispo-en.pdf

Tehnički prijevod: konsultujte originalne crteže i referentne stranice za dimenzije.


Izvorna stranica 1

Crispo VODIČ ZA SASTAVLJANJE


- 1 Postavite alate za pričvršćivanje na zid na razmacima od 50 cm i označite zid od rupa za vijke.
- 2 Izbušite tačke koje ste već označili.
- 3 Postavite odgovarajuće tiple u skladu sa materijalom zida u izbušene rupe.
- 4 Zašrafite alate za pričvršćivanje na zid na mesta koja su izbušena u intervalima od 50 cm.
- 5 Montirajte profil na alate za pričvršćivanje na zid kao na slici.
- 6 Uvjerite se da su profilni ekseri i ekseri alata za pričvršćivanje potpuno međusobno povezani i provjerite je li profilni đon pričvršćen za pod.
- 7 Izrežite profile 45 stepeni za vanjske uglove.
- 8 Pričvrstite alate za fiksiranje na zid na način koji će biti zatvoreni na uglove i na njemu sastavite profile koje ste izrezali za 45 stepeni.
- 9 Uvjerite se da su profili koji su izrezani pod 45 stupnjeva pričvršćeni jedan za drugi u potpunosti na vanjskim uglovima.
- 10 Rezanje profila 45 stepeni za unutrašnje uglove.
- 11 Pričvrstite alate za fiksiranje na zid na način koji će biti zatvoreni u uglove i sastavite profile koje ste izrezali pod uglom od 45 stepeni.
- 12 Uvjerite se da su profili koji su izrezani pod uglom od 45 stupnjeva pričvršćeni jedan za drugi u potpunosti na unutrašnjim uglovima.

Stranica 1/1


Originalni crteži i referentne stranice

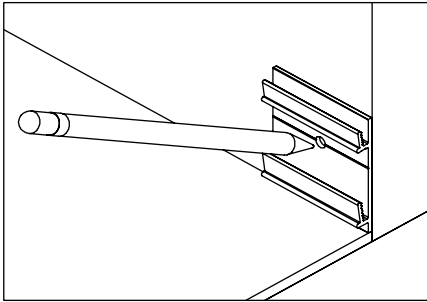


1 Place the wall fixation tools at 50cm intervals and mark the wall from the screw holes.

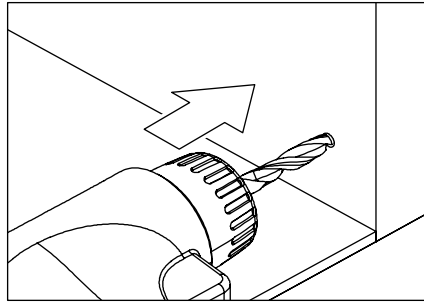


2 Drill the points that you have already marked.

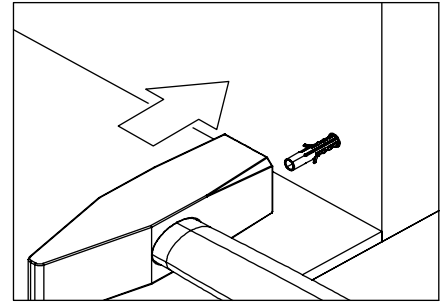


3 Place the correct dowels according to the wall material into the drilled holes.

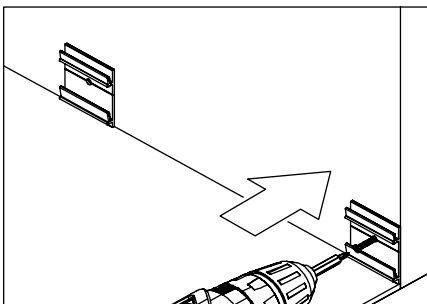


4 Screw the wall fixation tools to the places that are drilled at 50cm intervals.

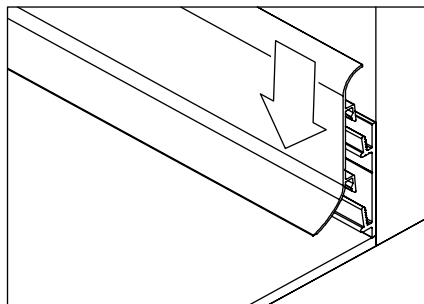


5 Assemble the profile on the wall fixation tools just like in the picture.

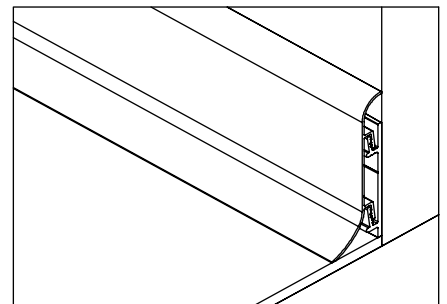


6 Make sure that the profile nails and the fixation tool's nails are completely connected to each other and be sure that the profile sole is fixed to the floor.

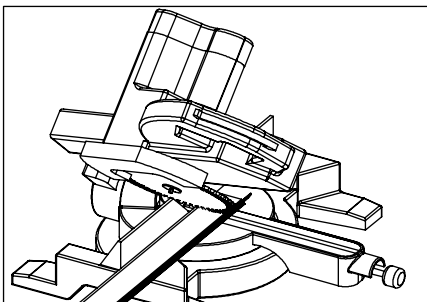


7 Cut profiles 45 degrees for external corners.

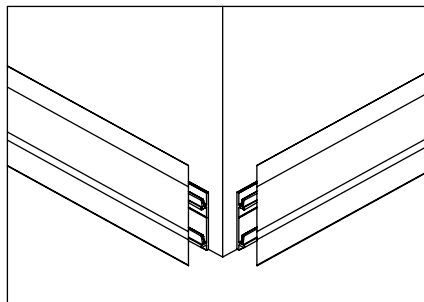


8 Affix the wall fixation tools in the manner that will be closed to the corners and assemble the profiles that you cut 45 degrees on it.

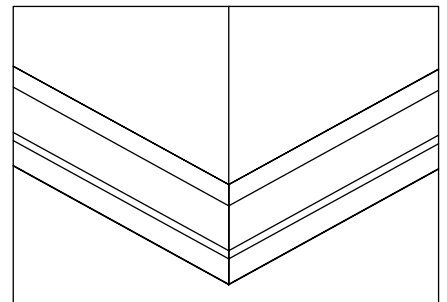


9 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the external corners.

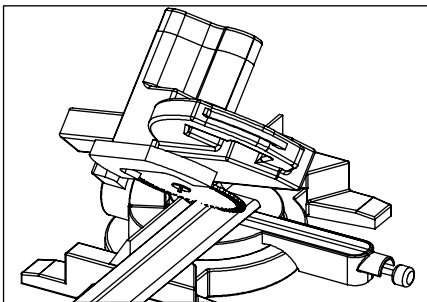

10 Cut profiles 45 degrees for internal corners.

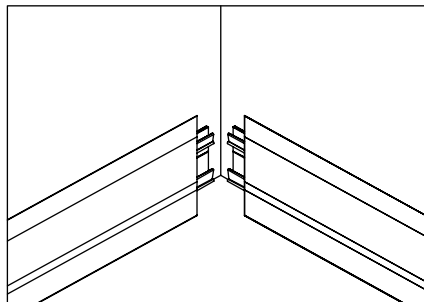

11 Affix the wall fixation tools in the manner that will be closed to the corners and assemble the profiles that you cut 45 degrees on it.

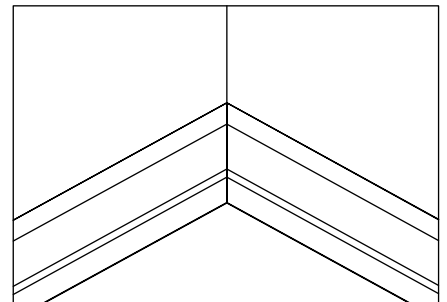

12 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the internal corners.