

MOX Systems - tehnička dokumentacija

assembly-manual-lato-en.pdf

Tehnički prijevod: konsultujte originalne crteže i referentne stranice za dimenzije.


Izvorna stranica 1

Lato VODIČ ZA SASTAVLJANJE


- 1 Postavite dijelove za pričvršćivanje na zid na razmacima od 50 cm i označite zid od rupa za vijke.
- 2 Izbušite tačke koje ste već označili.
- 3 Postavite odgovarajuće tiple u skladu sa materijalom zida u izbušene rupe.
- 4 Pričvrstite delove za zid na mesta koja su izbušena u razmacima od 50 cm.
- 5 Montirajte profil na zidne pričvrsne dijelove kao na slici.
- 6 Uvjerite se da su profilni ekseri i ekseri dijela za pričvršćivanje potpuno međusobno povezani i provjerite je li profilni đon pričvršćen za pod.
- 7 Pričvrstite alate za fiksiranje na zid na način koji će biti zatvoreni na uglove i sastavite uglove kombinirajući alate sa profilima kako biste osigurali rotaciju vanjskih uglova.
- 8 Uvjerite se da su profili i alati za kombiniranje uglova potpuno pričvršćeni jedan za drugi na vanjskim uglovima.
- 9 Pričvrstite alate za fiksiranje na zid na način koji će biti zatvoreni na uglove i sastavite uglove kombinujući alate sa profilima kako biste osigurali rotaciju unutrašnjih uglova.
- 10 Uvjerite se da su profili i alati za kombiniranje uglova potpuno pričvršćeni jedan za drugi na unutrašnjim uglovima.
- 11 Sastavite alate za kapice sa profilima kako biste osigurali da se zid pravilno završava.
- 12 Uvjerite se da su profili i alati za kapice potpuno pričvršćeni jedan za drugi na krajevima zida.

Stranica 1/1


Originalni crteži i referentne stranice

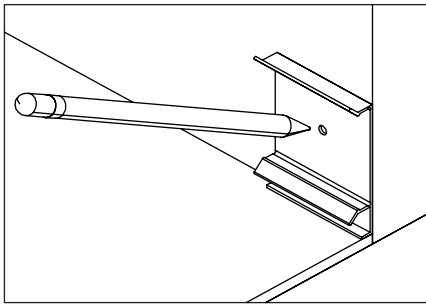


1 Place the wall fixation parts at 50cm intervals and mark the wall from the screw holes.

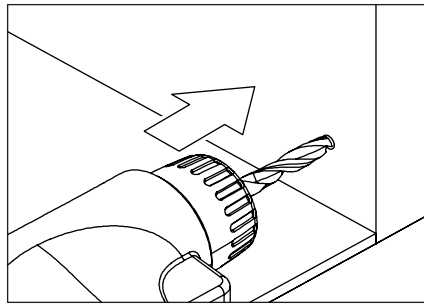


2 Drill the points that you have already marked.

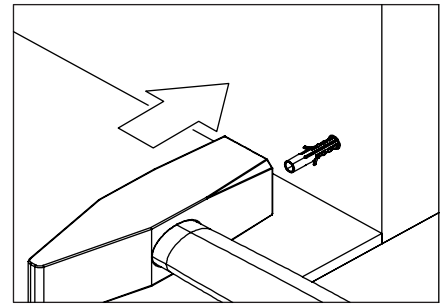


3 Place the correct dowels according to the wall material into the drilled holes.

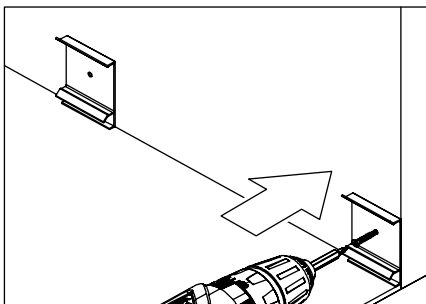


4 Screw the wall fixation parts to the places that are drilled at 50cm intervals.

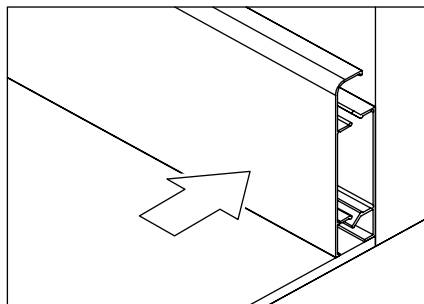


5 Assemble the profile on the wall fixation parts just like in the picture.

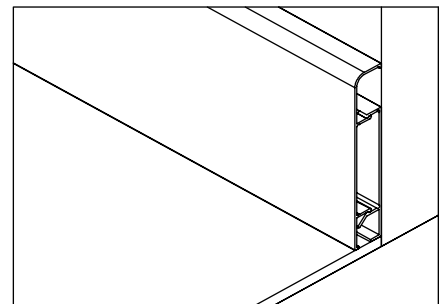


6 Make sure that the profile nails and the fixation part's nails are completely connected to each other and be sure that the profile sole is fixed to the floor.

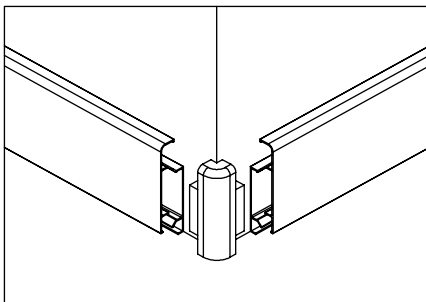


7 Affix the wall fixation tools in the manner that will be closed to the corners and assemble the corner combining tools with the profiles to ensure the rotating of external corners.

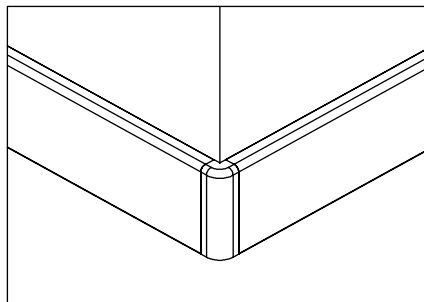


8 Make sure that profiles and corner combining tools are fixed to each other completely at the external corners.

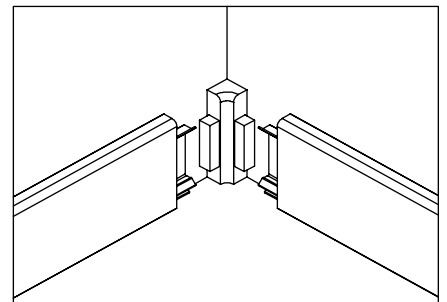


9 Affix the wall fixation tools in the manner that will be closed to the corners and assemble the corner combining tools with the profiles to ensure the rotating of internal corners.

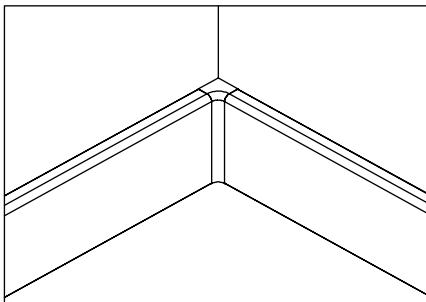

10 Make sure that profiles and corner combining tools are fixed to each other completely at the internal corners.

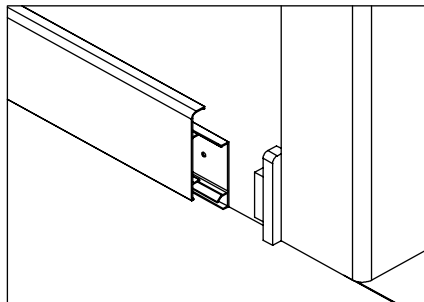

11 Assemble the cap tools with the profiles to ensure the wall ends properly.

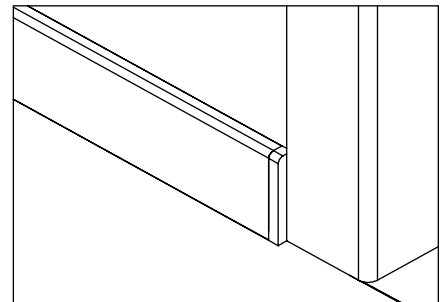

12 Make sure that profiles and cap tools are fixed to each other completely at the ends of the wall.