

MOX Systems - tehnička dokumentacija

assembly-manual-mps-c-en.pdf

Tehnički prijevod: konsultujte originalne crteže i referentne stranice za dimenzije.

Izvorna stranica 1

Mps-C VODIČ ZA SASTAVLJANJE

Odaberite odgovarajući profil prema debljini pločica.

2 Nanesite spoj i u skladu s tim postavite sidrenje profila.

3 Pritisnite profil dok se ne učvrsti za spoj.

Nanesite fugu na mjesta gdje će se postavljati keramika.

5 Postavite pločice na profil i uvjerite se da su njihove ivice postavljene na profil.

6 Izrežite profile 45 stepeni za vanjske uglove.

Poravnajte profile na vanjskim uglovima i utisnite ih u spoj.

8 Postavite pločice na profil i uvjerite se da su njihove ivice postavljene na profil.


9 Izrežite profile 45 stepeni za unutrašnje uglove.

10 Poravnajte profile na unutrašnjim uglovima i pritisnite ih u spoj.


11 Postavite pločice na profil i uvjerite se da su njihove ivice postavljene na profil.

Stranica 1/1


Originalni crteži i referentne stranice

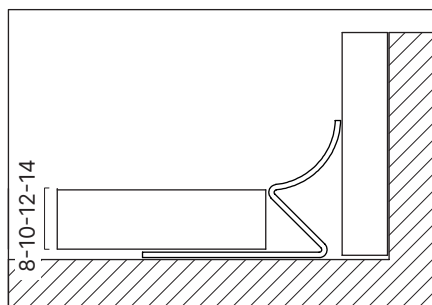


- 1** Pick the correct profile according to the tile thickness.

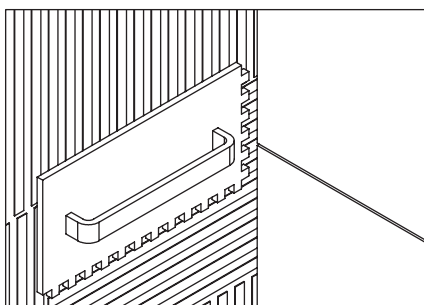


- 2** Apply joint and place the profiles anchor accordingly.

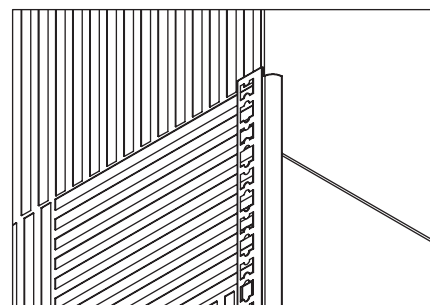


- 3** Press the profile until it is fixed to the joint.

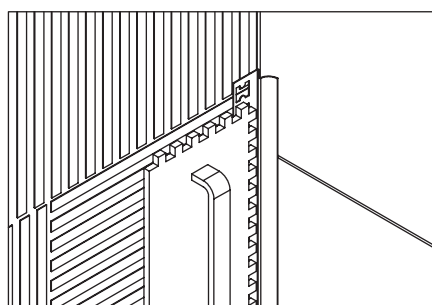


- 4** Apply joint to the places where the ceramics will be placed.

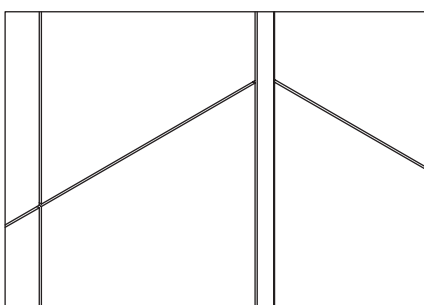


- 5** Place the tiles on the profile and make sure that their edges are fitted on the profile.

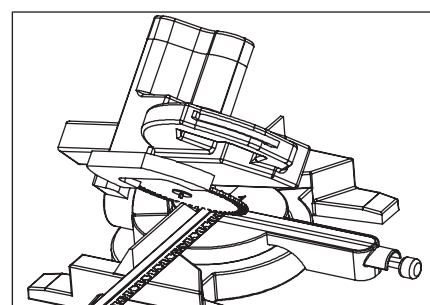


- 6** Cut profiles 45 degrees for external corners.

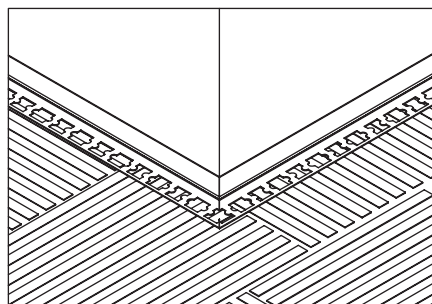


- 7** Align the profiles at the external corners and press them into the joint.

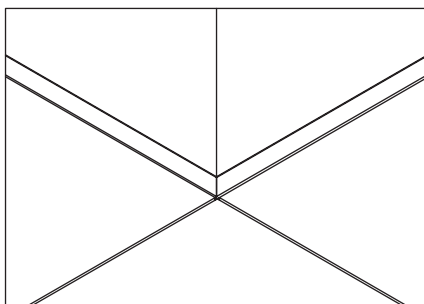


- 8** Place the tiles on the profile and make sure that their edges are fitted on the profile.

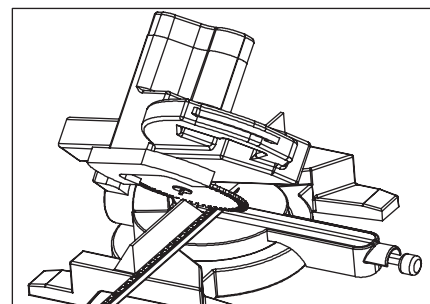

- 9** Cut profiles 45 degrees for internal corners.

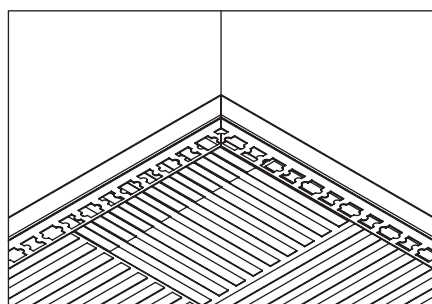

- 10** Align the profiles at the internal corners and press them into the joint.

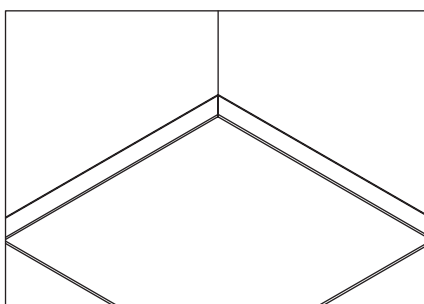

- 11** Place the tiles on the profile and make sure that their edges are fitted on the profile.