

MOX Systems - tehnička dokumentacija

assembly-manual-mps-e-en.pdf

Tehnički prijevod: konsultujte originalne crteže i referentne stranice za dimenzije.


Izvorna stranica 1

Mps-E VODIČ ZA SASTAVLJANJE


- 1 Odaberite odgovarajući profil prema debljini poda.
 - 2 Nanesite spoj i u skladu s tim postavite sidrenje profila.
 - 3 Pritisnite profil dok se ne učvrsti za spoj.
 - 4 Nanesite spoj na mjesta na kojima će se postavljati pod.
 - 5 Postavite i poravnajte pod prema profilu.
 - 6 Izrežite profile 45 stepeni za vanjske uglove.
- Poravnajte profile na vanjskim uglovima i utisnite ih u spoj.
- 8 Postavite i poravnajte pod prema profilu.
 - 9 Izrežite profile 45 stepeni za unutrašnje uglove.
 - 10 Poravnajte profile na unutrašnjim uglovima i pritisnite ih u spoj.
 - 11 Postavite i poravnajte pod prema profilu.

Stranica 1/1


Originalni crteži i referentne stranice

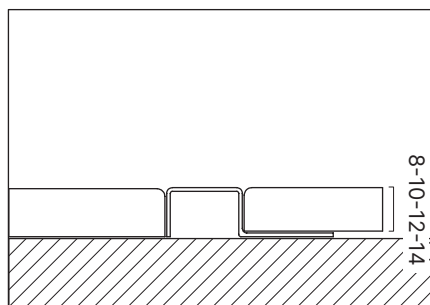


- 1 Pick the correct profile according to the flooring thickness.

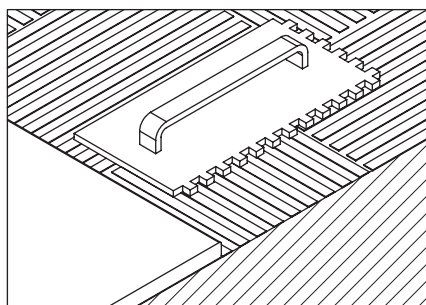


- 2 Apply joint and place the profiles anchor accordingly.

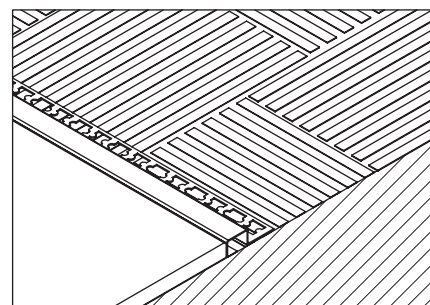


- 3 Press the profile until it is fixed to the joint.

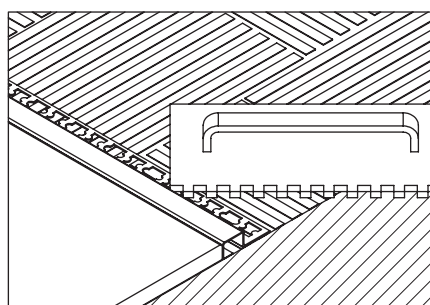


- 4 Apply joint to the places where the flooring will be placed.

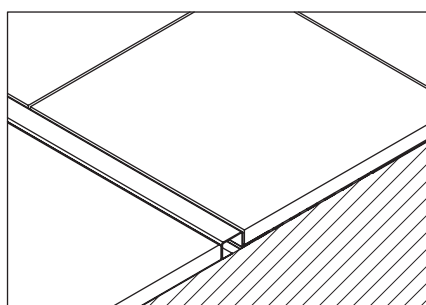


- 5 Place and align the flooring to the profile.

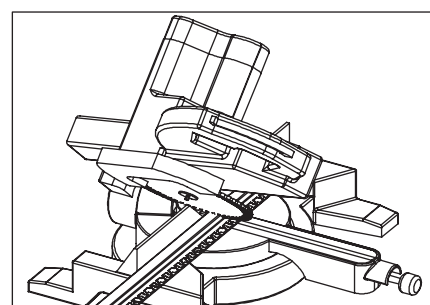


- 6 Cut profiles 45 degrees for external corners.

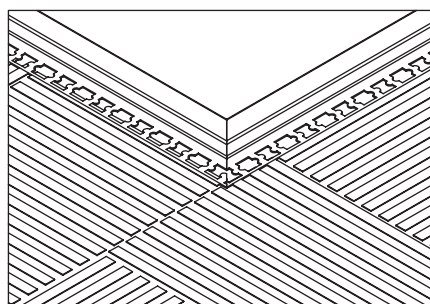


- 7 Align the profiles at the external corners and press them into the joint.

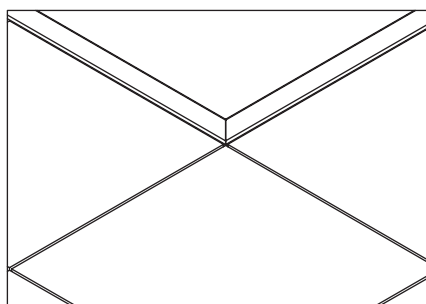


- 8 Place and align the flooring to the profile.

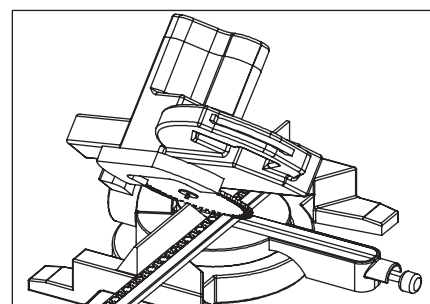

- 9 Cut profiles 45 degrees for internal corners.

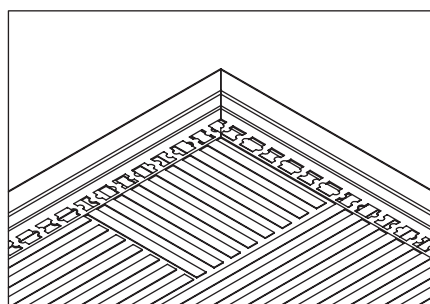

- 10 Align the profiles at the internal corners and press them into the joint.

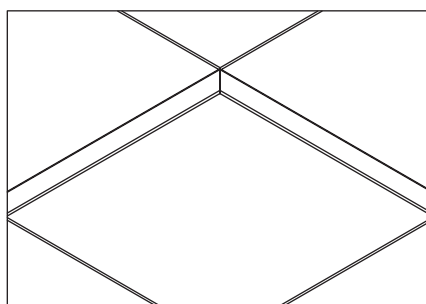

- 11 Place and align the flooring to the profile.