

MOX Systems - tehnička dokumentacija

assembly-manual-mps-f-en.pdf

Tehnički prijevod: konsultujte originalne crteže i referentne stranice za dimenzije.


Izvorna stranica 1

Mps-F VODIČ ZA SASTAVLJANJE


- 1 Odaberite odgovarajući profil prema debljini pločica.
- 2 Nanesite spoj i u skladu s tim postavite sidrenje profila.
- 3 Pritisnite profil dok se ne učvrsti za spoj.
- 4 Nanesite fugu na mjesta gdje će se postavljati keramika.
- 5 Postavite pločice na profil, pazeći da im rubovi odgovaraju profilu i da budu u ravnini.
- 6 Izrežite profile 45 stepeni za vanjske uglove.
- 7 Poravnajte profile na vanjskim uglovima i pritisnite ih u spoj.
- 8 Postavite pločice na profil, pazeći da im rubovi odgovaraju profilu i da budu u ravnini.
- 9 Izrežite profile 45 stepeni za vanjske uglove.
- 10 Poravnajte profile na unutrašnjim uglovima i pritisnite ih u spoj.
- 11 Postavite pločice na profil, pazeći da im rubovi odgovaraju profilu i da budu u ravnini.

Stranica 1/1


Originalni crteži i referentne stranice

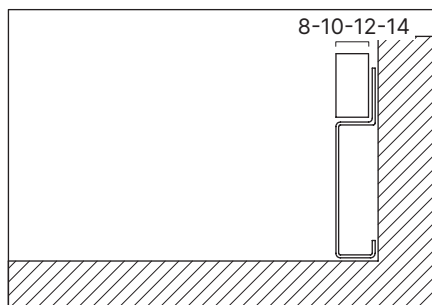


- 1 Pick the correct profile according to the tile thickness.

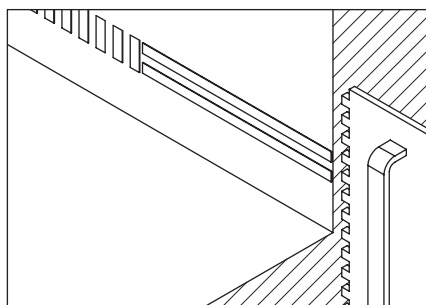


- 2 Apply joint and place the profiles anchor accordingly.

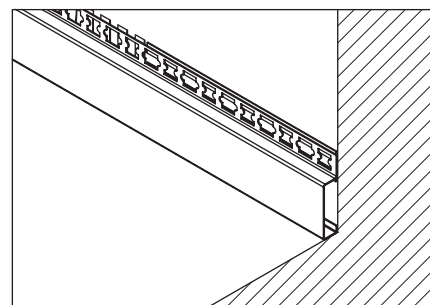


- 3 Press the profile until it is fixed to the joint.

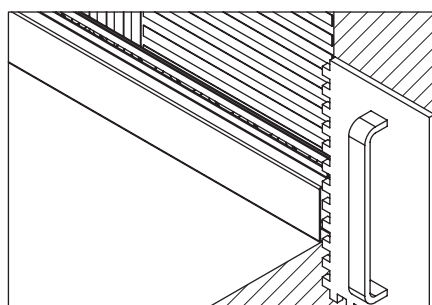


- 4 Apply joint to the places where the ceramics will be placed.

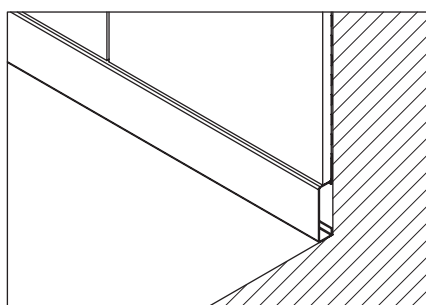


- 5 Place the tiles on the profile, making sure that their edges fit the profile and are flush.

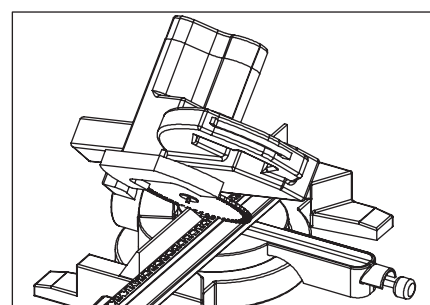


- 6 Cut profiles 45 degrees for external corners.

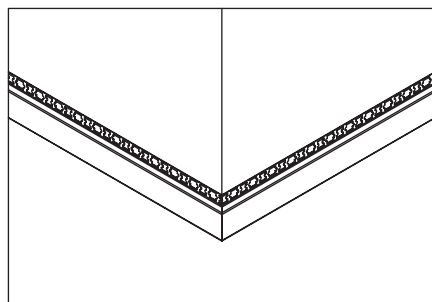


- 7 Align the profiles at the external corners and press them into the joint.

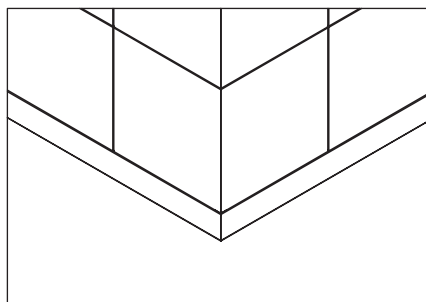


- 8 Place the tiles on the profile, making sure that their edges fit the profile and are flush.

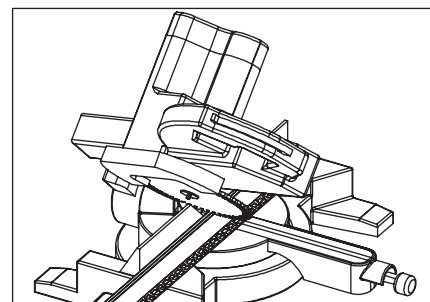

- 9 Cut profiles 45 degrees for external corners.

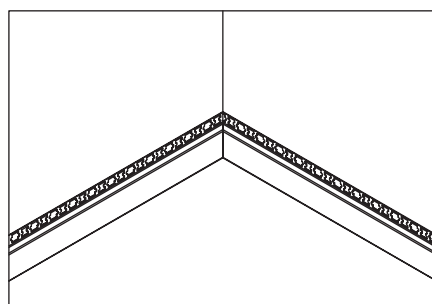

- 10 Align the profiles at the internal corners and press them into the joint.

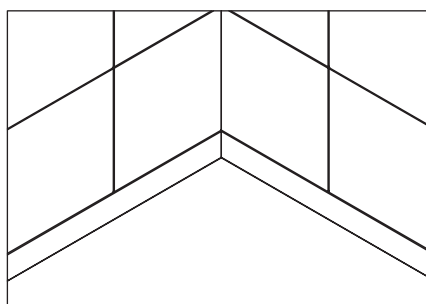

- 11 Place the tiles on the profile, making sure that their edges fit the profile and are flush.