

MOX Systems - tehnička dokumentacija

assembly-manual-mps-tb-en.pdf

Tehnički prijevod: konsultujte originalne crteže i referentne stranice za dimenzije.

Izvorna stranica 1

Mps-Tb VODIČ ZA SASTAVLJANJE

Odaberite odgovarajući profil prema debljini poda.

2 Nanesite spoj i u skladu s tim postavite sidrenje profila.

3 Pritisnite profil dok se ne učvrsti za spoj.

4 Nanesite spoj na mjesta na kojima će se postavljati pod.

5 Postavite i poravnajte pod prema profilu.

6 Izrežite profile 45 stepeni za vanjske uglove.

Poravnajte profile na vanjskim uglovima i utisnite ih u spoj.

8 Postavite i poravnajte pod prema profilu.


9 Izrežite profile 45 stepeni za unutrašnje uglove.

10 Poravnajte profile na unutrašnjim uglovima i pritisnite ih u spoj.


11 Postavite i poravnajte pod prema profilu.

Stranica 1/1


Originalni crteži i referentne stranice

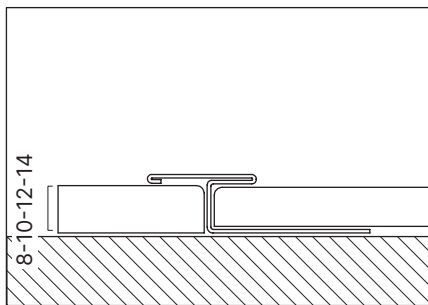


1 Pick the correct profile according to the flooring thickness.

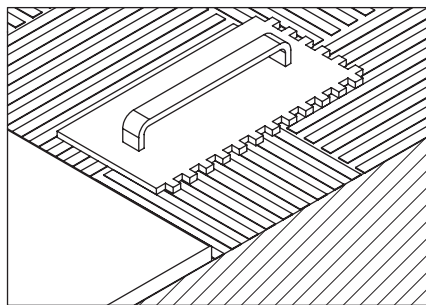


2 Apply joint and place the profiles anchor accordingly.

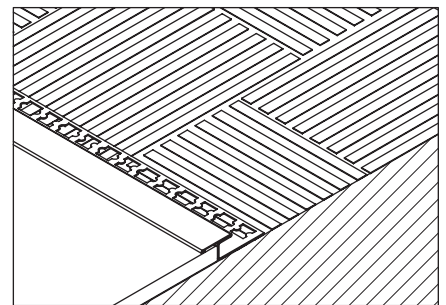


3 Press the profile until it is fixed to the joint.

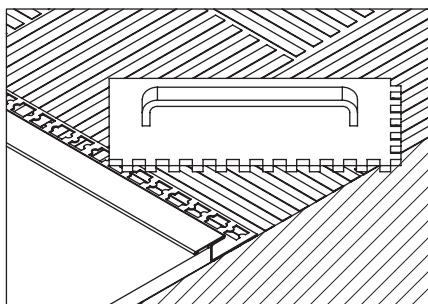


4 Apply joint to the places where the flooring will be placed.

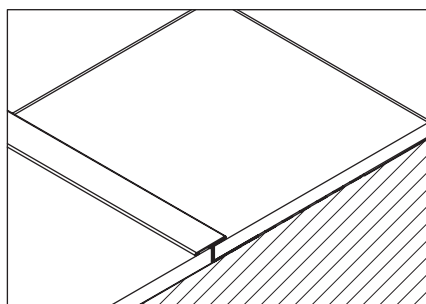


5 Place and align the flooring to the profile.

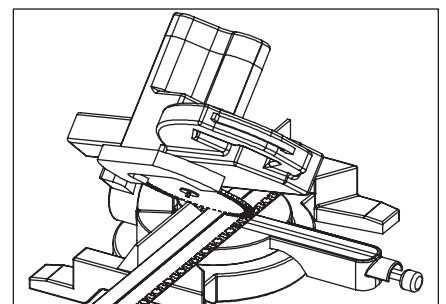


6 Cut profiles 45 degrees for external corners.

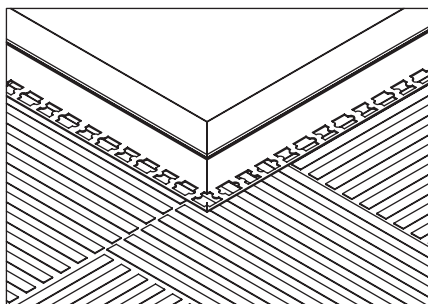


7 Align the profiles at the external corners and press them into the joint.

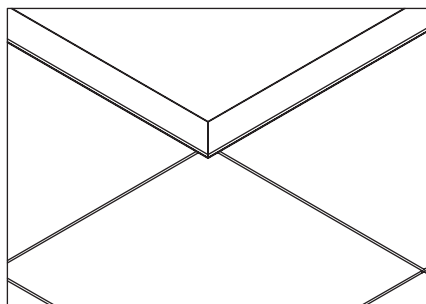


8 Place and align the flooring to the profile.

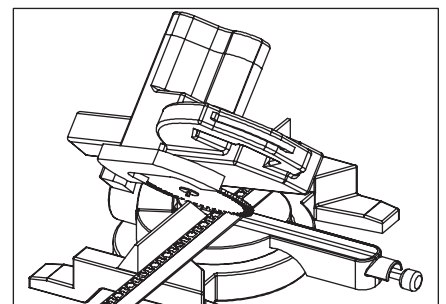

9 Cut profiles 45 degrees for internal corners.

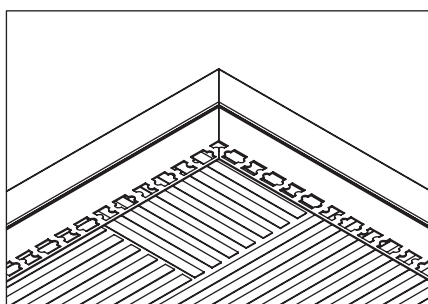

10 Align the profiles at the internal corners and press them into the joint.

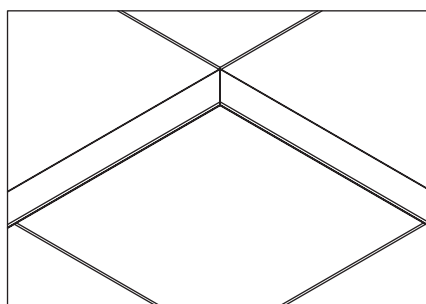

11 Place and align the flooring to the profile.