

MOX Systems - documentació tècnica

assembly-manual-revio-en.pdf

Traducció tècnica: consultar els dibuixos originals i pàgines de referència per a les dimensions.

Pàgina d'origen 1

GUIA DE MUNTATGE Revio

Aplicació amb adhesiu

- 1 Aplicar silicona o junta al perfil.
- 2 Fixeu el perfil al terra i premeu-lo.
- 3 Col·loqueu la catifa al perfil.

Aplicació amb cargol


- 11 Fixeu el perfil amb cargols.
- 2 Col·loqueu la catifa al perfil.

Köşe Birleşimleri


- 1 Perfils de tall de 45 graus per a cantonades internes.
- 2 Alineeu els perfils a les cantonades internes i col·loqueu-los a la junta.
- 3 Col·loqueu la catifa al perfil.
- 4 Perfils de tall de 45 graus per a cantonades exteriors.
- 5 Alineeu els perfils a les cantonades externes i col·loqueu-los a la junta.
- 6 Col·loqueu la catifa al perfil.

Dibuixos originals i pàgines de referència


Application with Adhesive

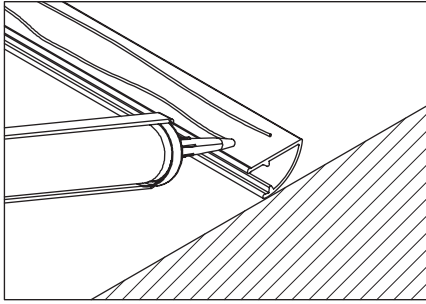

1 Apply silicone or joint to the profile.

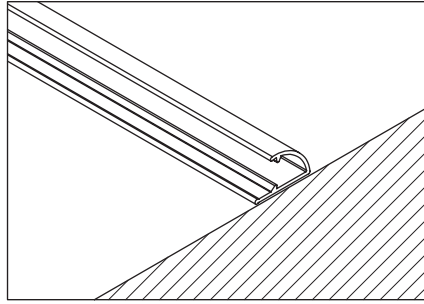


2 Fix the profile to the floor and press it.

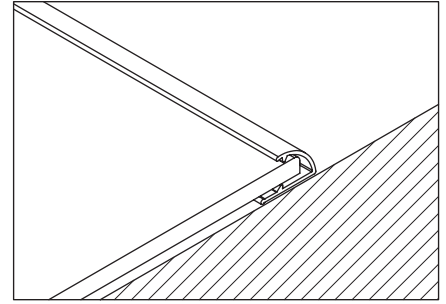


3 Place the carpet to the profile.

Application with Screw

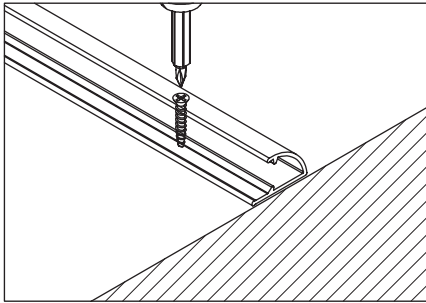


1 Fix the profile with screws.

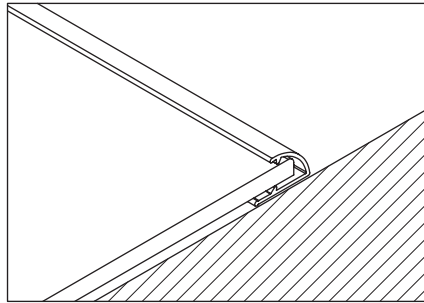


2 Place the carpet to the profile.


Köşe Birleşimleri

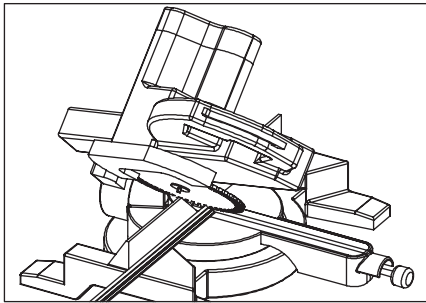


1 Cut profiles 45 degrees for internal corners.

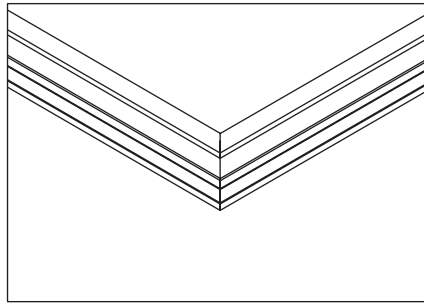


2 Align the profiles at the internal corners and place them into the joint.

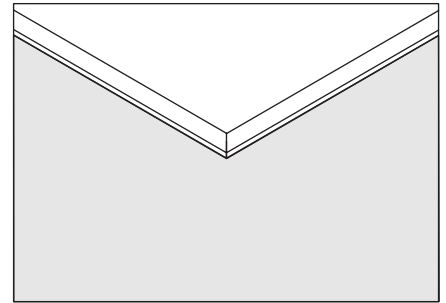


3 Place the carpet to the profile.

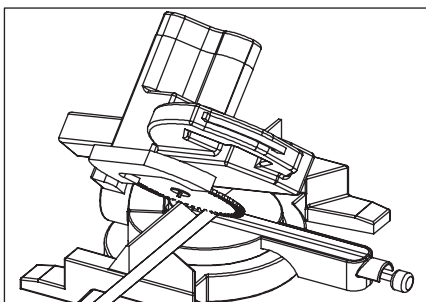

4 Cut profiles 45 degrees for external corners.

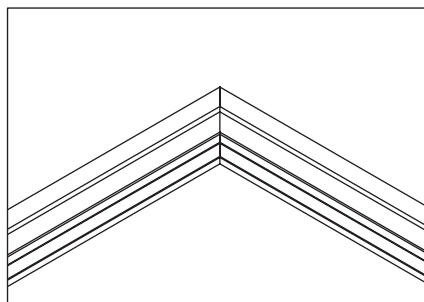

5 Align the profiles at the external corners and place them into the joint.

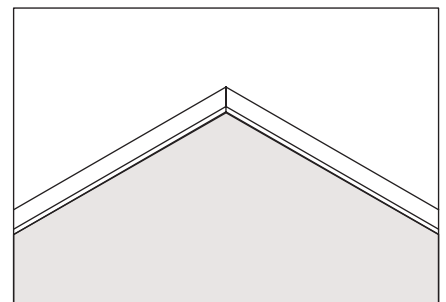

6 Place the carpet to the profile.