

MOX Systems - documentació tècnica

assembly-manual-velo-en.pdf

Traducció tècnica: consultar els dibuixos originals i pàgines de referència per a les dimensions.


Pàgina d'origen 1

GUIA DE MUNTATGE Velo


- 1 Premeu el silici a la manera de dues línies a la part posterior del perfil.
- 2 Enganxeu el perfil que heu premut el silici a la paret i premeu.
- 3 Enganxeu el perfil que heu enganxat a la paret a intervals de 50 cm.
- 4 Traieu les bandes que hi ha al perfil amb compte l'endemà.
- 5 Assegureu-vos que el perfil estigui ben enganxat a la paret.
- 6 Perfils de tall de 45 graus per a cantonades exteriors.
- 7 Enganxeu els perfils que heu tallat 45 graus a la paret de la manera que es tancaran entre si.
- 8 Assegureu-vos que els perfils que es tallen 45 graus estiguin totalment fixats entre si a les cantonades exteriors.
- 9 Perfils de tall de 45 graus per a cantonades internes.
- 10 Enganxeu els perfils que heu tallat 45 graus a la paret de la manera que es tancaran entre si.
- 11 Assegureu-vos que els perfils que es tallen 45 graus estiguin totalment fixats entre si a les cantonades internes.

Pàgina 1/1


Dibuixos originals i pàgines de referència

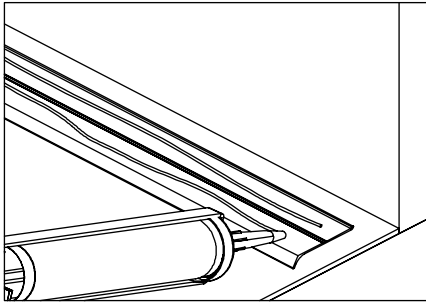


1 Squeeze the silicon in the manner of two lines to the back side of the profile.

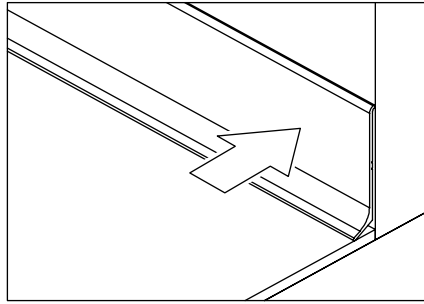


2 Paste the profile that you squeezed the silicon to the wall and press.

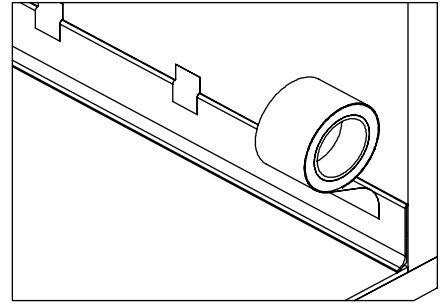


3 Tape the profile that you pasted to the wall at 50cm intervals.

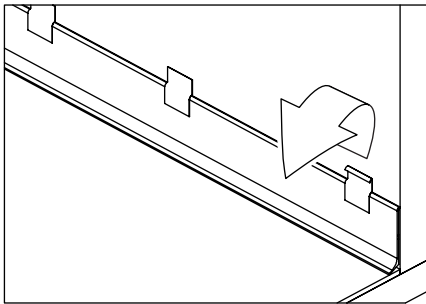


4 Remove the bands that on the profile heedfully the day after.

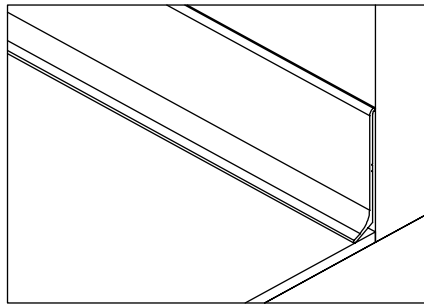


5 Make sure that the profile is stuck to the wall firmly.

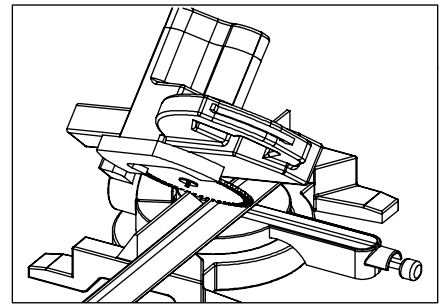


6 Cut profiles 45 degrees for external corners.

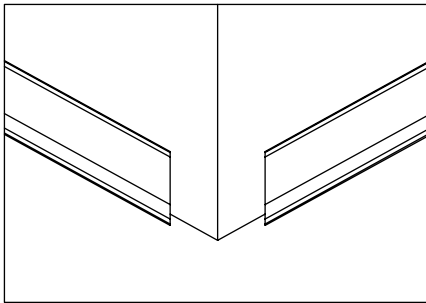


7 Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

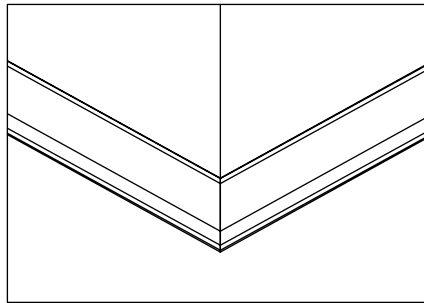


8 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the external corners.

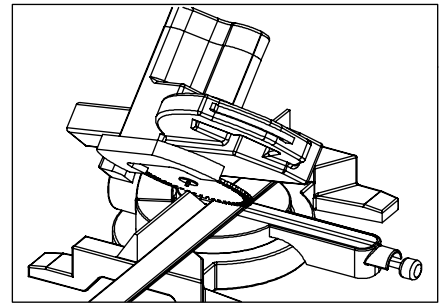

9 Cut profiles 45 degrees for internal corners.

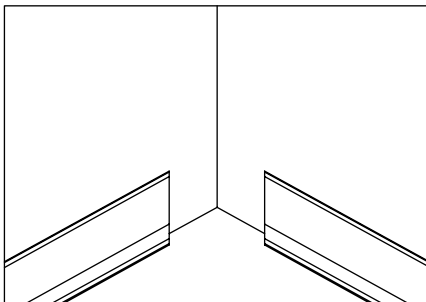

10 Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

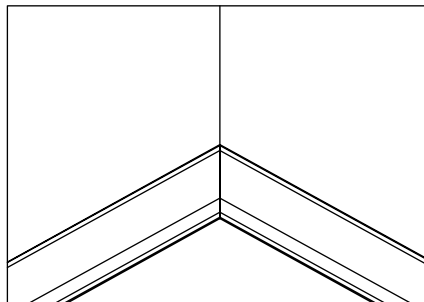

11 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the internal corners.