

MOX Systems - technická dokumentace

assembly-manual-mps-tb-en.pdf

Technický překlad: rozměry najdete na originálních výkresech a referenčních stránkách.

Zdrojová stránka 1

PRŮVODCE MONTÁŽÍ Mps-Tb

Vyberte správný profil podle tloušťky podlahy.

2 Naneste spáru a podle toho umístěte kotvu profilů.

3 Stiskněte profil, dokud nebude připevněn ke spoji.

4 Naneste spáru na místa, kde bude položena podlaha.

5 Umístěte a vyrovnejte podlahu k profilu.

6 Nařežte profily pod úhlem 45 stupňů pro vnější rohy.

Vyrovnejte profily na vnějších rozích a zatlačte je do spoje.

8 Umístěte a vyrovnejte podlahu k profilu.


9 Uřízněte profily pod úhlem 45 stupňů pro vnitřní rohy.

10 Zarovnejte profily na vnitřních rozích a zatlačte je do spoje.


11 Umístěte a vyrovnejte podlahu k profilu.

Strana 1/1


Původní výkresy a referenční stránky

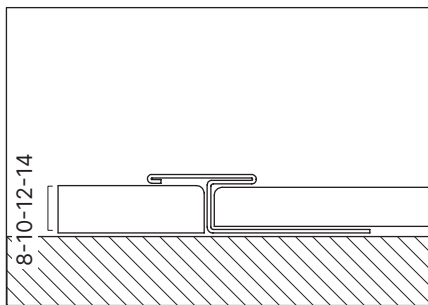


1 Pick the correct profile according to the flooring thickness.

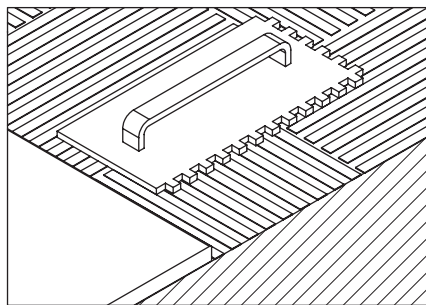


2 Apply joint and place the profiles anchor accordingly.

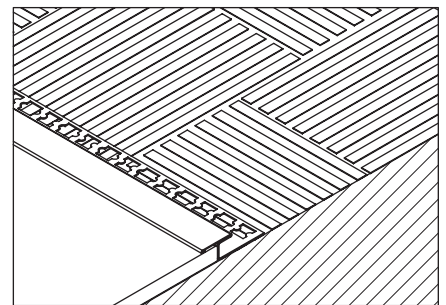


3 Press the profile until it is fixed to the joint.

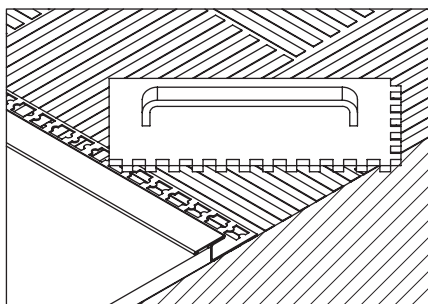


4 Apply joint to the places where the flooring will be placed.

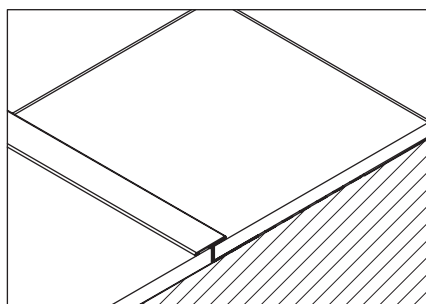


5 Place and align the flooring to the profile.

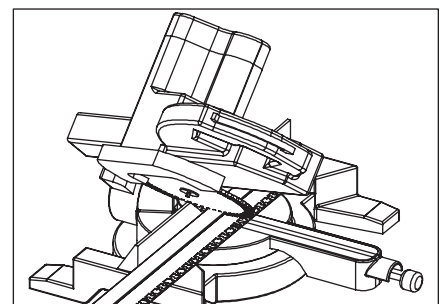


6 Cut profiles 45 degrees for external corners.

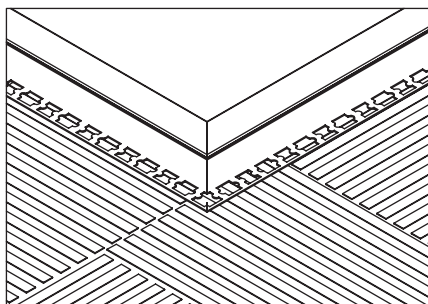


7 Align the profiles at the external corners and press them into the joint.

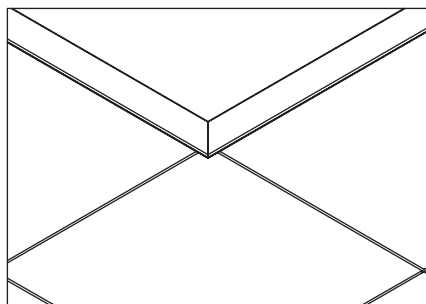


8 Place and align the flooring to the profile.

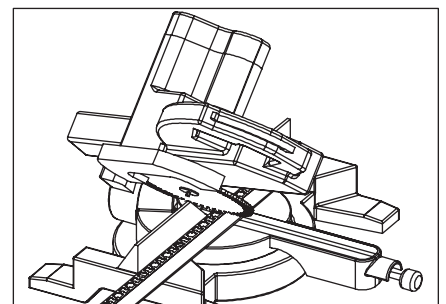

9 Cut profiles 45 degrees for internal corners.

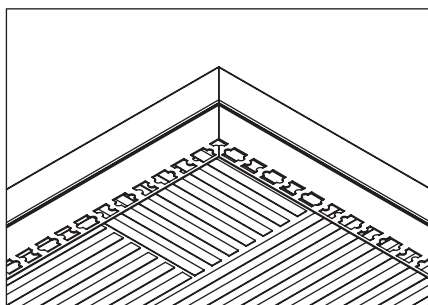

10 Align the profiles at the internal corners and press them into the joint.

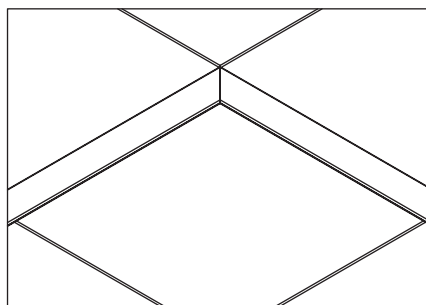

11 Place and align the flooring to the profile.