

# MOX Systems - technická dokumentace

assembly-manual-revio-en.pdf

Technický překlad: rozměry najdete na originálních výkresech a referenčních stránkách.

## Zdrojová stránka 1

PRŮVODCE MONTÁŽÍ Revio

Aplikace s lepidlem

- 1 Naneste silikon nebo spáru na profil.
- 2 Připevněte profil k podlaze a přitlačte.
- 3 Přiložte koberec k profilu.

Aplikace se šroubem


- 11 Upevněte profil šrouby.
- 2 Přiložte koberec k profilu.

Köşe Birleşimleri


- 1 Uřízněte profily pod úhlem 45 stupňů pro vnitřní rohy.
- 2 Zarovnejte profily na vnitřních rozích a umístěte je do spoje.
- 3 Přiložte koberec k profilu.
- 4 Nařežte profily pod úhlem 45 stupňů pro vnější rohy.
- 5 Zarovnejte profily na vnějších rozích a umístěte je do spoje.
- 6 Přiložte koberec k profilu.

## Původní výkresy a referenční stránky


## Application with Adhesive

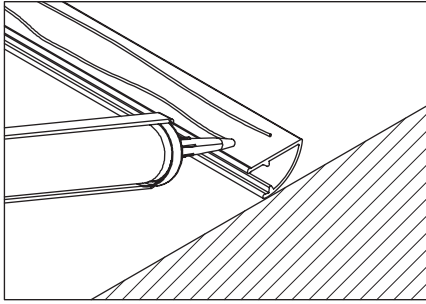

1 Apply silicone or joint to the profile.

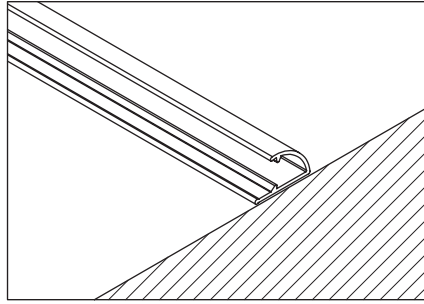


2 Fix the profile to the floor and press it.

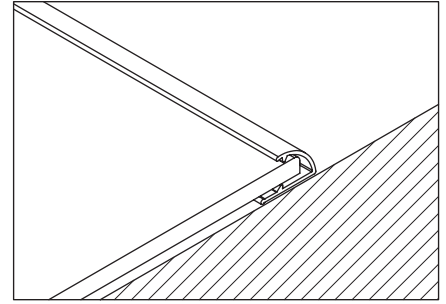


3 Place the carpet to the profile.

## Application with Screw

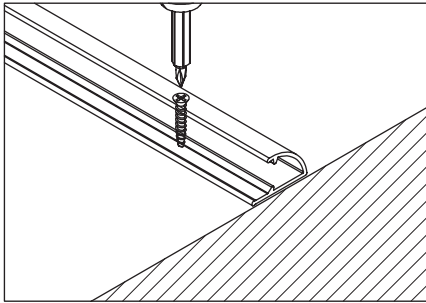


1 Fix the profile with screws.

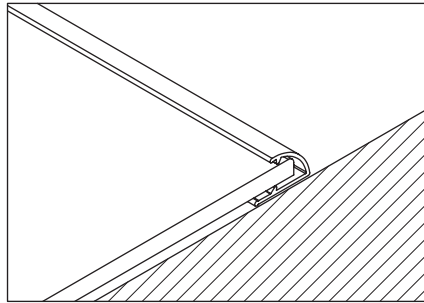


2 Place the carpet to the profile.


## Köşe Birleşimleri

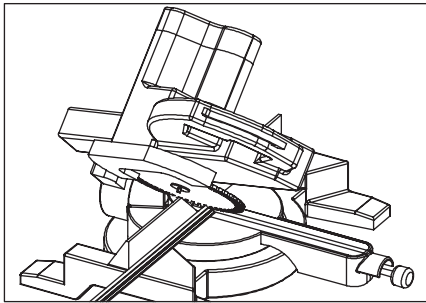


1 Cut profiles 45 degrees for internal corners.

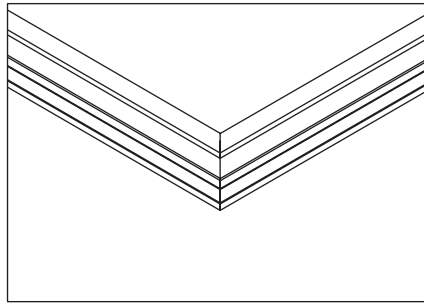


2 Align the profiles at the internal corners and place them into the joint.

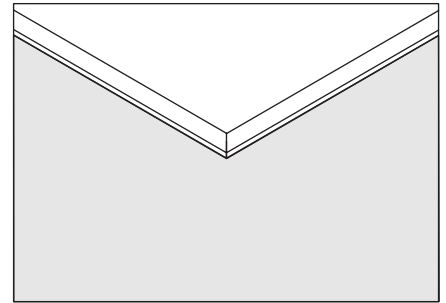


3 Place the carpet to the profile.

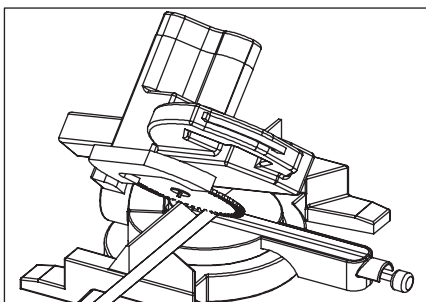

4 Cut profiles 45 degrees for external corners.

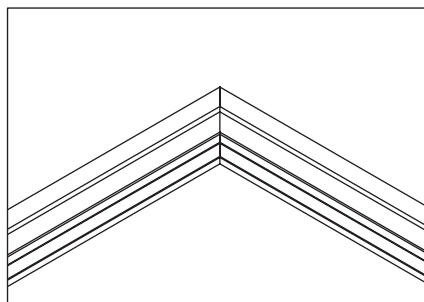

5 Align the profiles at the external corners and place them into the joint.

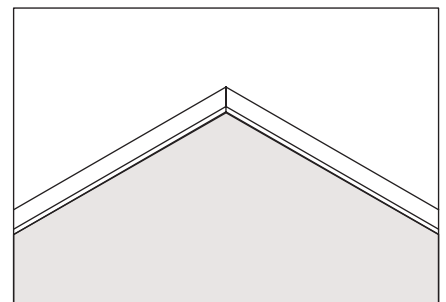

6 Place the carpet to the profile.