

MOX Systems - technická dokumentace

assembly-manual-round-fix-en.pdf

Technický překlad: rozměry najdete na originálních výkresech a referenčních stránkách.


Zdrojová stránka 1

NÁVOD NA MONTÁŽ Round-Fix


- 1 Vyberte správný profil podle tloušťky dlaždice.
- 2 Naneste spáru a podle toho umístěte kotvu profilů.
- 3 Stiskněte profil, dokud nebude připevněn ke spoji.
- 4 Naneste spáru na místa, kde bude umístěna keramika.
- 5 Položte dlaždice na profil a ujistěte se, že jejich okraje lícují s profilem a lícují.
- 6 Odřízněte dva profily pod úhlem 45 stupňů pro rohové spoje.
- 7 Zarovnejte profily na vnitřních rozích a zatlačte je do spoje. 10
- 8 Položte dlaždice na profil a ujistěte se, že jejich okraje lícují s profilem a lícují.

Strana 1/1


Původní výkresy a referenční stránky

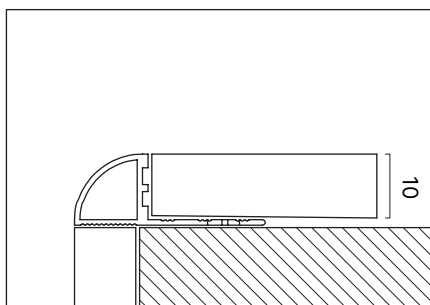


1 Pick the correct profile according to the tile thickness.

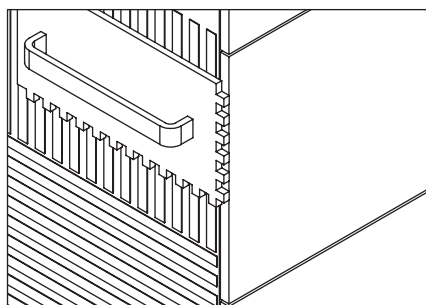


2 Apply joint and place the profiles anchor accordingly.

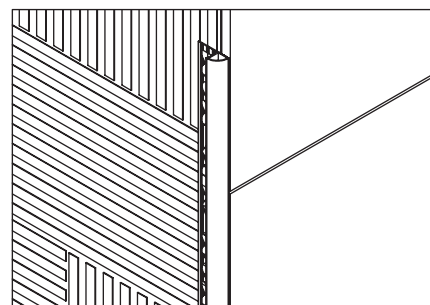


3 Press the profile until it is fixed to the joint.

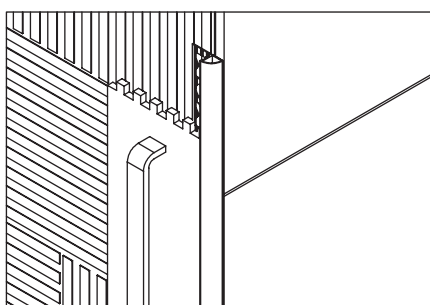


4 Apply joint to the places where the ceramics will be placed.

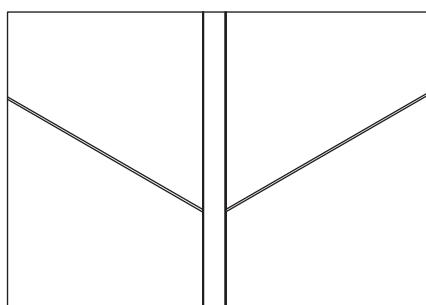


5 Place the tiles on the profile, making sure that their edges fit the profile and are flush.

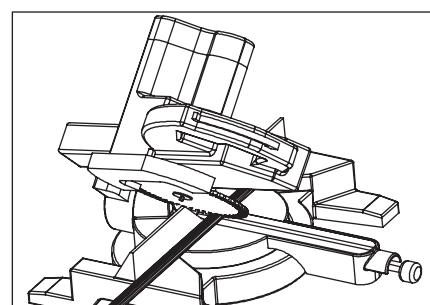

6 Cut two profiles at 45 degrees for corner joints.

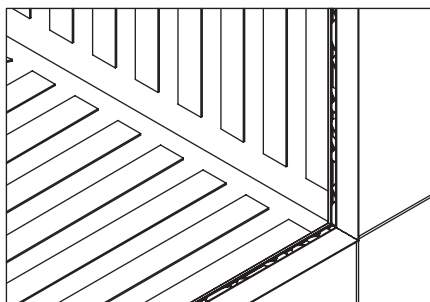

7 Align the profiles at the internal corners and press them into the joint.

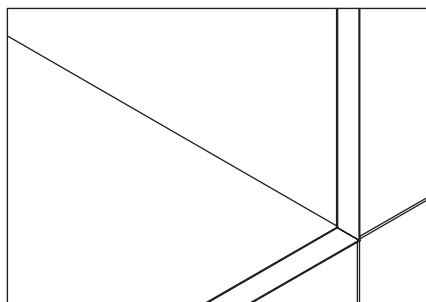

8 Place the tiles on the profile, making sure that their edges fit the profile and are flush.