

MOX Systems - technická dokumentace

assembly-manual-visio-en.pdf

Technický překlad: rozměry najdete na originálních výkresech a referenčních stránkách.


Zdrojová stránka 1

PRŮVODCE MONTÁŽÍ Visio


- 1 Vyberte správný profil podle tloušťky podlahy.
- 2 Naneste spáru a podle toho umístěte kotvu profilů.
- 3 Stiskněte profil, dokud nebude připevněn ke spoji.
- 4 Přiložte koberec k profilu.
- 5 Nařežte profily pod úhlem 45 stupňů pro vnější rohy.
- 6 Zarovnejte profily na vnějších rozích a umístěte je do spoje.
- 7 Přiložte koberec k profilu.
- 8 Uřízněte profily pod úhlem 45 stupňů pro vnitřní rohy.
- 9 Zarovnejte profily na vnitřních rozích a umístěte je do spoje.
- 10 Přiložte koberec k profilu. 6 8

Strana 1/1


Původní výkresy a referenční stránky

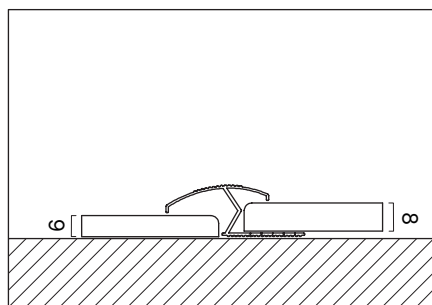


1 Pick the correct profile according to the flooring thickness.

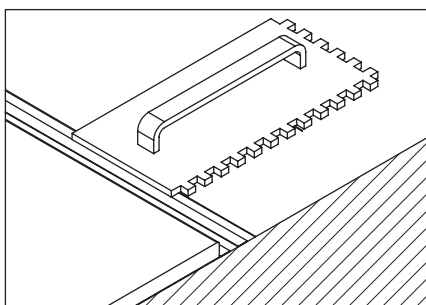


2 Apply joint and place the profiles anchor accordingly.

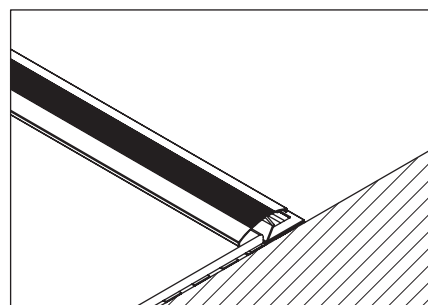


3 Press the profile until it is fixed to the joint.

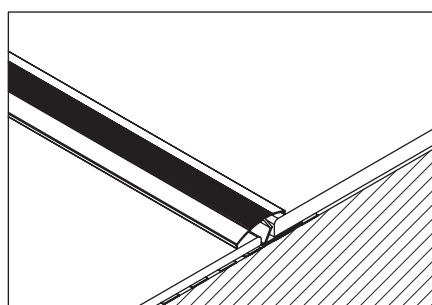


4 Place the carpet to the profile.

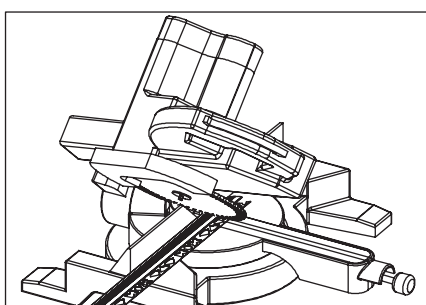


5 Cut profiles 45 degrees for external corners.

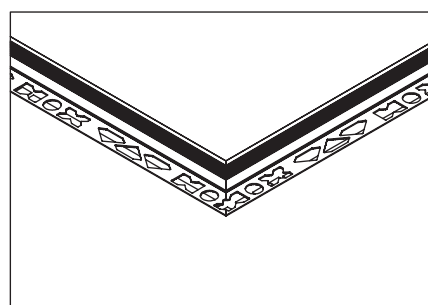


6 Align the profiles at the external corners and place them into the joint.

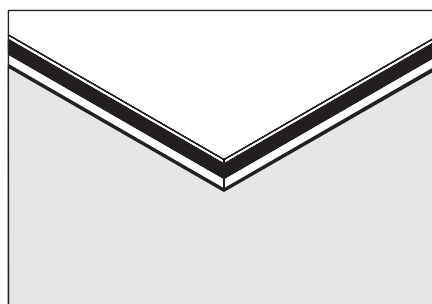


7 Place the carpet to the profile.

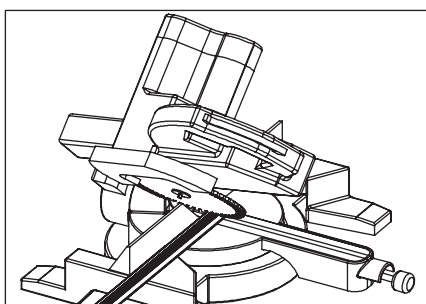

8 Cut profiles 45 degrees for internal corners.

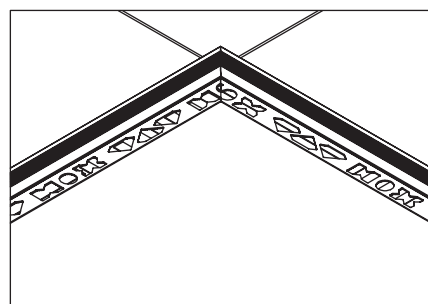

9 Align the profiles at the internal corners and place them into the joint.

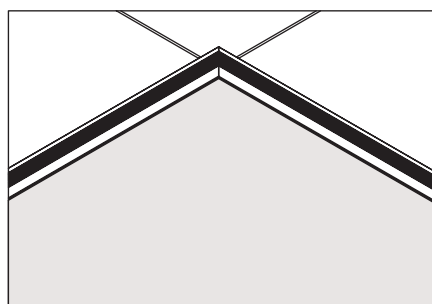

10 Place the carpet to the profile.