

MOX Systems - teknisk dokumentation

assembly-manual-crispo-en.pdf

Teknisk oversættelse: Se de originale tegninger og referencesider for dimensioner.


Kilde side 1

Crispo MONTERINGSVEJLEDNING


- 1 Placer vægfikseringsværktøjerne med 50 cm mellemrum og marker væggen fra skruehullerne.
- 2 Bor i de punkter, du allerede har markeret.
- 3 Placer de korrekte dyvler i henhold til vægmaterialet i de borede huller.
- 4 Skru vægfikseringsværktøjerne fast på de steder, der bores med 50 cm mellemrum.
- 5 Saml profilen på vægfikseringsværktøjerne ligesom på billedet.
- 6 Sørg for, at profilsømmene og fikseringsværktøjets søm er helt forbundet med hinanden, og sørg for, at profilsålen er fastgjort til gulvet.
- 7 Skære profiler 45 grader til udvendige hjørner.
- 8 Fastgør vægfikseringsværktøjerne på den måde, der lukkes til hjørnerne, og saml profilerne, som du skærer 45 grader på.
- 9 Sørg for, at profilerne, der er skåret 45 grader, er fastgjort fuldstændigt til hinanden i de udvendige hjørner.
- 10 Skære profiler 45 grader til indvendige hjørner.
- 11 Fastgør vægfikseringsværktøjerne på den måde, der lukkes til hjørnerne, og saml profilerne, som du skærer 45 grader på.
- 12 Sørg for, at profilerne, der er skåret 45 grader, er fastgjort til hinanden helt i de indvendige hjørner.

Side 1/1


Originale tegninger og referencesider

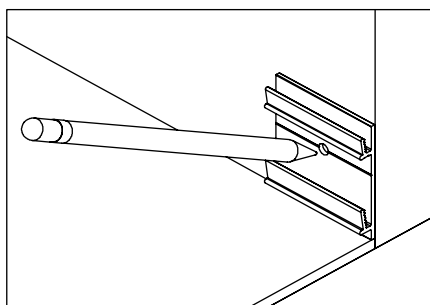


1 Place the wall fixation tools at 50cm intervals and mark the wall from the screw holes.

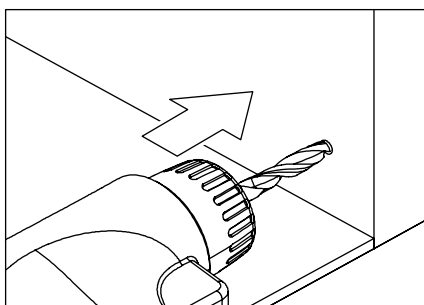


2 Drill the points that you have already marked.

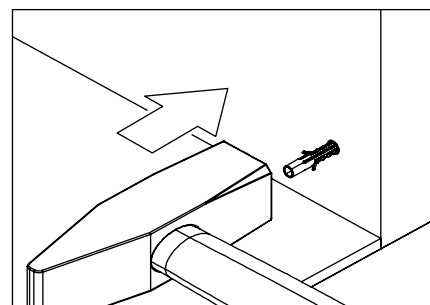


3 Place the correct dowels according to the wall material into the drilled holes.

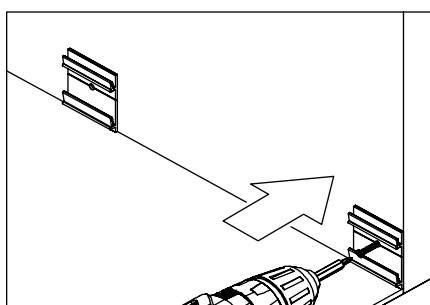


4 Screw the wall fixation tools to the places that are drilled at 50cm intervals.

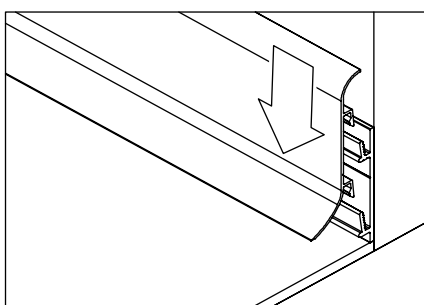


5 Assemble the profile on the wall fixation tools just like in the picture.

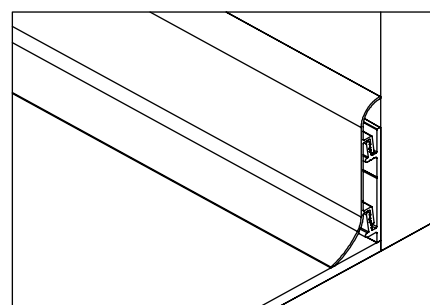


6 Make sure that the profile nails and the fixation tool's nails are completely connected to each other and be sure that the profile sole is fixed to the floor.

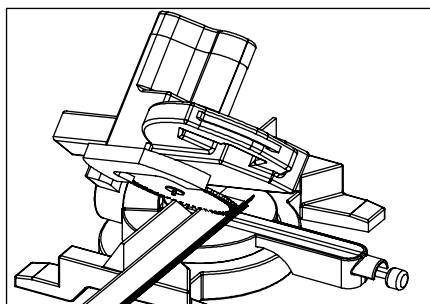


7 Cut profiles 45 degrees for external corners.

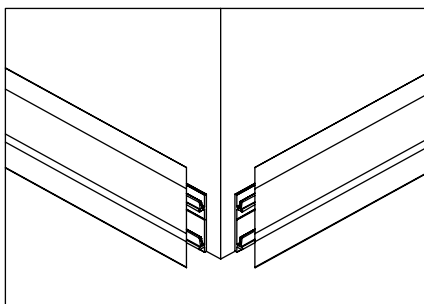


8 Affix the wall fixation tools in the manner that will be closed to the corners and assemble the profiles that you cut 45 degrees on it.

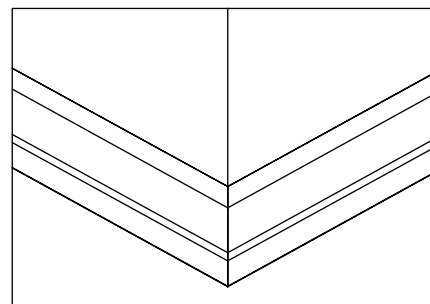


9 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the external corners.

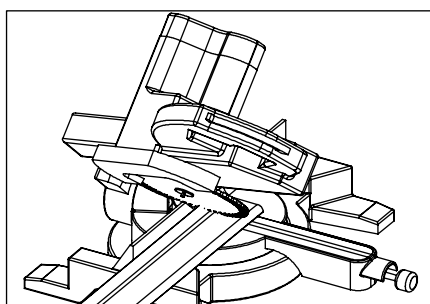

10 Cut profiles 45 degrees for internal corners.

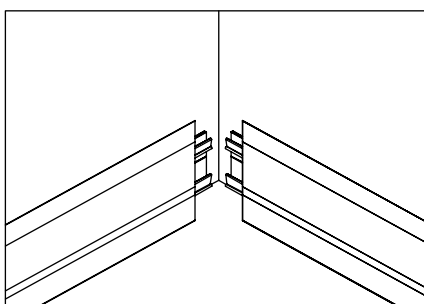

11 Affix the wall fixation tools in the manner that will be closed to the corners and assemble the profiles that you cut 45 degrees on it.

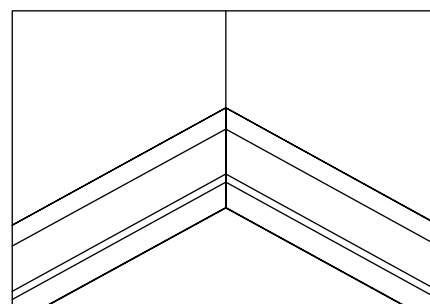

12 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the internal corners.