

MOX Systems - teknisk dokumentation

assembly-manual-mps-yd-en.pdf

Teknisk oversættelse: Se de originale tegninger og referencesider for dimensioner.

Kilde side 1

Mps-Yd MONTERINGSVEJLEDNING

Vælg den korrekte profil i henhold til gulvtykkelsen.

2 Påfør samling og anbring profilernes forankring i overensstemmelse hermed.

3 Tryk på profilen, indtil den er fastgjort til samlingen.

4 Påfør fugen på de steder, hvor gulvbelægningen skal placeres.

5 Placer og juster gulvbelægningen til profilen.


6 Skær profiler 45 grader til hjørner.

7 Juster profilerne i hjørnerne og pres dem ind i samlingen. 41-21-01-8


8 Placer og juster gulvbelægningen til profilen.

Side 1/1


Originale tegninger og referencesider

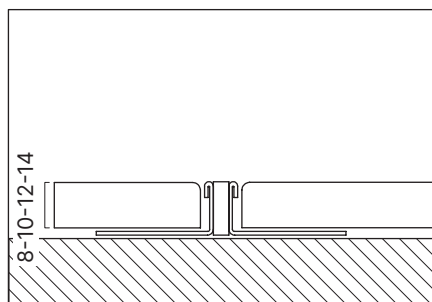


1 Pick the correct profile according to the flooring thickness.

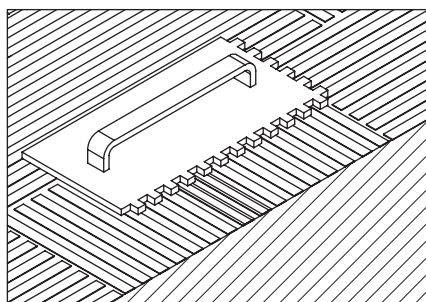


2 Apply joint and place the profiles anchor accordingly.

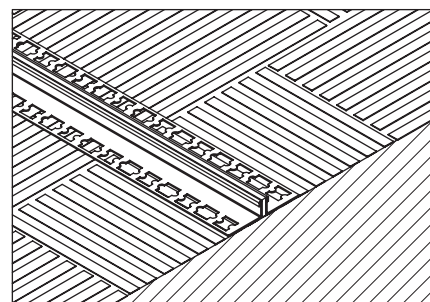


3 Press the profile until it is fixed to the joint.

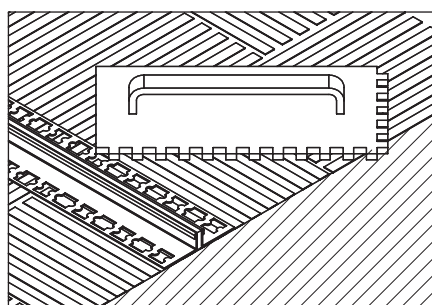


4 Apply joint to the places where the flooring will be placed.

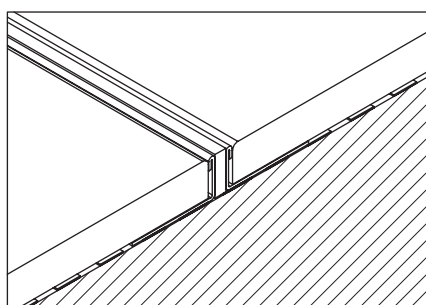


5 Place and align the flooring to the profile.

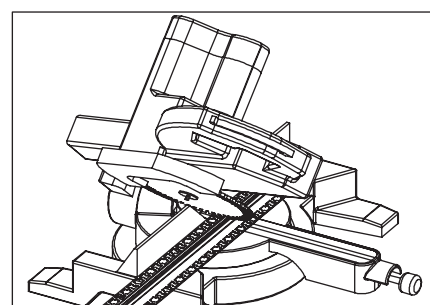

6 Cut profiles 45 degrees for corners.

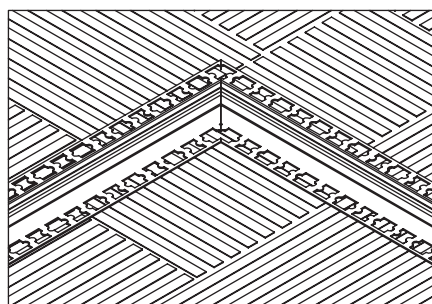

7 Align the profiles at the corners and press them into the joint.

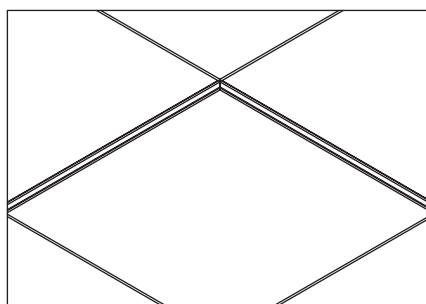

8 Place and align the flooring to the profile.