

MOX Systems - teknisk dokumentation

assembly-manual-revio-en.pdf

Teknisk oversættelse: Se de originale tegninger og referencesider for dimensioner.

Kilde side 1

Revio MONTERINGSVEJLEDNING

Påføring med klæbemiddel

- 1 Påfør silikone eller fuge på profilen.
- 2 Fastgør profilen til gulvet og tryk den.
- 3 Placer tæppet på profilen.

Påføring med skrue


- 11 Fastgør profilen med skruer.
- 2 Placer tæppet til profilen.

Köşe Birleşimleri


- 1 Skær profiler 45 grader til indvendige hjørner.
- 2 Juster profilerne ved de indvendige hjørner og placer dem i samlingen.
- 3 Placer tæppet på profilen.
- 4 Skære profiler 45 grader til udvendige hjørner.
- 5 Juster profilerne ved de udvendige hjørner og placer dem i samlingen.
- 6 Placer tæppet til profilen.

Originale tegninger og referencesider


Application with Adhesive

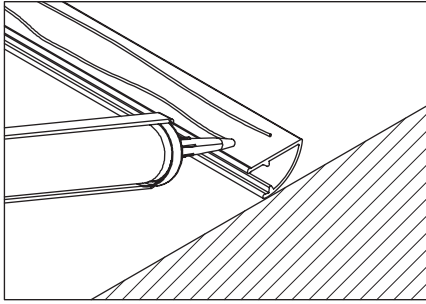

1 Apply silicone or joint to the profile.

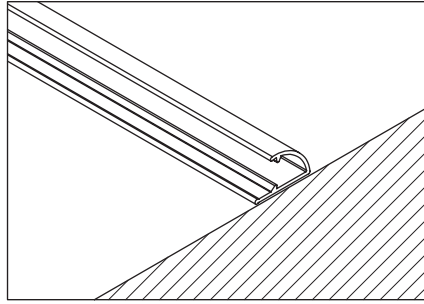


2 Fix the profile to the floor and press it.

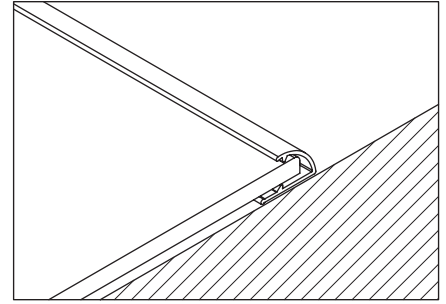


3 Place the carpet to the profile.

Application with Screw

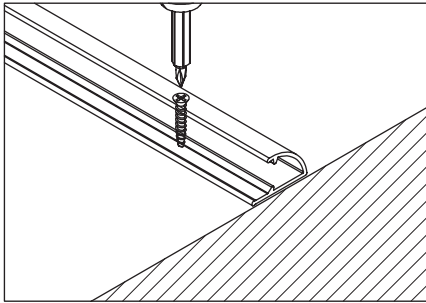


1 Fix the profile with screws.

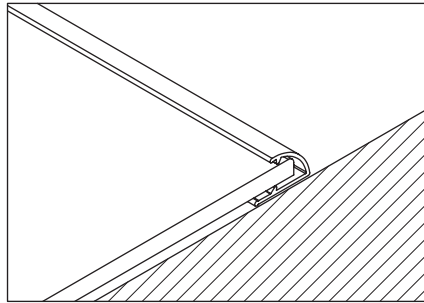


2 Place the carpet to the profile.


Köşe Birleşimleri

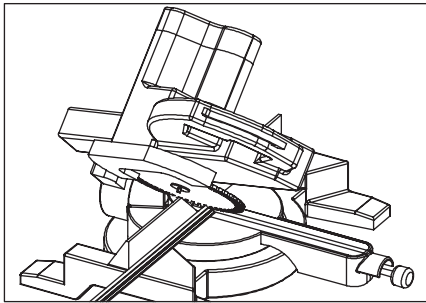


1 Cut profiles 45 degrees for internal corners.

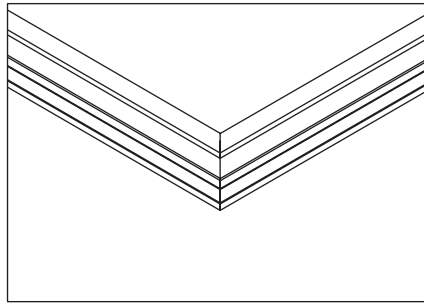


2 Align the profiles at the internal corners and place them into the joint.

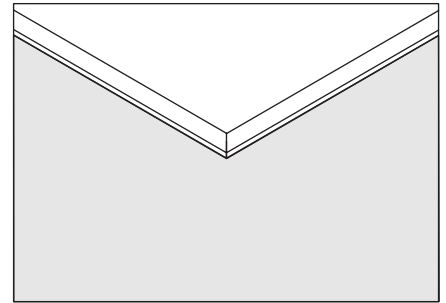


3 Place the carpet to the profile.

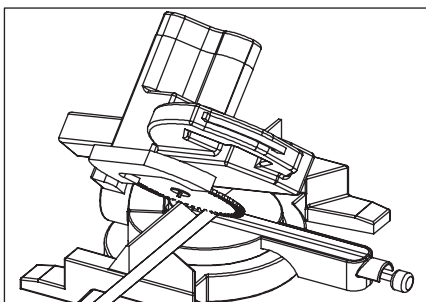

4 Cut profiles 45 degrees for external corners.

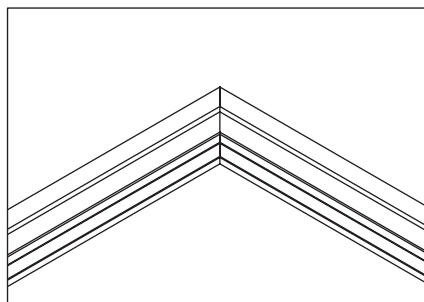

5 Align the profiles at the external corners and place them into the joint.

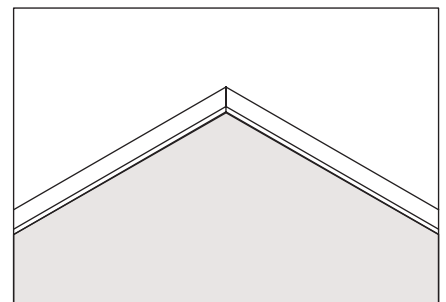

6 Place the carpet to the profile.