

MOX Systems - teknisk dokumentation

assembly-manual-visio-en.pdf

Teknisk oversættelse: Se de originale tegninger og referencesider for dimensioner.


Kilde side 1

Visio MONTERINGSVEJLEDNING


- 1 Vælg den korrekte profil i henhold til gulvtykkelsen.
- 2 Påfør samling og anbring profilernes forankring i overensstemmelse hermed.
- 3 Tryk på profilen, indtil den er fastgjort til samlingen.
- 4 Placer tæppet på profilen.
- 5 Skære profiler 45 grader til udvendige hjørner.
- 6 Juster profilerne ved de udvendige hjørner og placer dem i samlingen.
- 7 Placer tæppet til profilen.
- 8 Skære profiler 45 grader til indvendige hjørner.
- 9 Juster profilerne ved de indvendige hjørner og placer dem i samlingen.
- 10 Placer tæppet til profilen. 6 8

Side 1/1


Originale tegninger og referencesider

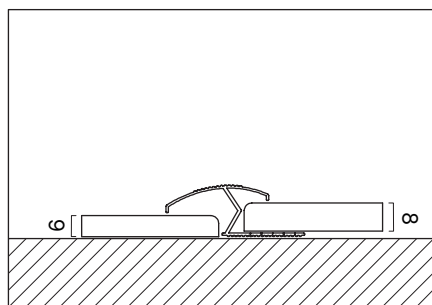


1 Pick the correct profile according to the flooring thickness.

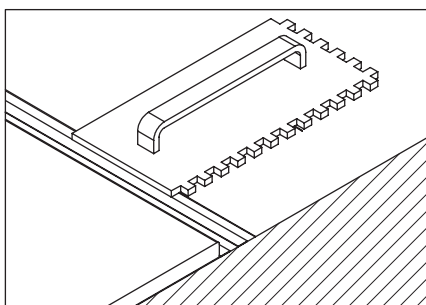


2 Apply joint and place the profiles anchor accordingly.

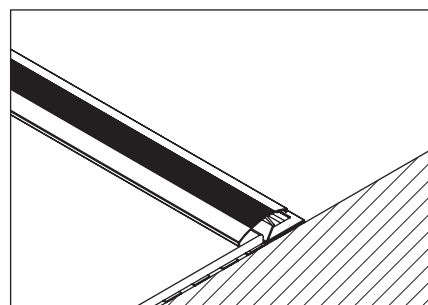


3 Press the profile until it is fixed to the joint.

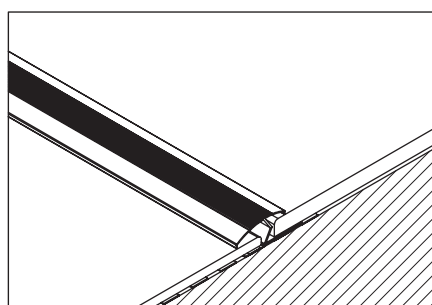


4 Place the carpet to the profile.

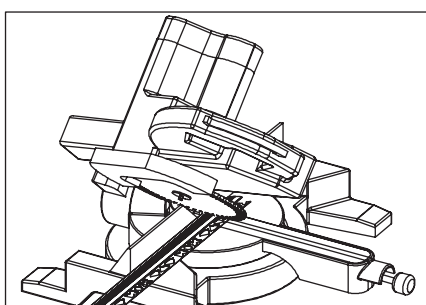


5 Cut profiles 45 degrees for external corners.

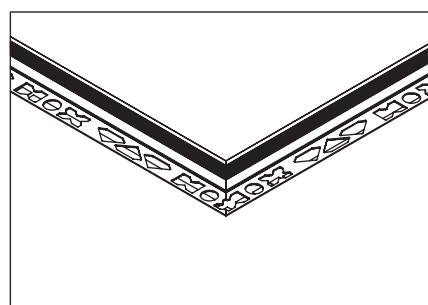


6 Align the profiles at the external corners and place them into the joint.

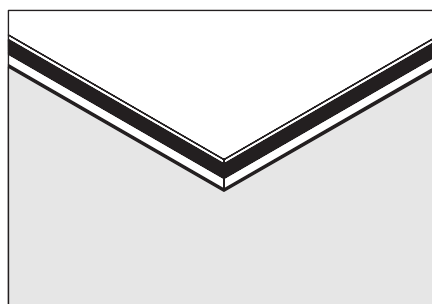


7 Place the carpet to the profile.

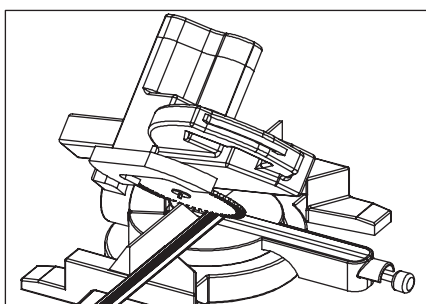

8 Cut profiles 45 degrees for internal corners.

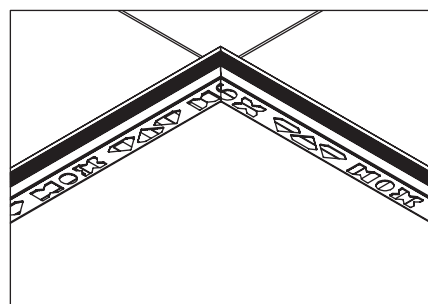

9 Align the profiles at the internal corners and place them into the joint.

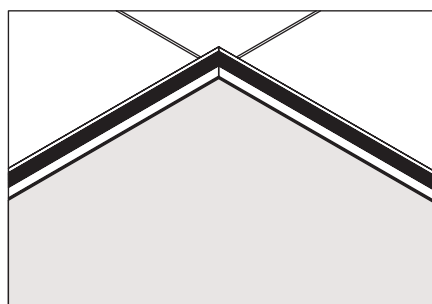

10 Place the carpet to the profile.