

MOX Systems - technische Dokumentation

assembly-manual-mps-yd-en.pdf

Technische Übersetzung: Die Abmessungen finden Sie in den Originalzeichnungen und Referenzseiten.

Quellseite 1

MPS-YD MONTAGEANLEITUNG

Wählen Sie je nach Bodenbelagsstärke das richtige Profil.

2 Fuge anbringen und Profilanker entsprechend platzieren.

3 Drücken Sie das Profil, bis es an der Verbindung befestigt ist.

4 Tragen Sie die Fuge an den Stellen auf, an denen der Bodenbelag verlegt werden soll.

5 Den Bodenbelag auf das Profil legen und ausrichten.


6 Profile im 45-Grad-Winkel für Ecken schneiden.

7 Richten Sie die Profile an den Ecken aus und drücken Sie sie in die Fuge. 41-21-01-8


8 Den Bodenbelag auf das Profil legen und ausrichten.

Seite 1/1


Originalzeichnungen und Referenzseiten

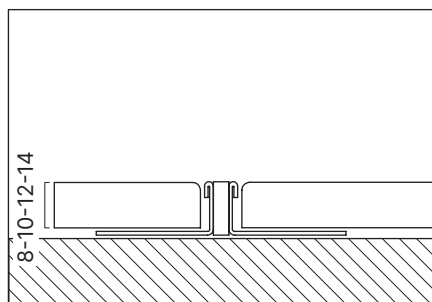


1 Pick the correct profile according to the flooring thickness.

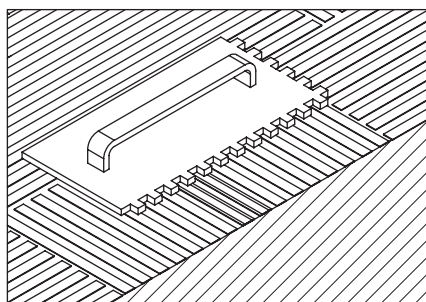


2 Apply joint and place the profiles anchor accordingly.

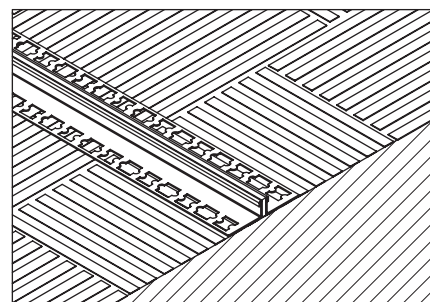


3 Press the profile until it is fixed to the joint.

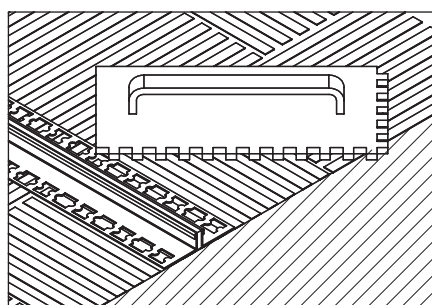


4 Apply joint to the places where the flooring will be placed.

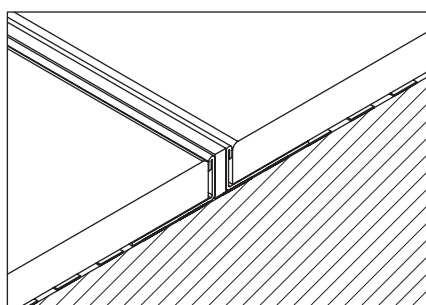


5 Place and align the flooring to the profile.

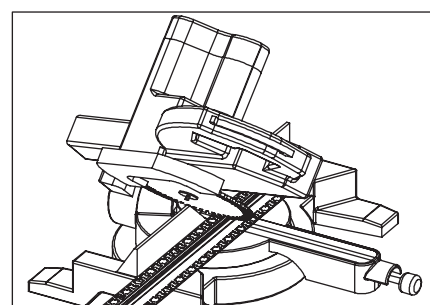

6 Cut profiles 45 degrees for corners.

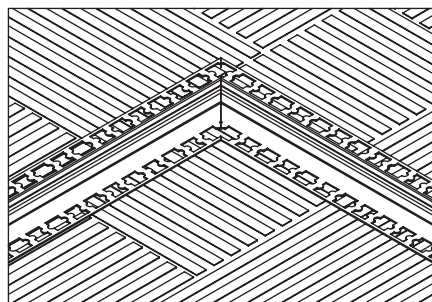

7 Align the profiles at the corners and press them into the joint.

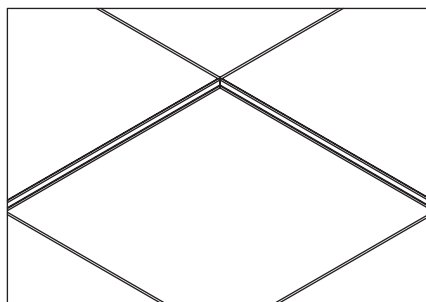

8 Place and align the flooring to the profile.