

MOX Systems - technische Dokumentation

assembly-manual-revio-en.pdf

Technische Übersetzung: Die Abmessungen finden Sie in den Originalzeichnungen und Referenzseiten.

Quellseite 1

Revio MONTAGEANLEITUNG

Anwendung mit Klebstoff

- 1 Silikon oder Fuge auf das Profil auftragen.
- 2 Befestigen Sie das Profil am Boden und drücken Sie es fest.
- 3 Legen Sie den Teppich auf das Profil.

Anwendung mit Schraube


- 11 Befestigen Sie das Profil mit Schrauben.
- 2 Legen Sie den Teppich auf das Profil.

Köşe Birleşimleri


- 1 Profile im 45-Grad-Winkel für Innenecken zuschneiden.
- 2 Profile an den Innenecken ausrichten und in die Fuge einlegen.
- 3 Legen Sie den Teppich auf das Profil.
- 4 Profile im 45-Grad-Winkel für Außenecken zuschneiden.
- 5 Richten Sie die Profile an den Außenecken aus und legen Sie sie in die Fuge.
- 6 Legen Sie den Teppich auf das Profil.

Originalzeichnungen und Referenzseiten


Application with Adhesive

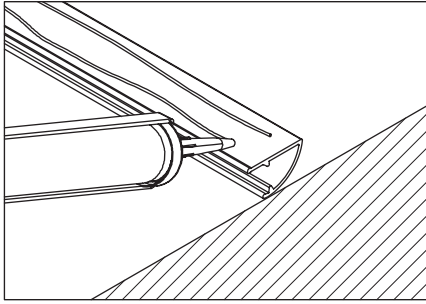

1 Apply silicone or joint to the profile.

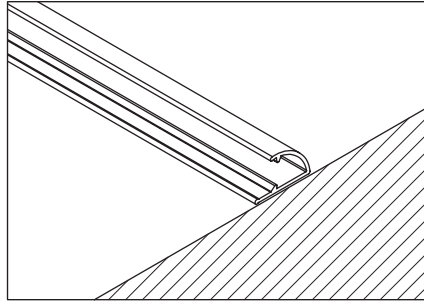


2 Fix the profile to the floor and press it.

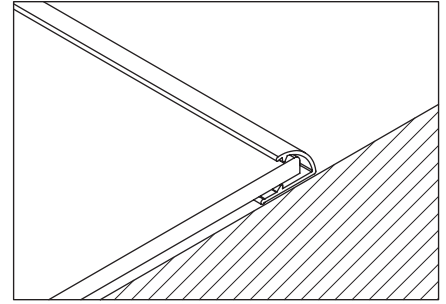


3 Place the carpet to the profile.

Application with Screw

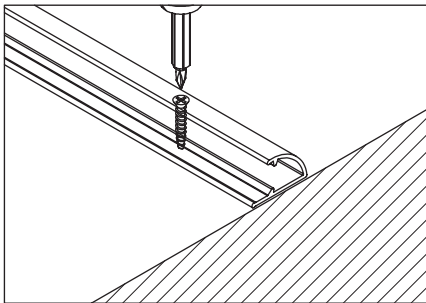


1 Fix the profile with screws.

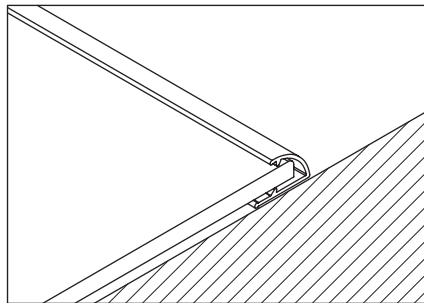


2 Place the carpet to the profile.


Köşe Birleşimleri

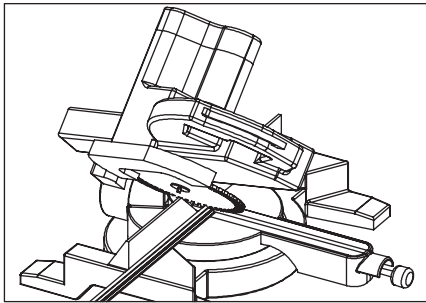


1 Cut profiles 45 degrees for internal corners.

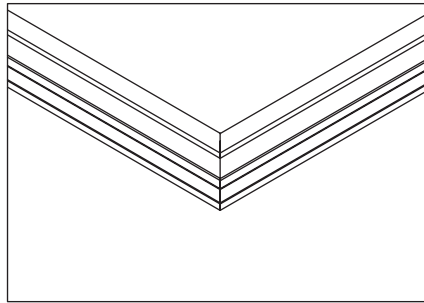


2 Align the profiles at the internal corners and place them into the joint.

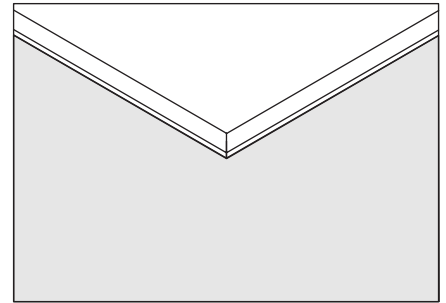


3 Place the carpet to the profile.

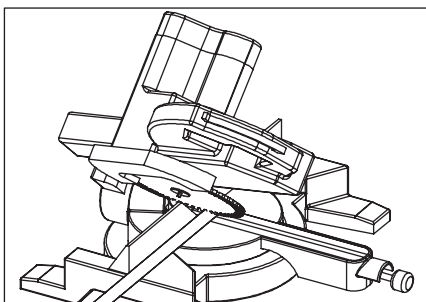

4 Cut profiles 45 degrees for external corners.

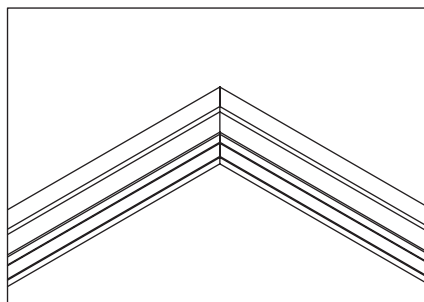

5 Align the profiles at the external corners and place them into the joint.

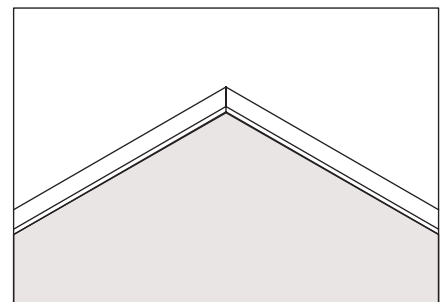

6 Place the carpet to the profile.