

# MOX Systems - technische Dokumentation

assembly-manual-velo-en.pdf

Technische Übersetzung: Die Abmessungen finden Sie in den Originalzeichnungen und Referenzseiten.


## Quelle Seite 1

### Velo MONTAGEANLEITUNG


- 1 Drücken Sie das Silikon in zwei Linien auf die Rückseite des Profils.
- 2 Kleben Sie das Profil, auf das Sie das Silikon gedrückt haben, an die Wand und drücken Sie es fest.
- 3 Kleben Sie das Profil, das Sie geklebt haben, im Abstand von 50 cm an die Wand.
- 4 Entfernen Sie am nächsten Tag vorsichtig die Klebestreifen vom Profil.
- 5 Stellen Sie sicher, dass das Profil fest an der Wand haftet.
- 6 Profile im 45-Grad-Winkel für Außenecken schneiden.
- 7 Fügen Sie die Profile, die Sie zugeschnitten haben, im 45-Grad-Winkel so an der Wand ein, dass sie eng aneinander anliegen.
- 8 Stellen Sie sicher, dass die im 45-Grad-Winkel geschnittenen Profile an den Außenecken vollständig miteinander verbunden sind.
- 9 Profile im 45-Grad-Winkel für Innenecken schneiden.
- 10 Fügen Sie die Profile, die Sie zugeschnitten haben, im 45-Grad-Winkel so an der Wand ein, dass sie eng aneinander anliegen.
- 11 Stellen Sie sicher, dass die im 45-Grad-Winkel geschnittenen Profile an den Innenecken vollständig miteinander verbunden sind.

Seite 1/1


# Originalzeichnungen und Referenzseiten

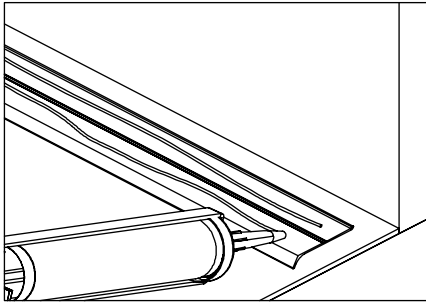


**1** Squeeze the silicon in the manner of two lines to the back side of the profile.

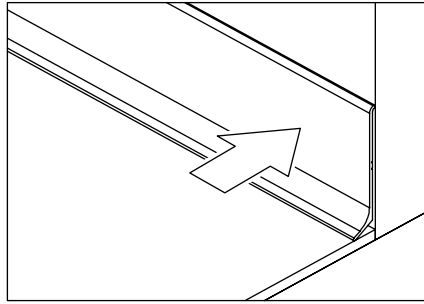


**2** Paste the profile that you squeezed the silicon to the wall and press.

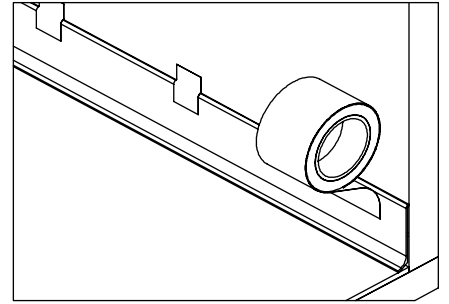


**3** Tape the profile that you pasted to the wall at 50cm intervals.

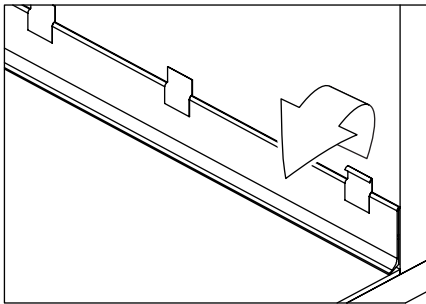


**4** Remove the bands that on the profile heedfully the day after.

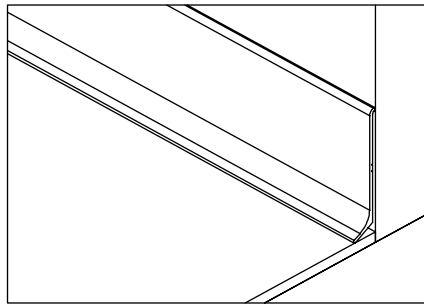


**5** Make sure that the profile is stuck to the wall firmly.

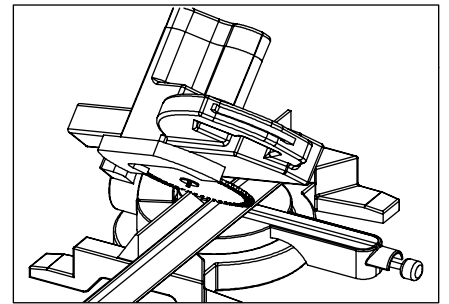


**6** Cut profiles 45 degrees for external corners.

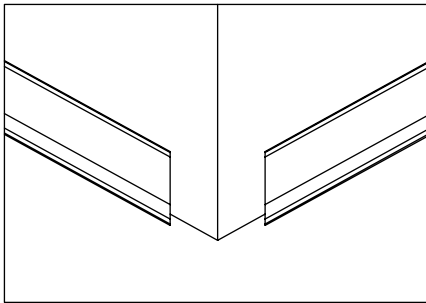


**7** Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

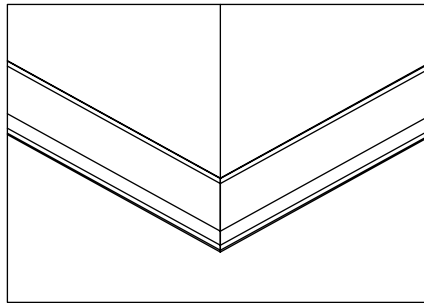


**8** Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the external corners.

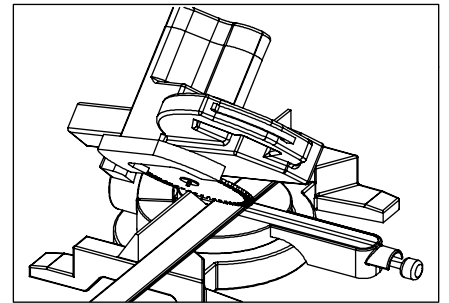

**9** Cut profiles 45 degrees for internal corners.

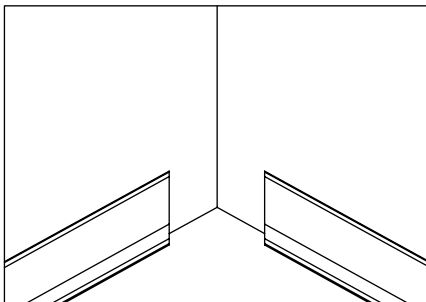

**10** Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

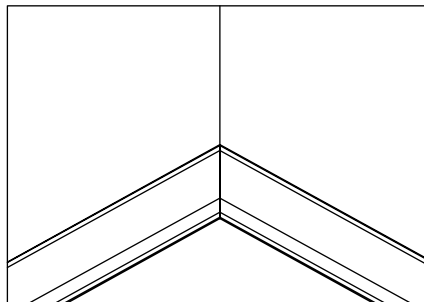

**11** Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the internal corners.