

MOX Systems - technische Dokumentation

assembly-manual-visio-en.pdf

Technische Übersetzung: Die Abmessungen finden Sie in den Originalzeichnungen und Referenzseiten.


Quellseite 1

Visio MONTAGEANLEITUNG


- 1 Wählen Sie das richtige Profil entsprechend der Bodenbelagsstärke.
- 2 Fuge anbringen und Profilanker entsprechend platzieren.
- 3 Drücken Sie das Profil, bis es an der Verbindung befestigt ist.
- 4 Legen Sie den Teppich auf das Profil.
- 5 Profile im 45-Grad-Winkel für Außenecken zuschneiden.
- 6 Richten Sie die Profile an den Außenecken aus und legen Sie sie in die Fuge.
- 7 Legen Sie den Teppich auf das Profil.
- 8 Profile im 45-Grad-Winkel für Innenecken schneiden.
- 9 Richten Sie die Profile an den Innenecken aus und legen Sie sie in die Fuge.
- 10 Legen Sie den Teppich auf das Profil. 6 8

Seite 1/1


Originalzeichnungen und Referenzseiten

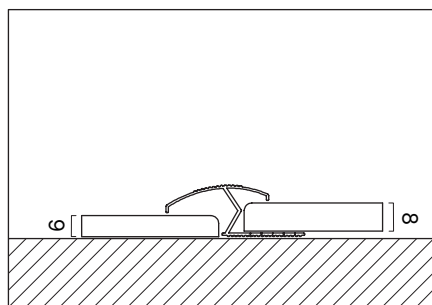


1 Pick the correct profile according to the flooring thickness.

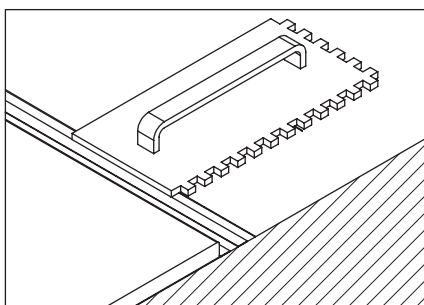


2 Apply joint and place the profiles anchor accordingly.

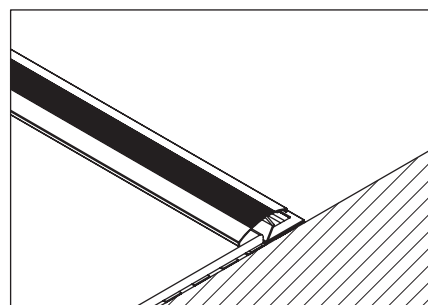


3 Press the profile until it is fixed to the joint.

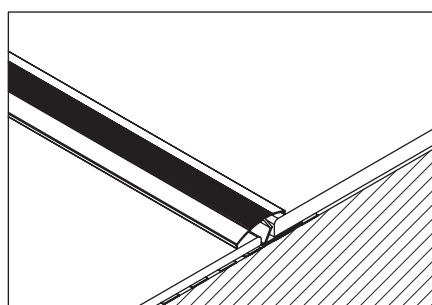


4 Place the carpet to the profile.

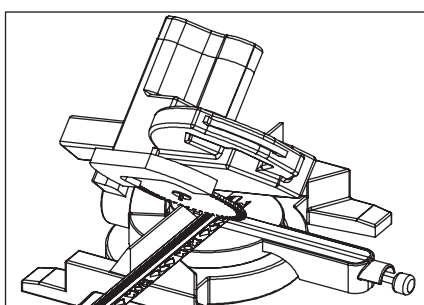


5 Cut profiles 45 degrees for external corners.

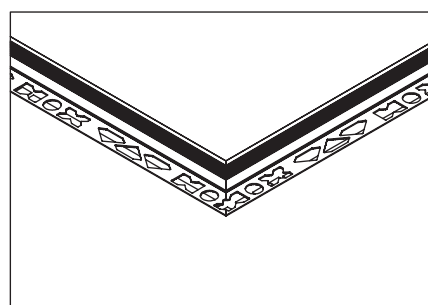


6 Align the profiles at the external corners and place them into the joint.

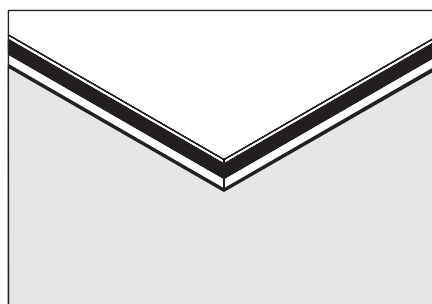


7 Place the carpet to the profile.

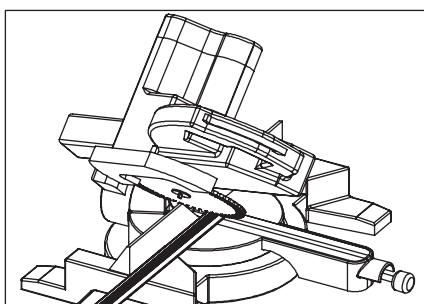

8 Cut profiles 45 degrees for internal corners.

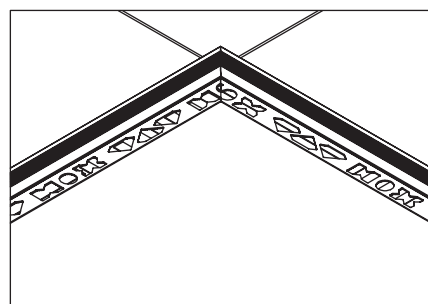

9 Align the profiles at the internal corners and place them into the joint.

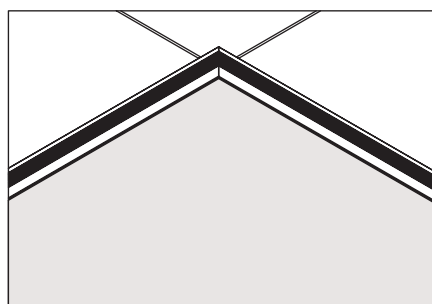

10 Place the carpet to the profile.