

MOX Systems - τεχνική τεκμηρίωση

assembly-manual-mps-yd-en.pdf

Τεχνική μετάφραση: συμβουλευτείτε τα πρωτότυπα σχέδια και τις σελίδες αναφοράς για διαστάσεις.

Πηγή σελίδα 1

ΟΔΗΓΟΣ ΣΥΝΑΡΜΟΛΟΓΗΣΗΣ Mps-Yd

Επιλέξτε το σωστό προφίλ ανάλογα με το πάχος του δαπέδου.

2 Εφαρμόστε την ένωση και τοποθετήστε την άγκυρα των προφίλ ανάλογα.

3 Πιέστε το προφίλ μέχρι να στερεωθεί στον σύνδεσμο.

4 Εφαρμόστε αρμό στα σημεία όπου θα τοποθετηθεί το δάπεδο.

5 Τοποθετήστε και ευθυγραμμίστε το δάπεδο με το προφίλ.


6 Κόψτε προφίλ 45 μοίρες για γωνίες.

7 Ευθυγραμμίστε τα προφίλ στις γωνίες και πιέστε τα στην ένωση. 41-21-01-8


8 Τοποθετήστε και ευθυγραμμίστε το δάπεδο με το προφίλ.

Σελίδα 1/1


Πρωτότυπα σχέδια και σελίδες αναφοράς

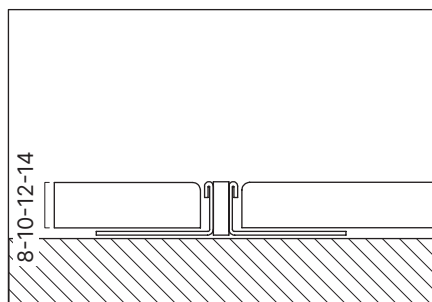


1 Pick the correct profile according to the flooring thickness.

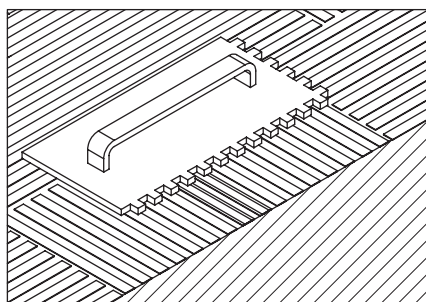


2 Apply joint and place the profiles anchor accordingly.

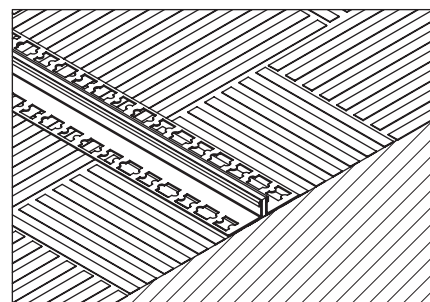


3 Press the profile until it is fixed to the joint.

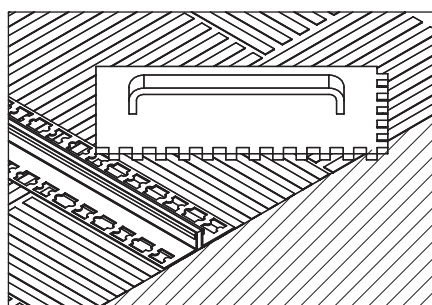


4 Apply joint to the places where the flooring will be placed.

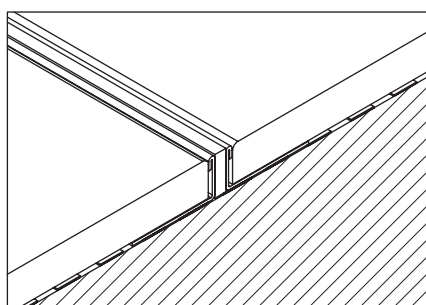


5 Place and align the flooring to the profile.

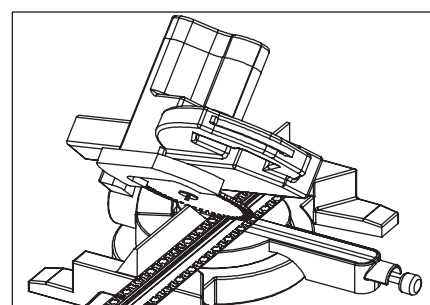

6 Cut profiles 45 degrees for corners.

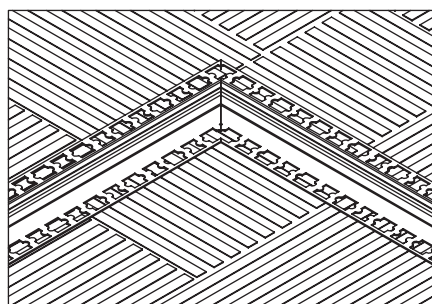

7 Align the profiles at the corners and press them into the joint.

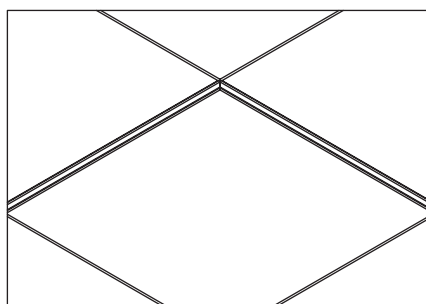

8 Place and align the flooring to the profile.