

MOX Systems - τεχνική τεκμηρίωση

assembly-manual-revio-en.pdf

Τεχνική μετάφραση: συμβουλευτείτε τα πρωτότυπα σχέδια και τις σελίδες αναφοράς για διαστάσεις.

Πηγή σελίδα 1

ΟΔΗΓΟΣ ΣΥΝΑΡΜΟΛΟΓΗΣΗΣ Revio

Εφαρμογή με κόλλα

- 1 Εφαρμόστε σιλικόνη ή αρμό στο προφίλ.
- 2 Στερεώστε το προφίλ στο πάτωμα και πιέστε το.
- 3 Τοποθετήστε το χαλί στο προφίλ.

Εφαρμογή με βίδα


- 11 Στερεώστε το προφίλ με βίδες.
- 2 Τοποθετήστε το χαλί στο προφίλ.

Köşe Birleşimleri


- 1 Κόψτε προφίλ 45 μοιρών για εσωτερικές γωνίες.
- 2 Ευθυγραμμίστε τα προφίλ στις εσωτερικές γωνίες και τοποθετήστε τα στην ένωση.
- 3 Τοποθετήστε το χαλί στο προφίλ.
- 4 Κόψτε προφίλ 45 μοιρών για εξωτερικές γωνίες.
- 5 Ευθυγραμμίστε τα προφίλ στις εξωτερικές γωνίες και τοποθετήστε τα στην ένωση.
- 6 Τοποθετήστε το χαλί στο προφίλ.

Πρωτότυπα σχέδια και σελίδες αναφοράς


Application with Adhesive

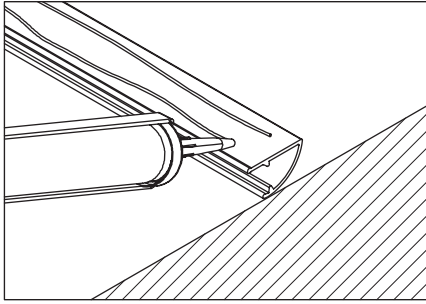

1 Apply silicone or joint to the profile.

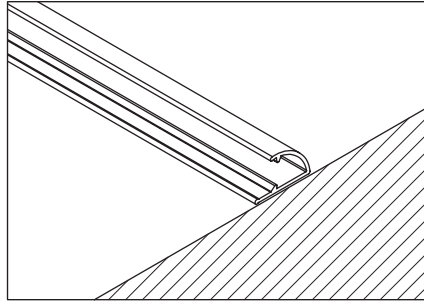


2 Fix the profile to the floor and press it.

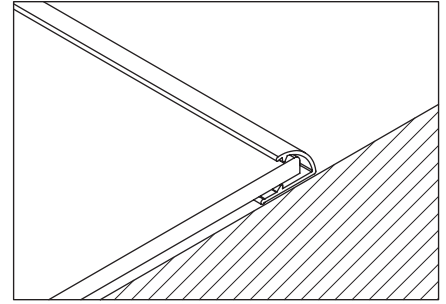


3 Place the carpet to the profile.

Application with Screw

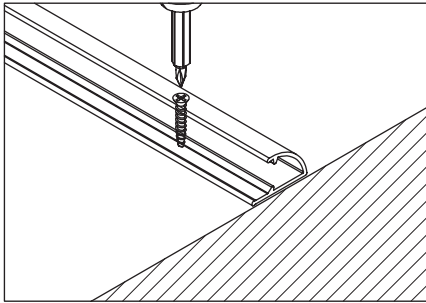


1 Fix the profile with screws.

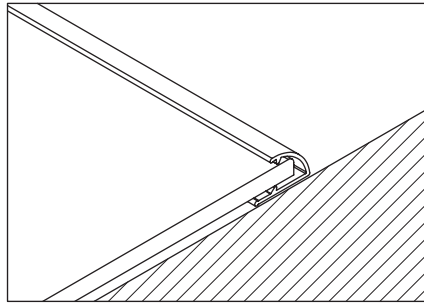


2 Place the carpet to the profile.


Köşe Birleşimleri

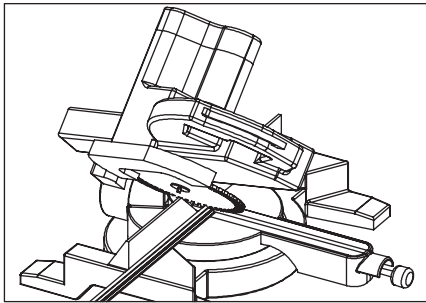


1 Cut profiles 45 degrees for internal corners.

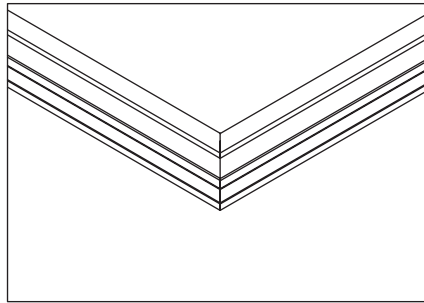


2 Align the profiles at the internal corners and place them into the joint.

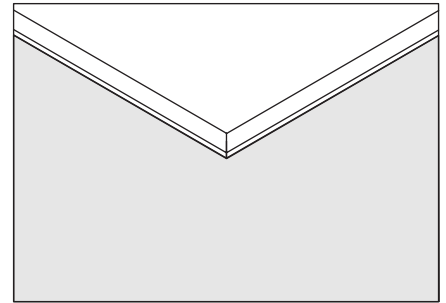


3 Place the carpet to the profile.

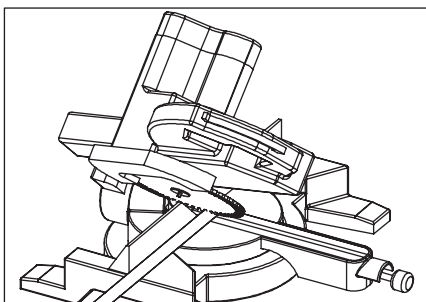

4 Cut profiles 45 degrees for external corners.

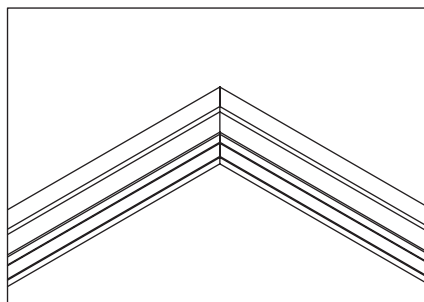

5 Align the profiles at the external corners and place them into the joint.

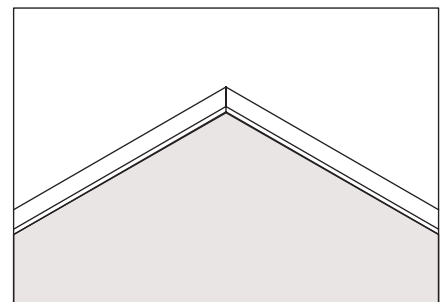

6 Place the carpet to the profile.