

MOX Systems - τεχνική τεκμηρίωση

assembly-manual-round-fix-en.pdf

Τεχνική μετάφραση: συμβουλευτείτε τα πρωτότυπα σχέδια και τις σελίδες αναφοράς για διαστάσεις.


Πηγή σελίδα 1

ΟΔΗΓΟΣ ΣΥΝΑΡΜΟΛΟΓΗΣΗΣ Round-Fix


- 1 Επιλέξτε το σωστό προφίλ ανάλογα με το πάχος του πλακιδίου.
- 2 Εφαρμόστε την ένωση και τοποθετήστε την άγκυρα των προφίλ ανάλογα.
- 3 Πιέστε το προφίλ μέχρι να στερεωθεί στον σύνδεσμο.
- 4 Εφαρμόστε αρμό στα σημεία που θα τοποθετηθούν τα κεραμικά.
- 5 Τοποθετήστε τα πλακάκια στο προφίλ, φροντίζοντας οι άκρες τους να ταιριάζουν στο προφίλ και να είναι στο ίδιο επίπεδο.
- 6 Κόψτε δύο προφίλ στις 45 μοίρες για γωνιακές ενώσεις.
- 7 Ευθυγραμμίστε τα προφίλ στις εσωτερικές γωνίες και πιέστε τα στην ένωση. 10
- 8 Τοποθετήστε τα πλακάκια στο προφίλ, φροντίζοντας οι άκρες τους να ταιριάζουν στο προφίλ και να είναι στο ίδιο επίπεδο.

Σελίδα 1/1


Πρωτότυπα σχέδια και σελίδες αναφοράς

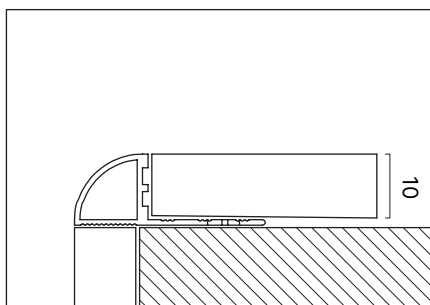


1 Pick the correct profile according to the tile thickness.

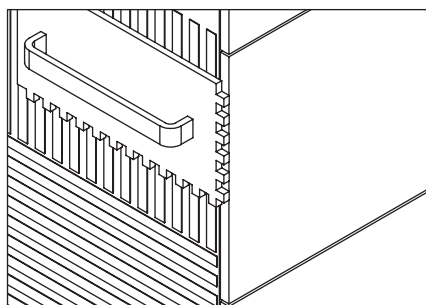


2 Apply joint and place the profiles anchor accordingly.

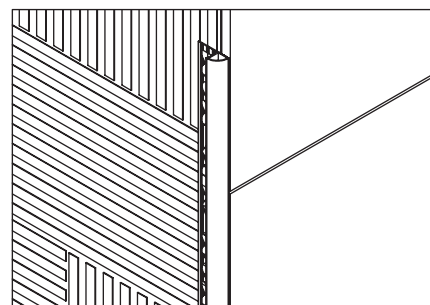


3 Press the profile until it is fixed to the joint.

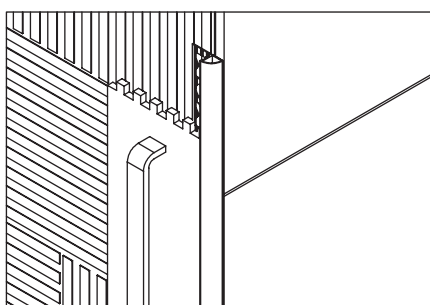


4 Apply joint to the places where the ceramics will be placed.

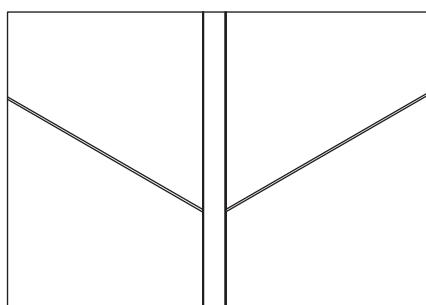


5 Place the tiles on the profile, making sure that their edges fit the profile and are flush.

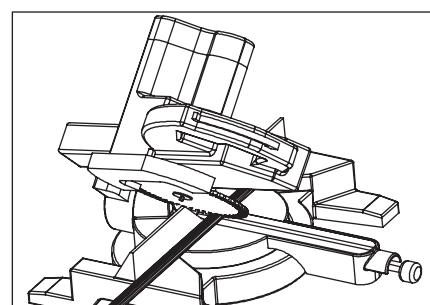

6 Cut two profiles at 45 degrees for corner joints.

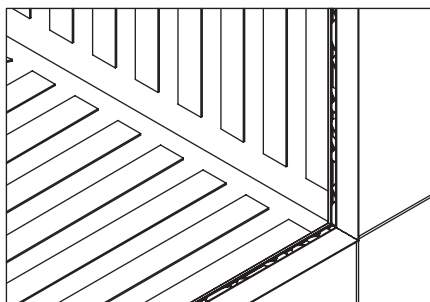

7 Align the profiles at the internal corners and press them into the joint.

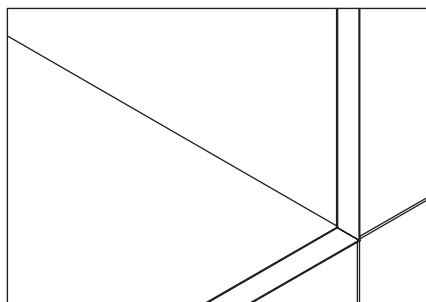

8 Place the tiles on the profile, making sure that their edges fit the profile and are flush.