

MOX Systems - τεχνική τεκμηρίωση

assembly-manual-visio-en.pdf

Τεχνική μετάφραση: συμβουλευτείτε τα πρωτότυπα σχέδια και τις σελίδες αναφοράς για διαστάσεις.


Πηγή σελίδα 1

ΟΔΗΓΟΣ ΣΥΝΑΡΜΟΛΟΓΗΣΗΣ Visio


- 1 Επιλέξτε το σωστό προφίλ ανάλογα με το πάχος του δαπέδου.
- 2 Εφαρμόστε την ένωση και τοποθετήστε την άγκυρα των προφίλ ανάλογα.
- 3 Πιέστε το προφίλ μέχρι να στερεωθεί στον σύνδεσμο.
- 4 Τοποθετήστε το χαλί στο προφίλ.
- 5 Κόψτε προφίλ 45 μοιρών για εξωτερικές γωνίες.
- 6 Ευθυγραμμίστε τα προφίλ στις εξωτερικές γωνίες και τοποθετήστε τα στην ένωση.
- 7 Τοποθετήστε το χαλί στο προφίλ.
- 8 Κόψτε προφίλ 45 μοιρών για εσωτερικές γωνίες.
- 9 Ευθυγραμμίστε τα προφίλ στις εσωτερικές γωνίες και τοποθετήστε τα στην ένωση.
- 10 Τοποθετήστε το χαλί στο προφίλ. 6 8

Σελίδα 1/1


Πρωτότυπα σχέδια και σελίδες αναφοράς

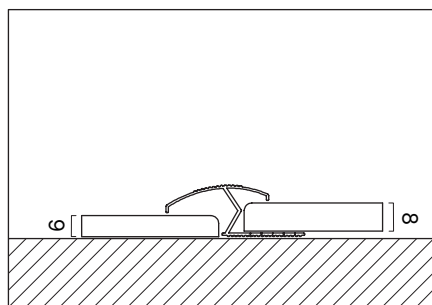


1 Pick the correct profile according to the flooring thickness.

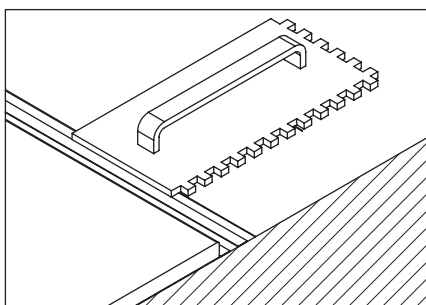


2 Apply joint and place the profiles anchor accordingly.

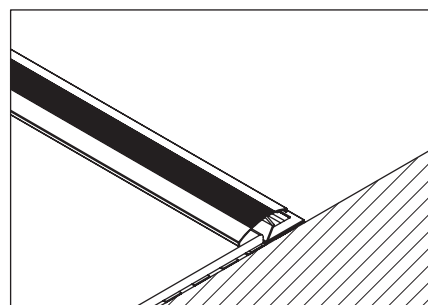


3 Press the profile until it is fixed to the joint.

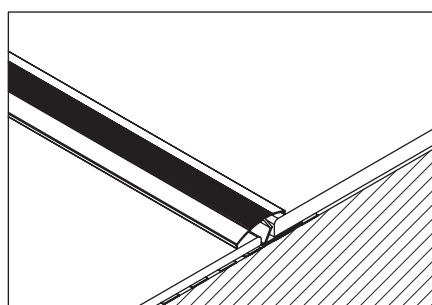


4 Place the carpet to the profile.

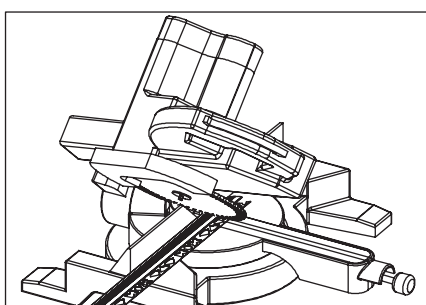


5 Cut profiles 45 degrees for external corners.

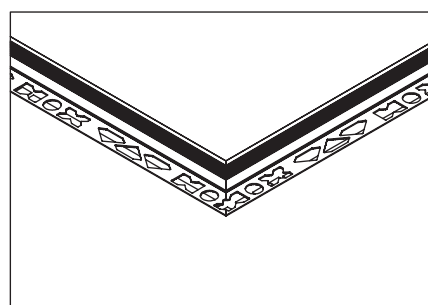


6 Align the profiles at the external corners and place them into the joint.

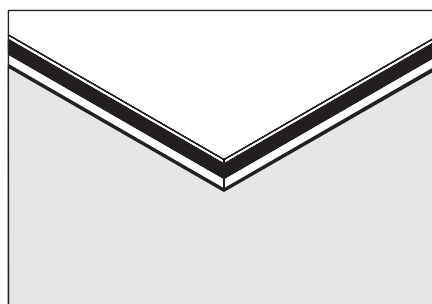


7 Place the carpet to the profile.

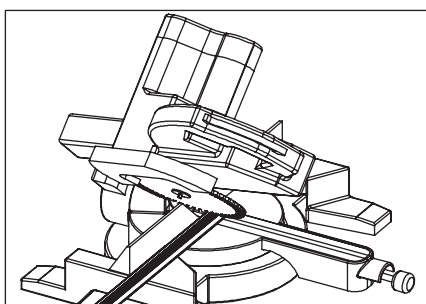

8 Cut profiles 45 degrees for internal corners.

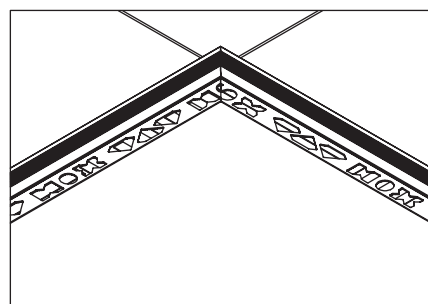

9 Align the profiles at the internal corners and place them into the joint.

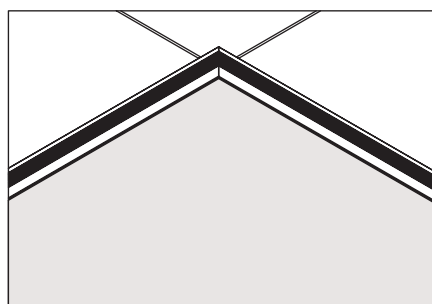

10 Place the carpet to the profile.