

Sistemas MOX - documentación técnica

assembly-manual-mps-brd-en.pdf

Traducción técnica: consulte los dibujos originales y las páginas de referencia para conocer las dimensiones.

Página fuente 1

GUÍA DE MONTAJE MPS-BRD

Elija el perfil correcto según el espesor de la baldosa.

2 Colocar el perfil entre las baldosas.

3 Corte los perfiles a 45 grados para las esquinas exteriores.

4 Colocar el perfil entre las baldosas en las esquinas exteriores.

Asegúrese de que los perfiles estén alineados. 41-21-01-8


5 Corte los perfiles a 45 grados para las esquinas internas.

6 Colocar el perfil entre las baldosas en las esquinas interiores.


Asegúrese de que los perfiles estén alineados.

Página 1/1


Dibujos originales y páginas de referencia.

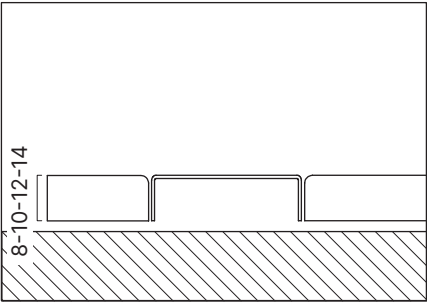


1 Pick the correct profile according to the tile thickness.

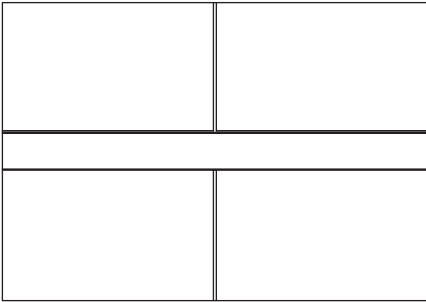


2 Place the profile between the tiles.

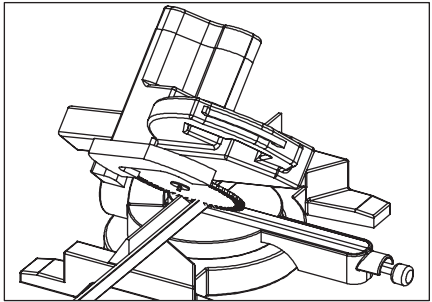


3 Cut profiles 45 degrees for external corners.

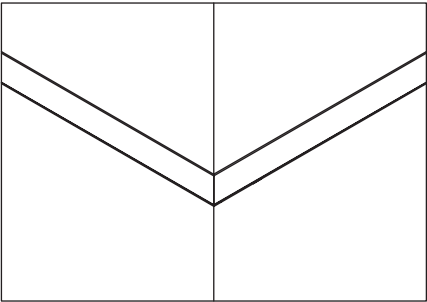

4 Place the profile between the tiles in external corners. Make sure the profiles are aligned.

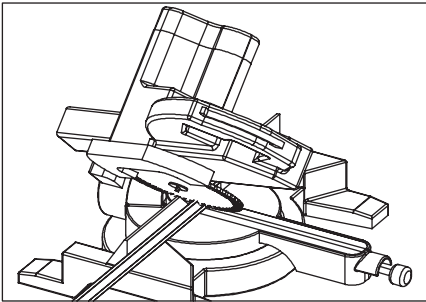

5 Cut profiles 45 degrees for internal corners.

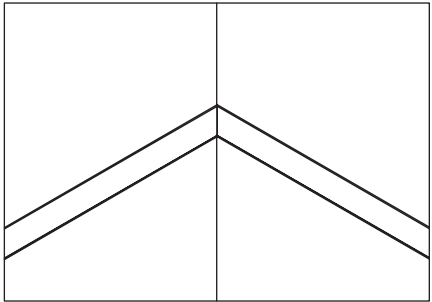

6 Place the profile between the tiles in internal corners. Make sure the profiles are aligned.