

Sistemas MOX - documentación técnica

assembly-manual-revio-en.pdf

Traducción técnica: consulte los dibujos originales y las páginas de referencia para conocer las dimensiones.

Página fuente 1

GUÍA DE MONTAJE DE Revio

Aplicación con adhesivo

- 1 Aplicar silicona o junta al perfil.
- 2 Fijar el perfil al suelo y presionarlo.
- 3 Colocar la alfombra al perfil.

Aplicación con tornillo


- 11 Fijar el perfil con tornillos.
- 2 Colocar la alfombra al perfil.

Köşe Birleşimleri


- 1 Corte los perfiles a 45 grados para las esquinas internas.
- 2 Alinee los perfiles en las esquinas internas y colóquelos en la junta.
- 3 Colocar la alfombra al perfil.
- 4 Corte los perfiles a 45 grados para las esquinas exteriores.
- 5 Alinee los perfiles en las esquinas exteriores y colóquelos en la junta.
- 6 Colocar la alfombra al perfil.

Dibujos originales y páginas de referencia.


Application with Adhesive

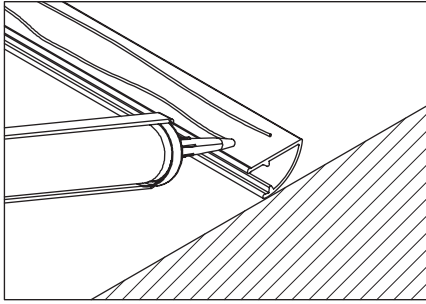

1 Apply silicone or joint to the profile.

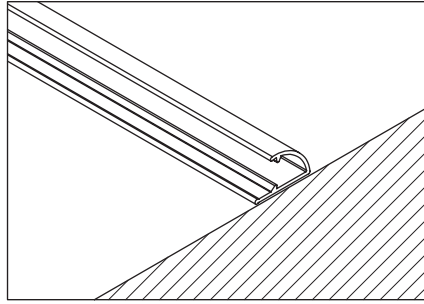


2 Fix the profile to the floor and press it.

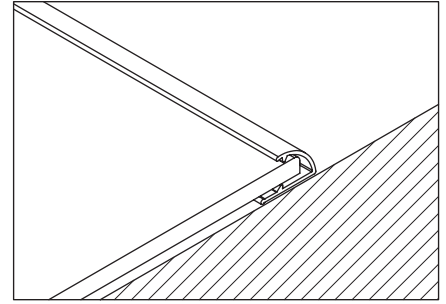


3 Place the carpet to the profile.

Application with Screw

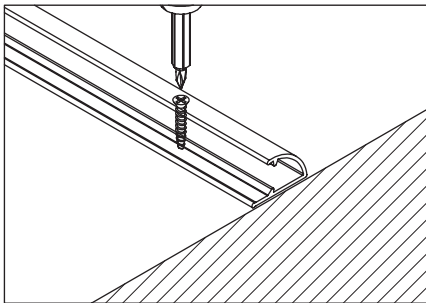


1 Fix the profile with screws.

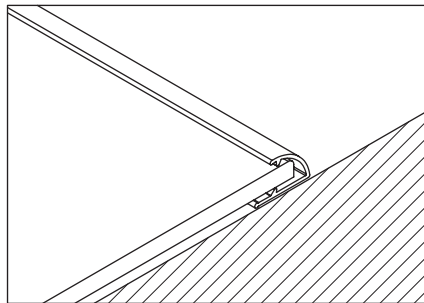


2 Place the carpet to the profile.


Köşe Birleşimleri

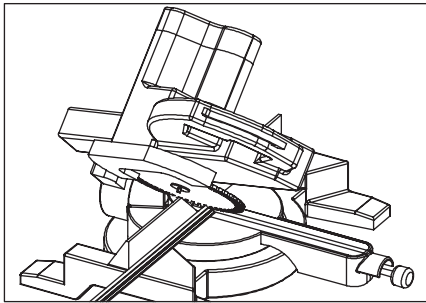


1 Cut profiles 45 degrees for internal corners.

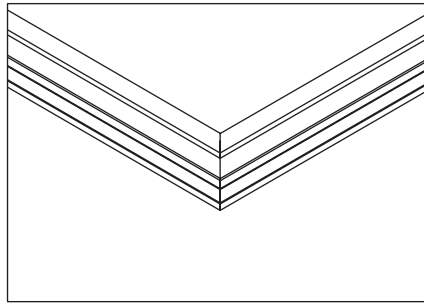


2 Align the profiles at the internal corners and place them into the joint.

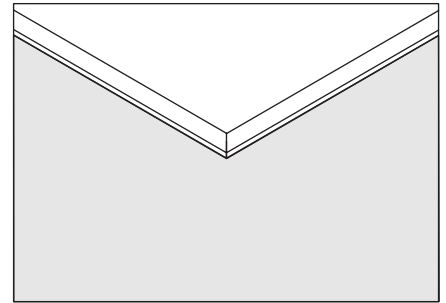


3 Place the carpet to the profile.

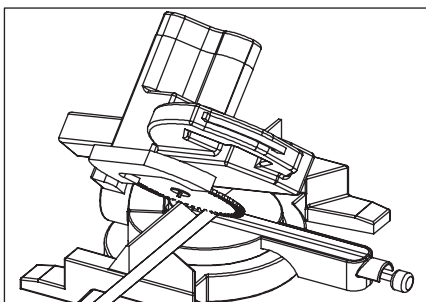

4 Cut profiles 45 degrees for external corners.

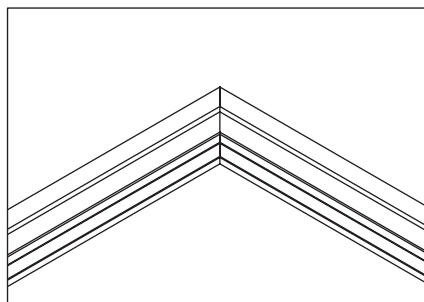

5 Align the profiles at the external corners and place them into the joint.

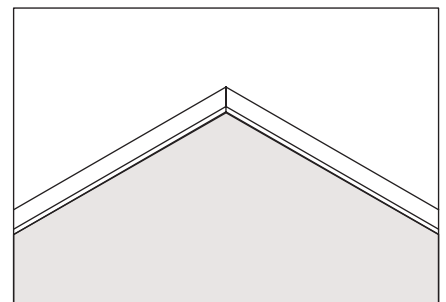

6 Place the carpet to the profile.