

Sistemas MOX - documentación técnica

assembly-manual-round-fix-en.pdf

Traducción técnica: consulte los dibujos originales y las páginas de referencia para conocer las dimensiones.


Página fuente 1

GUÍA DE MONTAJE Round-Fix

- 1 Elija el perfil correcto según el espesor de la baldosa.
- 2 Aplicar junta y colocar el anclaje de los perfiles en consecuencia.
- 3 Presionar el perfil hasta fijarlo a la junta.
- 4 Aplicar junta en los lugares donde se colocará la cerámica.
- 5 Colocar las baldosas sobre el perfil, asegurándose de que sus cantos encajen con el perfil y queden enrasados.
- 6 Corte dos perfiles a 45 grados para las juntas de esquina.
- 7 Alinee los perfiles en las esquinas interiores y presiónelos en la junta. 10
- 8 Colocar las baldosas sobre el perfil, asegurándose de que sus cantos encajen con el perfil y queden enrasados.

Página 1/1


Dibujos originales y páginas de referencia.

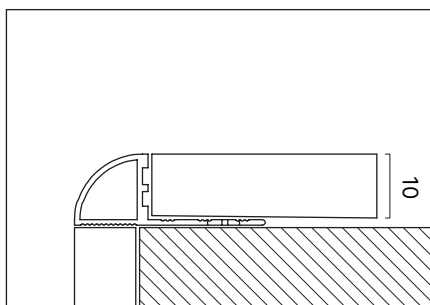


1 Pick the correct profile according to the tile thickness.




2 Apply joint and place the profiles anchor accordingly.

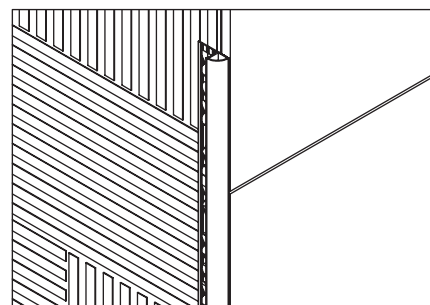


3 Press the profile until it is fixed to the joint.

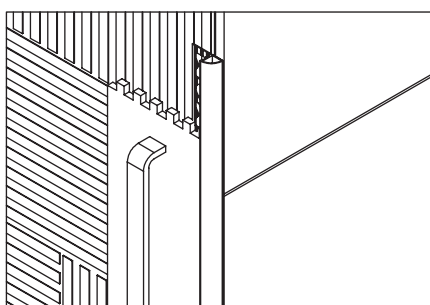


4 Apply joint to the places where the ceramics will be placed.

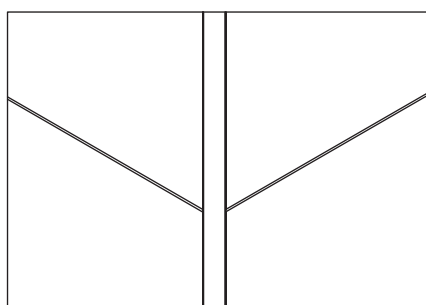


5 Place the tiles on the profile, making sure that their edges fit the profile and are flush.

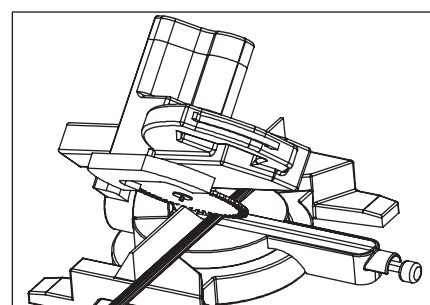

6 Cut two profiles at 45 degrees for corner joints.

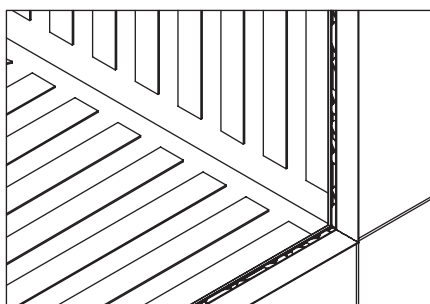

7 Align the profiles at the internal corners and press them into the joint.

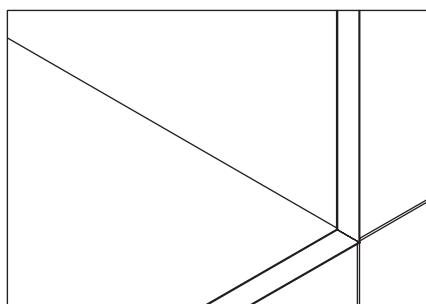

8 Place the tiles on the profile, making sure that their edges fit the profile and are flush.