

Sistemas MOX - documentación técnica

assembly-manual-velo-en.pdf

Traducción técnica: consulte los dibujos originales y las páginas de referencia para conocer las dimensiones.


Página fuente 1

GUÍA DE MONTAJE Velo


- 1 Apriete la silicona formando dos líneas hacia la parte posterior del perfil.
- 2 Pega el perfil que exprimiste la silicona a la pared y presiona.
- 3 Pega con cinta adhesiva el perfil que pegaste a la pared a intervalos de 50 cm.
- 4 Retire con atención las bandas que están en el perfil al día siguiente.
- 5 Asegúrese de que el perfil quede firmemente pegado a la pared.
- 6 Corte los perfiles a 45 grados para las esquinas exteriores.
- 7 Pegue los perfiles que cortó a 45 grados a la pared de manera que queden cerrados entre sí.
- 8 Asegúrese de que los perfiles cortados a 45 grados estén completamente fijados entre sí en las esquinas externas.
- 9 Corte los perfiles a 45 grados para las esquinas internas.
- 10 Pegue los perfiles que cortó 45 grados a la pared de manera que queden cerrados entre sí.
- 11 Asegúrese de que los perfiles cortados a 45 grados queden fijados entre sí completamente en las esquinas internas.

Página 1/1


Dibujos originales y páginas de referencia.

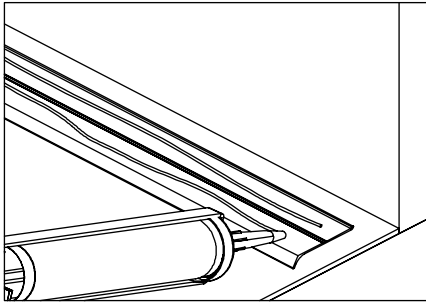


1 Squeeze the silicon in the manner of two lines to the back side of the profile.

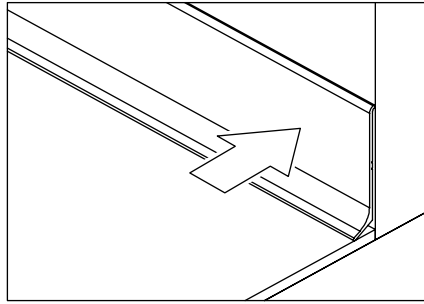


2 Paste the profile that you squeezed the silicon to the wall and press.

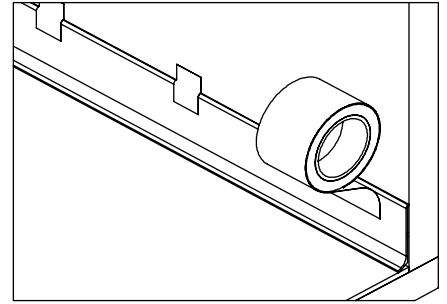


3 Tape the profile that you pasted to the wall at 50cm intervals.

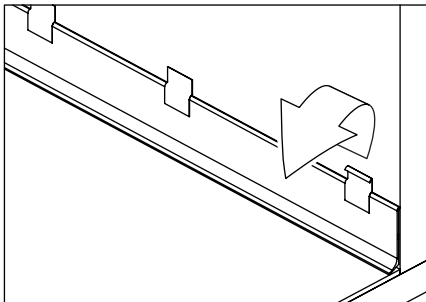


4 Remove the bands that on the profile heedfully the day after.

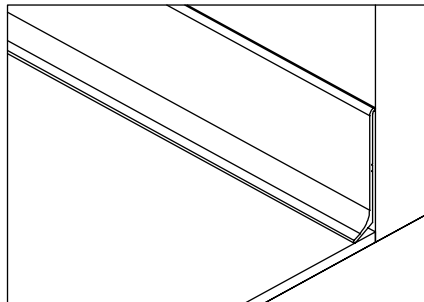


5 Make sure that the profile is stuck to the wall firmly.

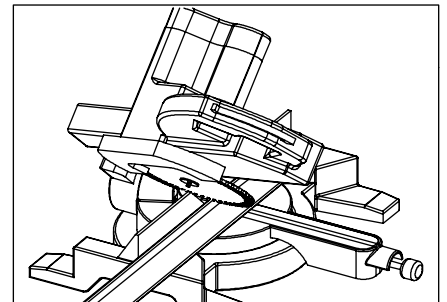


6 Cut profiles 45 degrees for external corners.

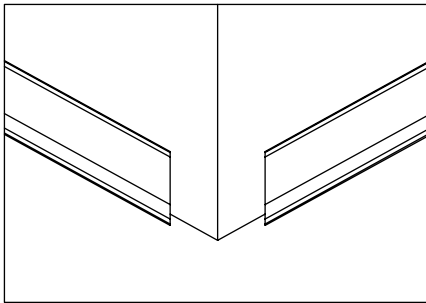


7 Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

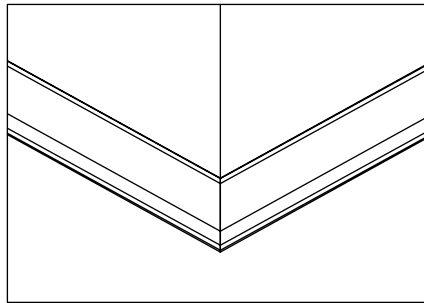


8 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the external corners.

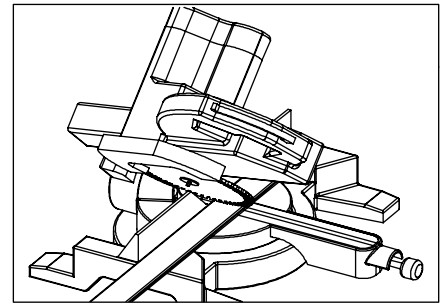

9 Cut profiles 45 degrees for internal corners.

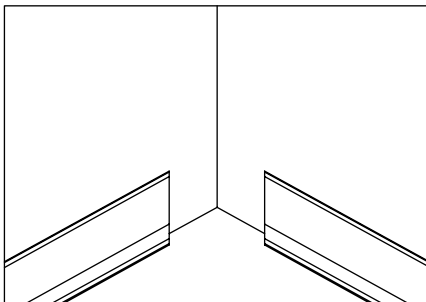

10 Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

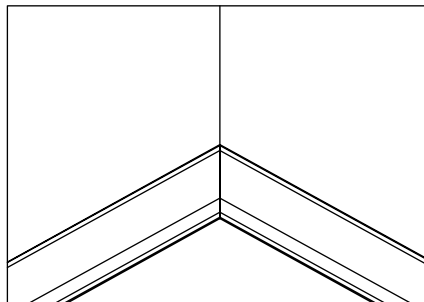

11 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the internal corners.