

Sistemas MOX - documentación técnica

assembly-manual-visio-en.pdf

Traducción técnica: consulte los dibujos originales y las páginas de referencia para conocer las dimensiones.


Página fuente 1

GUÍA DE MONTAJE DE Visio


- 1 Elija el perfil correcto según el espesor del suelo.
- 2 Aplicar junta y colocar el anclaje de los perfiles en consecuencia.
- 3 Presionar el perfil hasta fijarlo a la junta.
- 4 Colocar la alfombra al perfil.
- 5 Corte los perfiles a 45 grados para las esquinas exteriores.
- 6 Alinee los perfiles en las esquinas exteriores y colóquelos en la junta.
- 7 Colocar la alfombra al perfil.
- 8 Corte los perfiles a 45 grados para las esquinas internas.
- 9 Alinee los perfiles en las esquinas internas y colóquelos en la junta.
- 10 Colocar la alfombra al perfil. 6 8

Página 1/1


Dibujos originales y páginas de referencia.

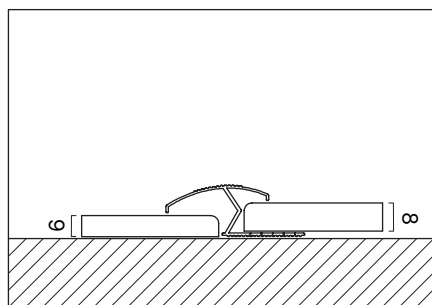


1 Pick the correct profile according to the flooring thickness.

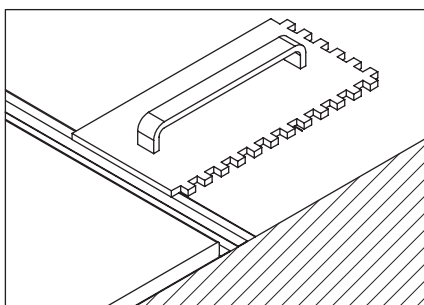


2 Apply joint and place the profiles anchor accordingly.

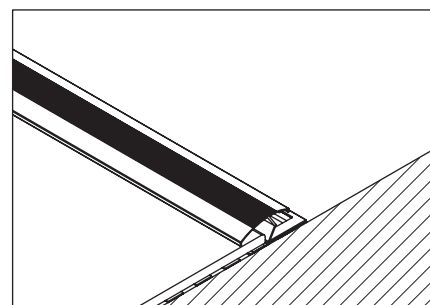


3 Press the profile until it is fixed to the joint.

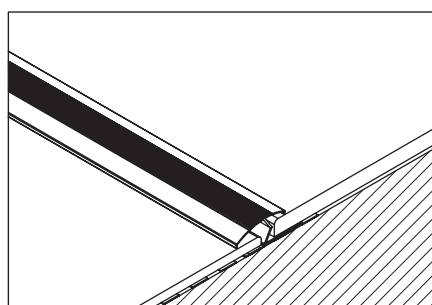


4 Place the carpet to the profile.

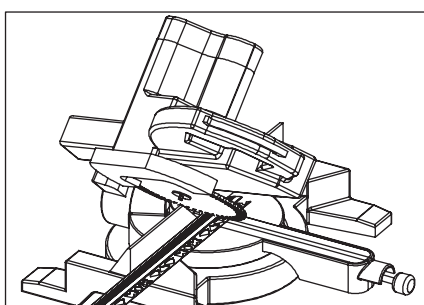


5 Cut profiles 45 degrees for external corners.

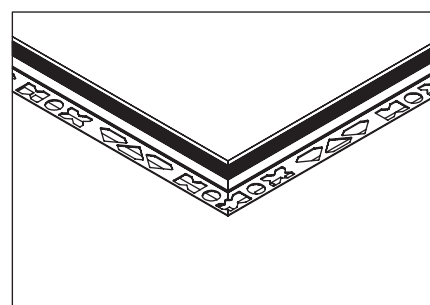


6 Align the profiles at the external corners and place them into the joint.

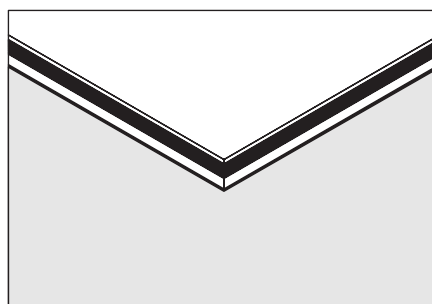


7 Place the carpet to the profile.

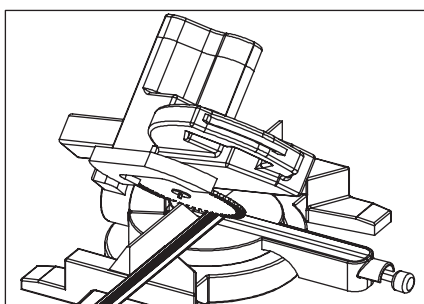

8 Cut profiles 45 degrees for internal corners.

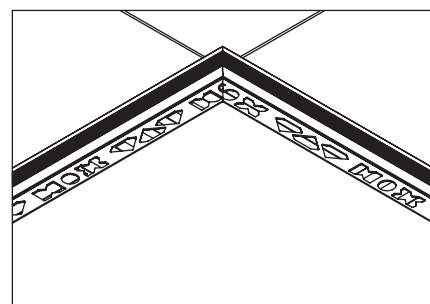

9 Align the profiles at the internal corners and place them into the joint.

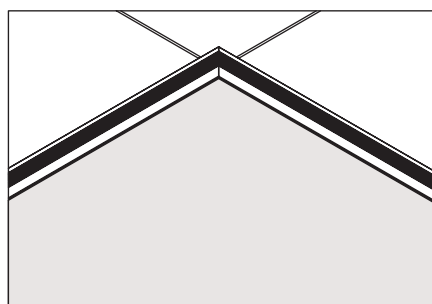

10 Place the carpet to the profile.