

MOX Systems - tehniline dokumentatsioon

assembly-manual-crispo-en.pdf

Tehniline tõlge: vaadake mõõtmeid originaaljoonistelt ja viitelehtedelt.


Lähtelevt 1

Crispo KOOSTAMISE JUHEND


- 1 Asetage seinakinnitusvahendid 50 cm vahedega ja märkige sein kruviaukudest.
- 2 Puurige juba märgitud punktid.
- 3 Asetage puuritud aukudesse õiged tüüblid vastavalt seina materjalile.
- 4 Kruvige seinakinnitustööriistad 50 cm vahedega puuritavatesse kohtadesse.
- 5 Paigaldage profiil seinakinnitustööriistadele nagu pildil.
- 6 Veenduge, et profiilnaelad ja kinnitusvahendi naelad oleksid üksteisega täielikult ühendatud ning veenduge, et profiilitald on põrandale kinnitatud.
- 7 Lõika profiilid välisnurkade jaoks 45 kraadi.
- 8 Kinnitage seinakinnitustööriistad nii, et need suletakse nurkadesse, ja pange sellele 45 kraadi nurga all lõigatud profiilid kokku.
- 9 Veenduge, et 45 kraadi lõigatud profiilid oleksid välisnurkadest täielikult üksteise külge kinnitatud.
- 10 Lõika profiilid 45 kraadi sisenurkade jaoks.
- 11 Kinnitage seinakinnitustööriistad nii, et need suletakse nurkadesse, ja pange sellele 45 kraadi nurga all lõigatud profiilid kokku.
- 12 Veenduge, et 45 kraadi lõigatud profiilid oleksid sisenurkadest täielikult üksteise külge kinnitatud.

Lehekülg 1/1


Originaaljoonised ja viitelehed

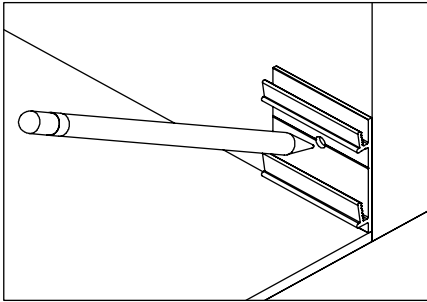


1 Place the wall fixation tools at 50cm intervals and mark the wall from the screw holes.

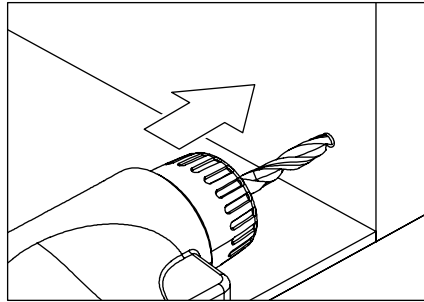


2 Drill the points that you have already marked.

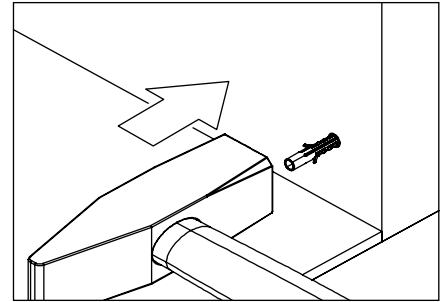


3 Place the correct dowels according to the wall material into the drilled holes.

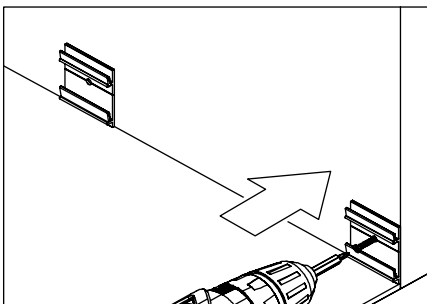


4 Screw the wall fixation tools to the places that are drilled at 50cm intervals.

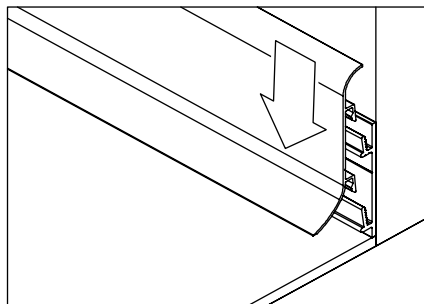


5 Assemble the profile on the wall fixation tools just like in the picture.

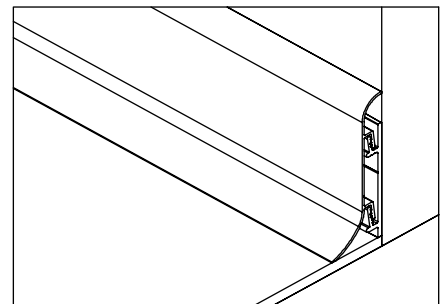


6 Make sure that the profile nails and the fixation tool's nails are completely connected to each other and be sure that the profile sole is fixed to the floor.

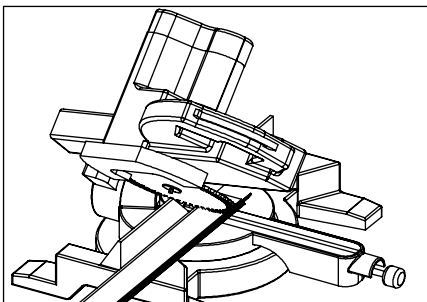


7 Cut profiles 45 degrees for external corners.

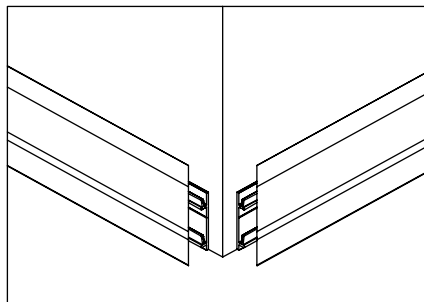


8 Affix the wall fixation tools in the manner that will be closed to the corners and assemble the profiles that you cut 45 degrees on it.

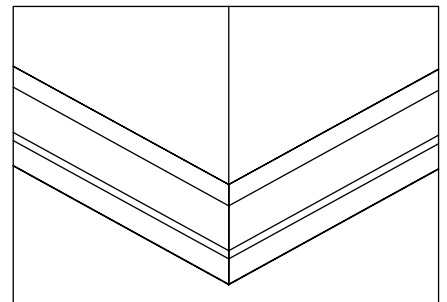


9 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the external corners.

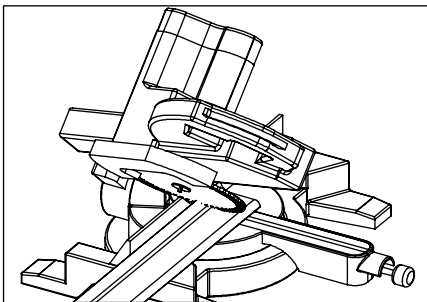

10 Cut profiles 45 degrees for internal corners.

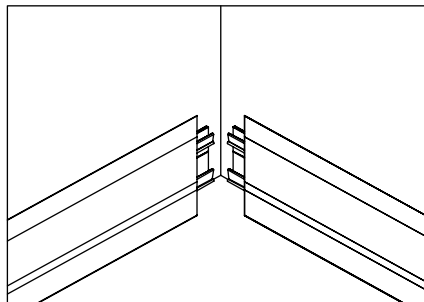

11 Affix the wall fixation tools in the manner that will be closed to the corners and assemble the profiles that you cut 45 degrees on it.

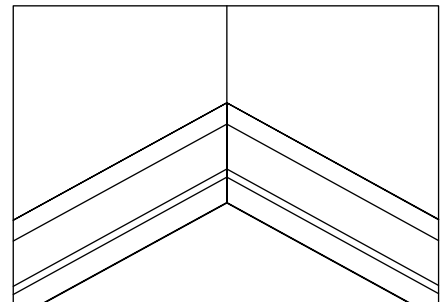

12 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the internal corners.